


Metal Dog Kennel

ASSEMBLY INSTRUCTION

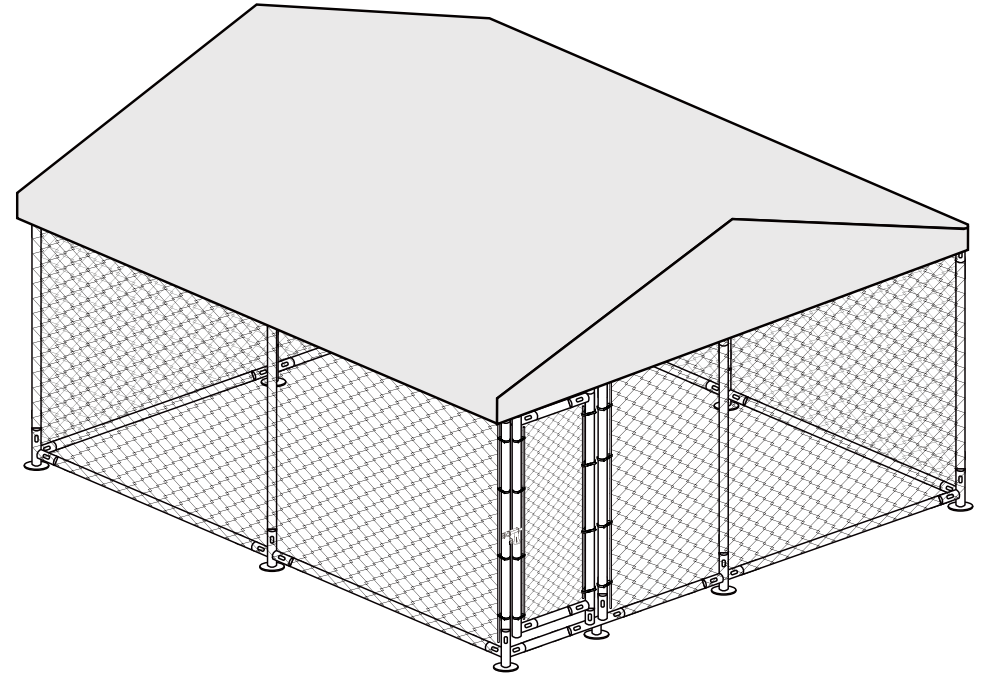

Note:

This item will come with 2 separate boxes, we ship them on the same day but the carrier may deliver them to your door on different days, please kindly wait for more 1-3 business days if you only receive one box. Please make sure you get 1x Box (A), 1x Box(B) before assembly.

Packing Slip:

Box A: H I J O


Box B: ① ② ③ ④ ⑤ ⑧ ⑨ ⑩ ⑪

D1 D2 D3 A1 A2 B C D E F G K M U P Q R S T




please read instructions completely before assembly.

After the chain link mesh installation,just roll the raised wire of the barbed wire inward,which will not puncture the rain cloth.

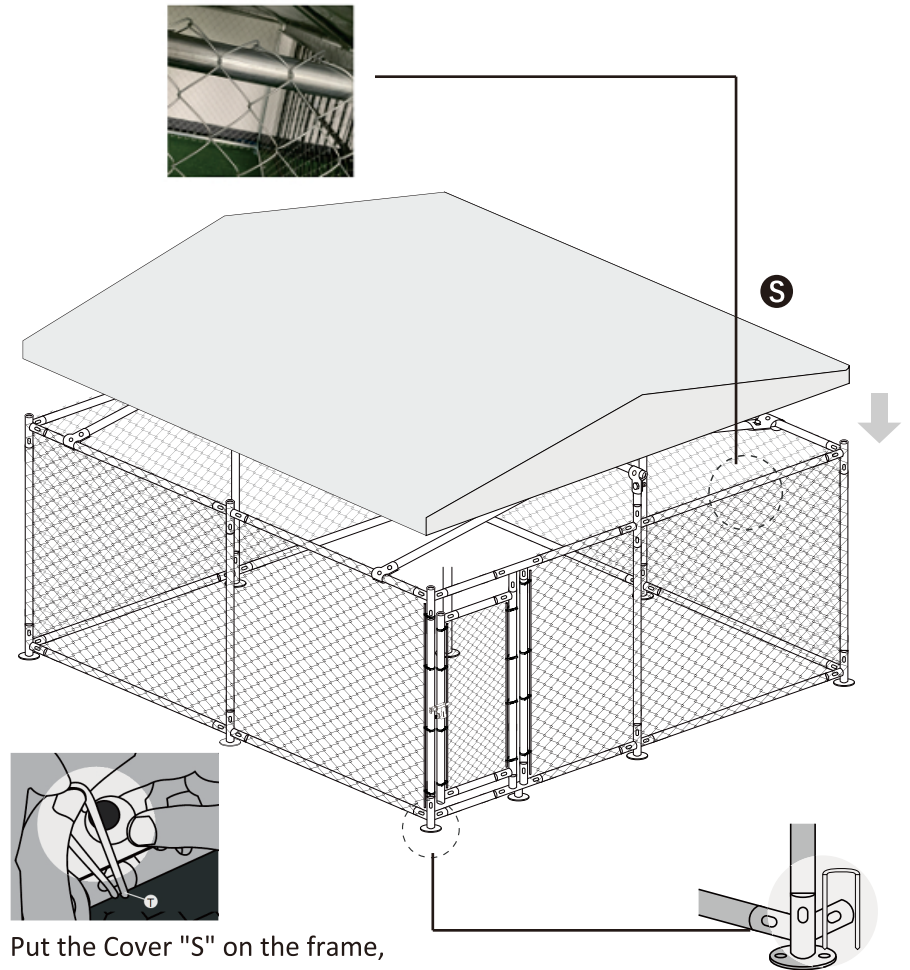

Put the Cover "S" on the frame,
tighten it on the frame with "T"


Put the ground anchor "K" into ground
to make the kennel more stable and durable.

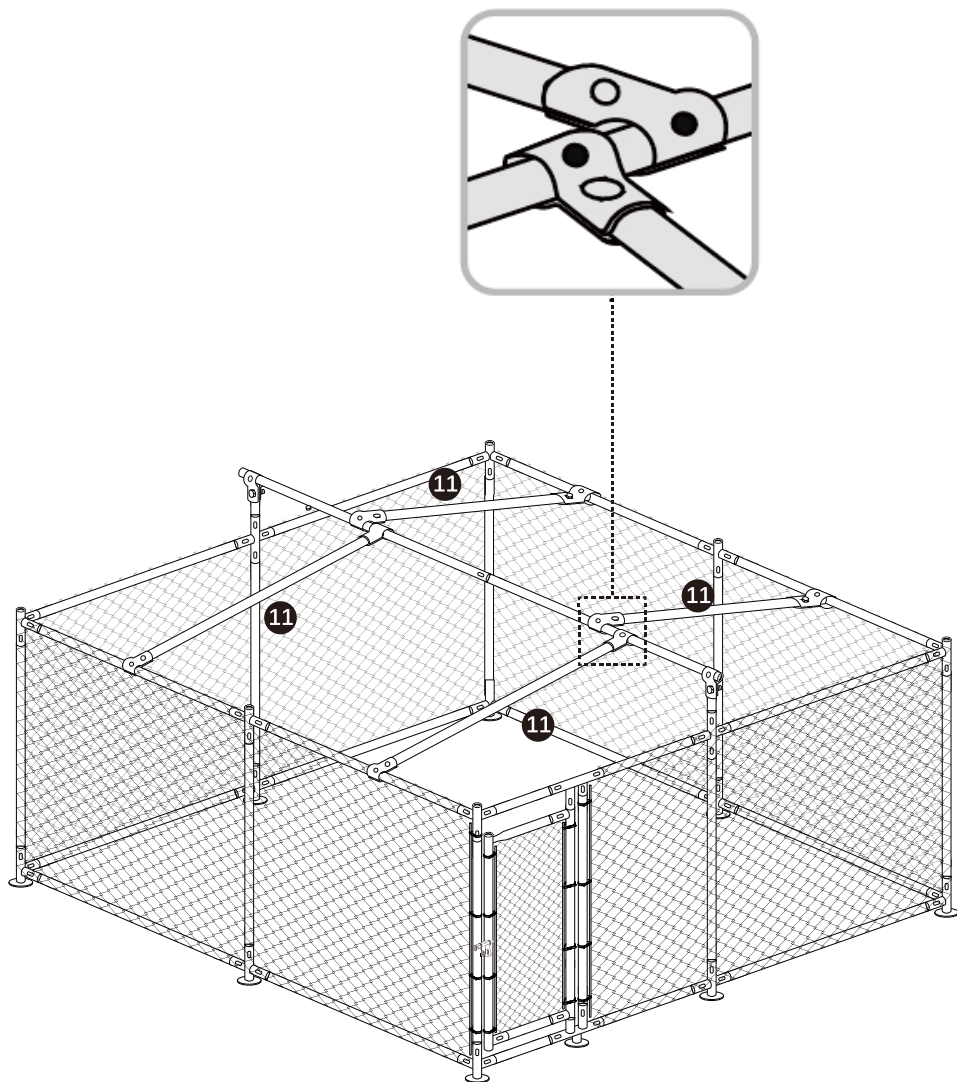

Tools required:




Wrench

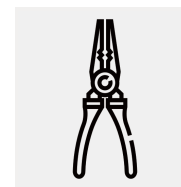




Plier

Note:

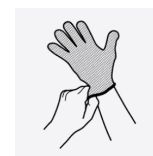


1. Please wear work glove to assemble this item.
2. Teamwork: More partners to complete this item may be more efficient.


PART LIST

No.	Size(mm)	Picture	Qty
①	1410mm (55.51inch)		14
②	1640mm (64.57inch)		8
③	793mm (31.22inch)		2
④	500mm (19.69inch)		2
⑤	450mm (17.72inch)		2
D1	1640mm (64.57inch)		1
D2	1670mm (65.75inch)		1
D3	1640mm (64.57inch)		1
H	DOOR FENCE		1
I	1650mm (64.96inch)		2
J	1550mm (61.02inch)		2
A1			2
A2			2
B			4
C			1
D			4

Note: To fix P and Q with R, please use power tools, it will be simple and labor-saving.

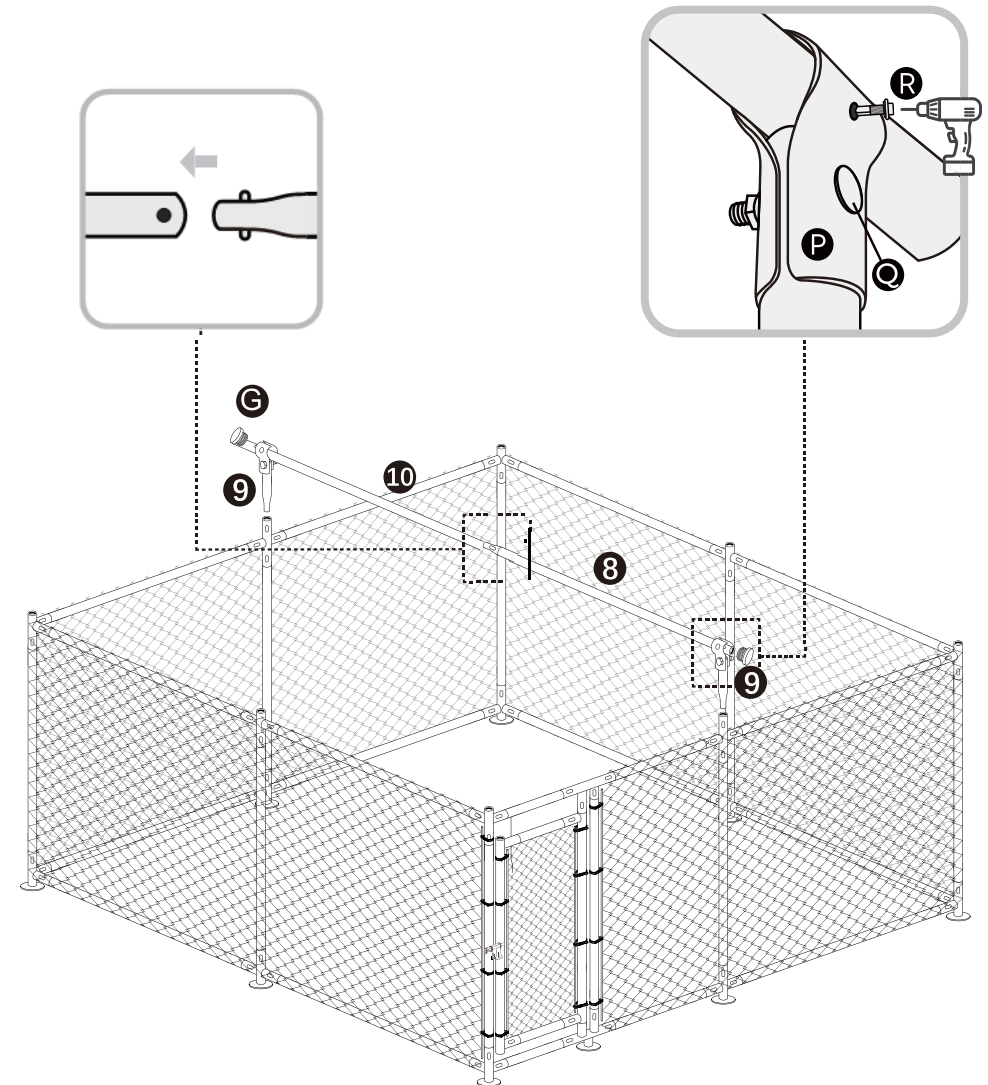

The Roof

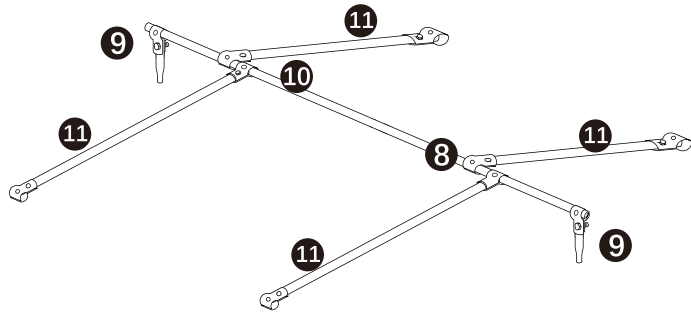

No.	Size	Picture	Qty
E			4
F			1
G			11
K			/
M		x2rolls	/
O	KENNEL FENCE		1

Why no holes were pre-drilled on pipe for screw "R"?

After countless tests, we find that the kennel will be much more stable as the hole being drilled directly by tapping screw "R", instead of pre-drilled a hole for "R" screw which possibly make it unmatched to its pipe.

How to attach screw "R" into pipe?

Please use power tools with 8mm nut driver to attach screw "R" into each pipe, it will be simpler and labor-saving.



Power tools



8mm Nut Driver

PART LIST FOR ROOF


No.	Size	Picture	Qty
⑧	1550mm (61.02inch)		1
⑨	340mm (13.39inch)		2
⑩	1550mm (61.02inch)		1
⑪	1530mm (60.24inch)		4
P			20
Q			10
R			20
S	ROOF COVER		1
T			/

Step 1 - Site preparation


A. Choose a site that is flat and free of foreign objects, toxic matter and pests
For the safety of your pet, protection from the weather should be considered in choosing location

B. Confirm that the dog run configuration

Step 2 - Building the bottom frame

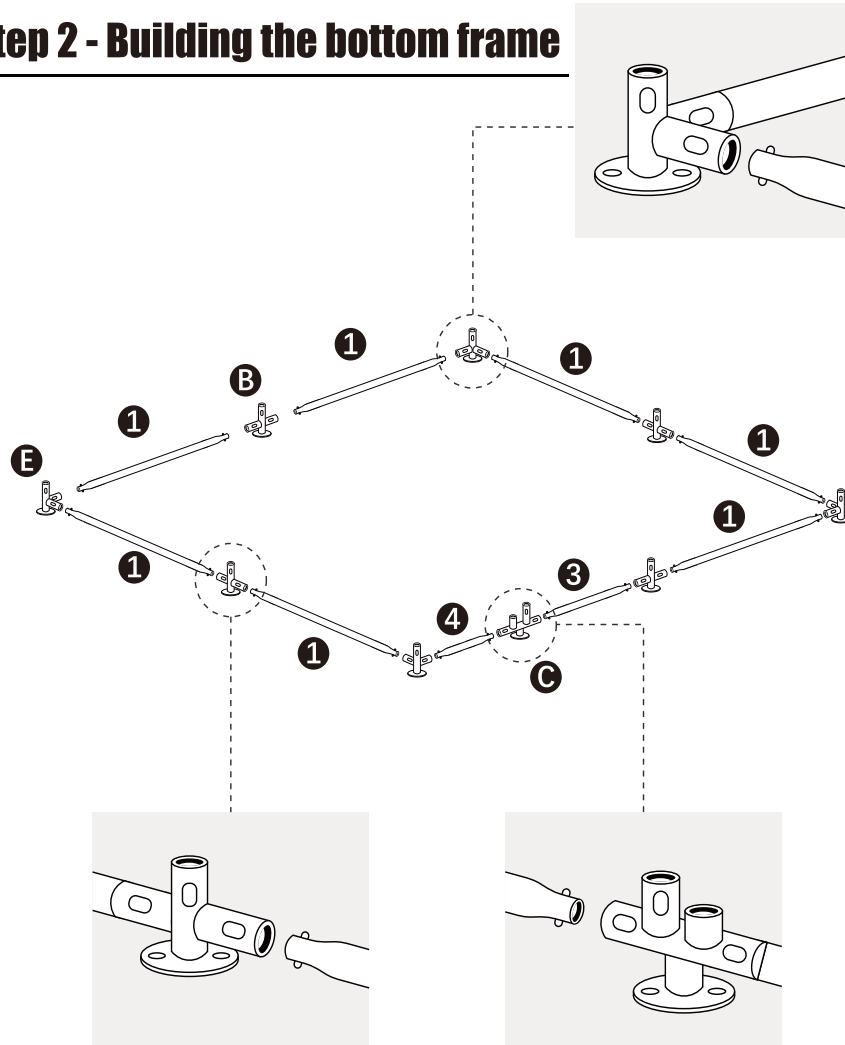


Step 8-Install the plug and nail

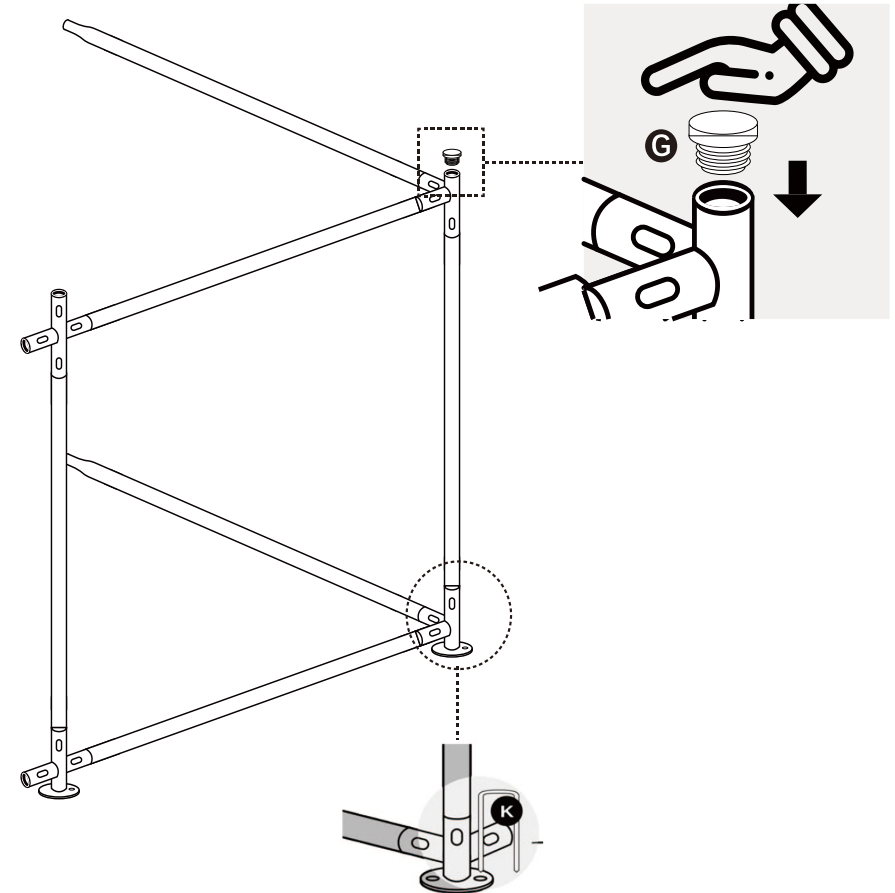


Ground anchor "K" into ground to make the kennel more stable and durable.

Step 6 - Fixing the door locks

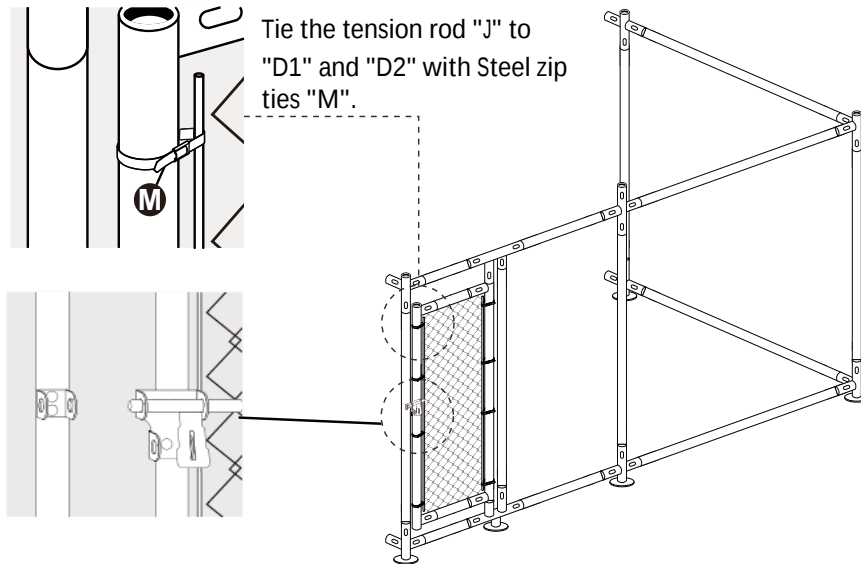

Step 7 - Chain Link Installation


Unroll the chain link mesh around the outside of the kennel frame, pull the chain link tight at each CENTER AND CORNER STAND, as you work your way around the kennel and secure the chain link to the top and bottom rails, Using STEEL WIRE TIES (M) to keep it from sliding back and becoming loose.

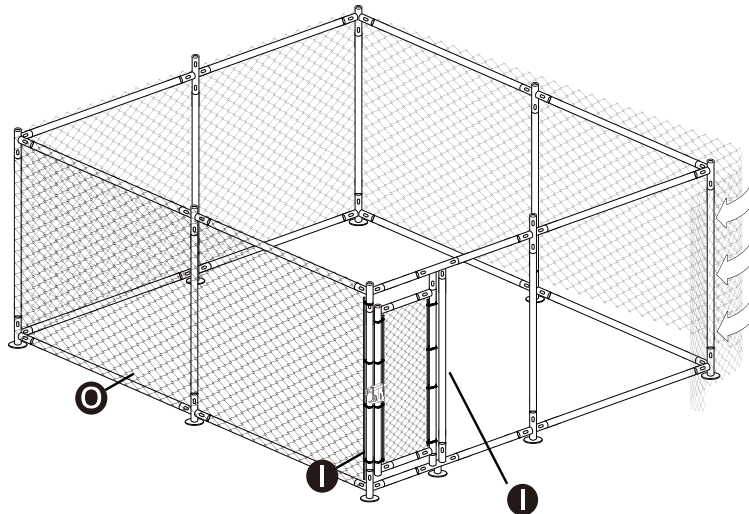

1650mm steel inserted into the net to immobilize net well strong

Step 3 - Fixing the column

NOTE: Please make sure the shorter end is on the top when you insert the tube D3



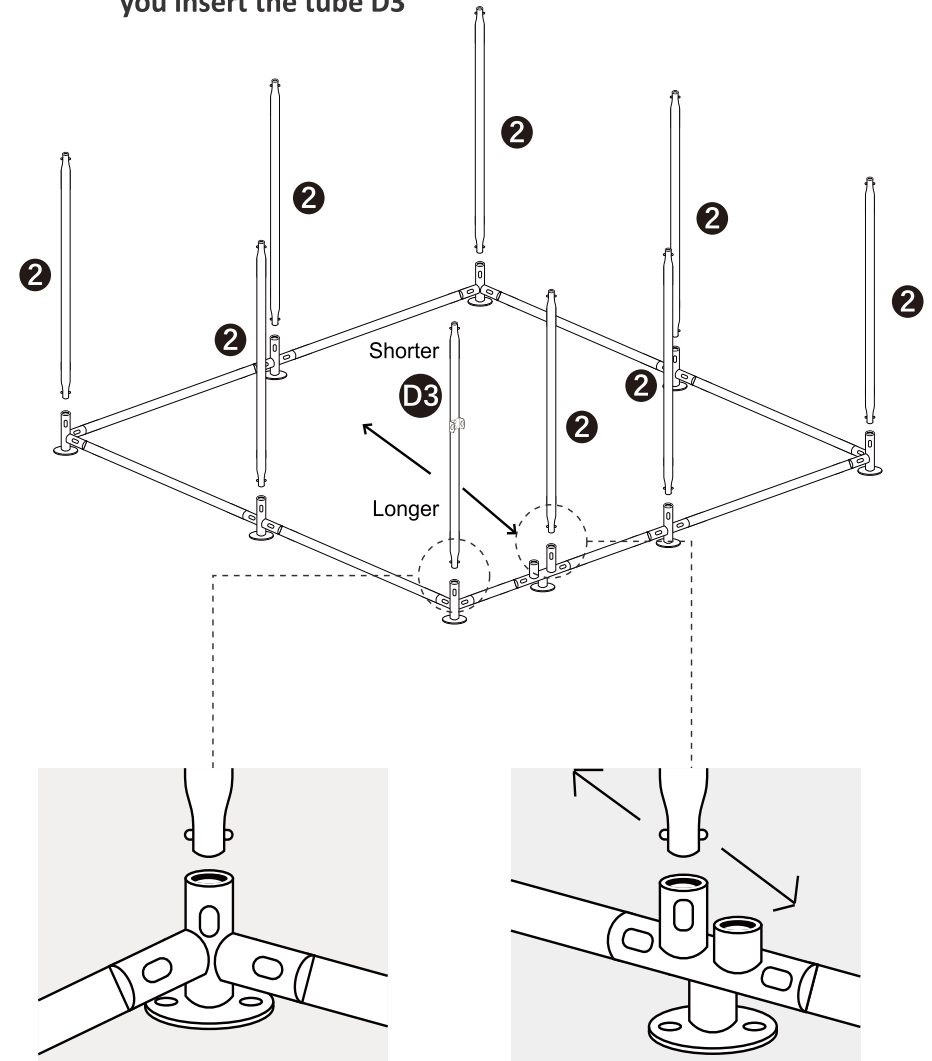


Step 4 - Fixing the door

Note: The Door fence (H) is pre-cut to easily fit the kennel size, however exact length is not always possible. Therefore, one or more chain link pickets may need to be removed to insure proper tension on the mesh. If pickets need to be removed, straighten out the ends of as many pickets as necessary at top and bottom and twist out the picket. (Figure 1)



Figure 1

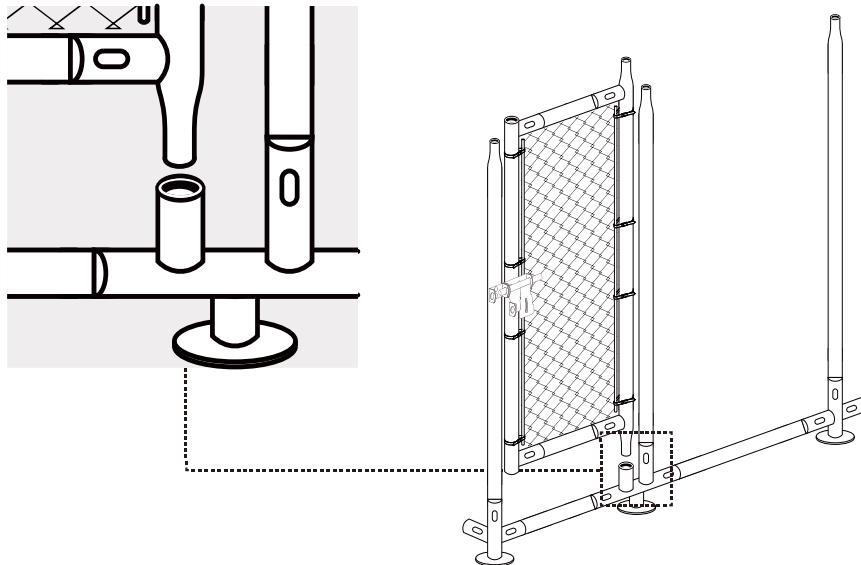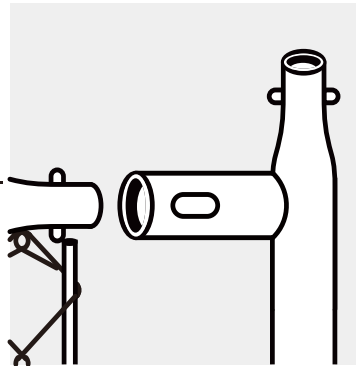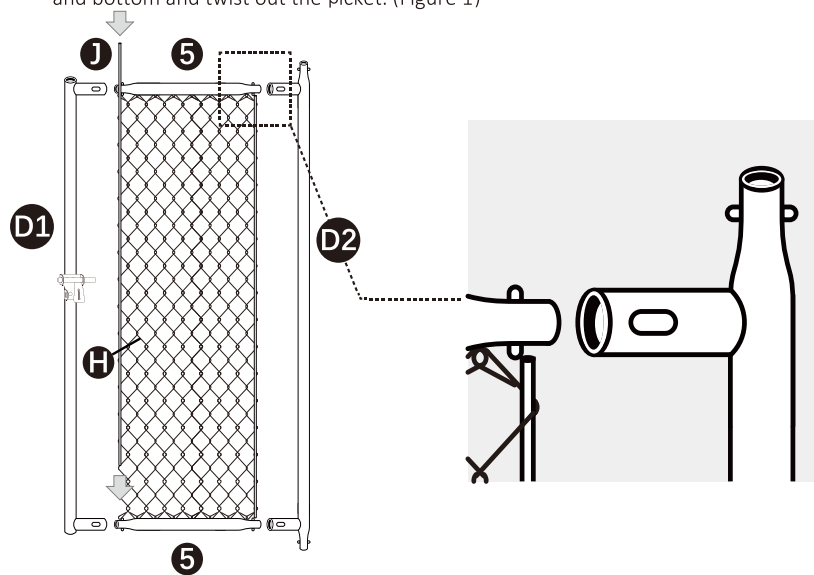

Step 5 - Building the top frame

