


Metal Shed

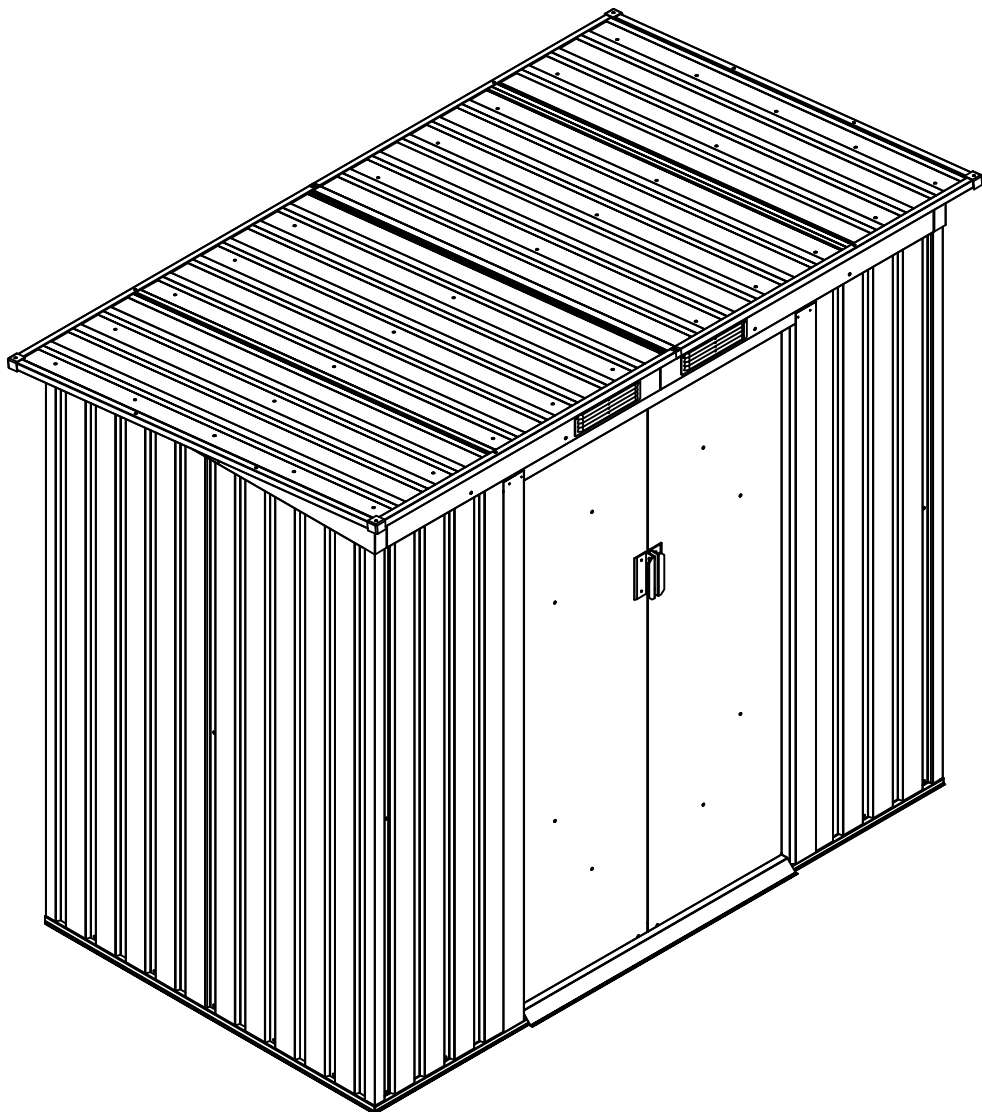

OWNER'S MANUAL /

Instructions for Assembly S2001A



EN: Requires two people and takes 2-3 hours for Installation.

RO: Necesită două persoane și durează 2-3 ore pentru instalare.

HU: Két személy szükséges, a szerelés 2-3 órát vesz igénybe.

Assembly Preparation

Owner's Manual

Please check local building codes regarding footings, location and other requirements before beginning construction.

Assembly instructions:

Reviewing all instructions and the appropriate information before you begin, make sure following the step sequence carefully for successful results.

Flooring base:

A good location for the storage building is a square and level area with good drainage. The base is not included in the kit which may need purchase separately or may construct a foundation and anchoring system of your own. The foundation base should be 10 cm larger than the base rail of the shed (minimum 10cm thickness concrete slab is recommended).


A strong plastic sheet (thickness: at least 150µm) should be placed under the foundation to assist in reducing rising dampness from the soil, thus reducing condensation build up in the shed. Your storage building must be anchored to prevent wind damage.

Parts and Parts List:

Before you start, check to be sure that you have all the necessary parts for your building (refer to the Parts List Page). Do not attempt to assemble the building if parts are missing because any building left partially assembled may be seriously damaged by light winds.

Please tear off the safety protection layer before assembly, keep the part number label if needed.

Tools you need:

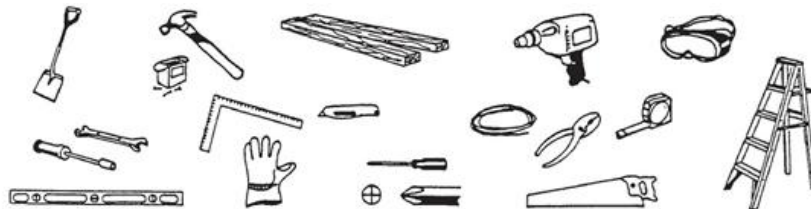

Safety must be put in the No. 1 position:

1. Select a dry and calm day for your assembly. Team works (Two or more people) are required during the assembly. It is also recommended to finish the assembly in a day to avoid damage to the product or missing of some small parts. Keep all small parts (screws etc.) in a bowl so they do not get lost.
2. Wearing safety gloves, eye protection and long sleeves during the assembly to prevent injury. Pay attention to the sharp edge of some parts.
3. Children and pets are not allowed entering into the construction site.
4. Never concentrate your total weight on the roof of the building.
When using a step ladder make sure that it is safe.

Care & Maintenance:

1. Keep the shed clean with soft cloth, use water if necessary.
2. Keep the door tracks clear of dirt and other stuff that prevent them from sliding easily.
3. Clean the snow timely with necessary tools to make sure it is safe to enter into.
4. The shed is not made for living but storing stuff.
5. Please add some oil on the top and bottom door sliding channel to make door slides smoothly.

Pregătirea pentru asamblare

Verificați reglementările locale privind fundațiile, amplasarea și alte cerințe înainte de a începe construcția.

Instrucțiuni de asamblare:

Citiți toate instrucțiunile înainte de a începe. Urmăriți cu atenție pașii pentru un rezultat reușit.

Bază pentru pardoseală:


Alegeți un loc dreptunghiular, nivelat și bine drenat. Baza nu este inclusă în kit. Trebuie să fie cu 10 cm mai mare decât șina de bază și să aibă o grosime minimă de 10 cm (placă de beton).

Folosiți o folie de plastic cu grosime de cel puțin 150micronm sub fundație pentru a reduce umezeala și condensul. Ancorarea este obligatorie pentru a preveni daunele cauzate de vânt.

Piese și unelte:

Verificați toate piesele (consultați lista de piese). Nu începeți dacă lipsesc componente. Îndepărtați stratul protector înainte de asamblare.

Unelte:

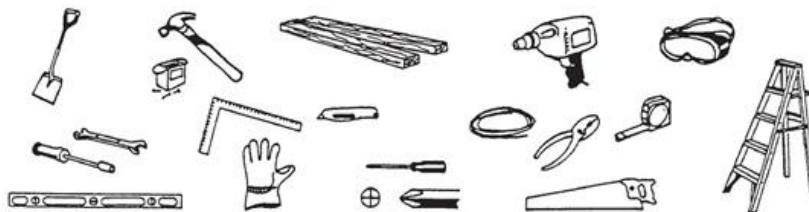

Siguranță:

1. Alegeți o zi uscată și calmă; lucrați cu cel puțin două persoane.
2. Purtați mănuși, ochelari de protecție și mâneci lungi.
3. Țineți copiii și animalele departe.
4. Nu vă sprijiniți complet pe acoperiș. Folosiți o scară stabilă.

Îngrijire și întreținere:

1. Curățați cu o cârpă moale și apă.
2. Mențineți șinele ușilor curate.
3. Îndepărtați zăpada prompt.
4. Căsuța este destinată depozitării, nu locuirii.
5. Lubrifiați șinele de glisare ale ușilor.

Összeszerelés előkészítése

Kérjük, ellenőrizze a helyi építési előírásokat az alapozás, az elhelyezés és más követelmények kapcsán a munkálatok megkezdése előtt.

Összeszerelési útmutató:

Olvassa el figyelmesen az utasításokat a kezdés előtt. Kövesse lépésről lépésre a sorrendet a sikeres eredmény érdekében.

Alap:


Válasszon egy szögletes, sík és jól vízelvezetésű helyet. Az alap nem része a csomagnak. Az alapnak 10cm-rel nagyobbnak kell lennie, mint az alsó sín, ajánlott legalább 10 cm vastag betonlap.

Tegyen le egy legalább 150 micronm vastag műanyag fóliát az alap alá, hogy csökkentse a talajból származó nedvességet és a kondenzációt. A tárolót rögzíteni kell, hogy ne sérüljön meg a szél miatt.

Alkatrészek és szerszámok:

Ellenőrizze az összes alkatrészt (lásd az alkatrészlistát). Ne kezdje el, ha hiányzik valamelyik. Távolítsa el a védőréteget az összeszerelés előtt.

Szerszámok:

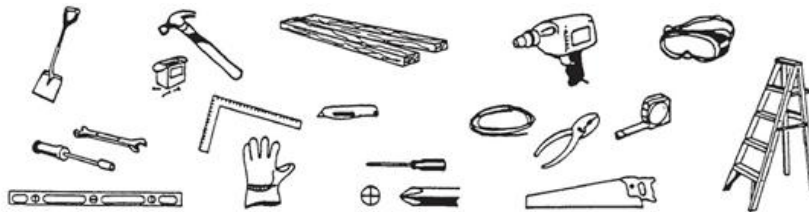


Biztonság:

1. Válasszon száraz, szélcsendes napot, és legalább két személy dolgozzon együtt.
2. Viseljen védőkesztyűt, védőszemüveget és hosszú ujjú ruhát.
3. Tartsa távol a gyerekeket és háziállatokat.
4. Ne terhelje a tetőt teljes testsúllyal. Stabil létrát használjon.


Karbantartás:

1. Tisztítsa meg puha ronggyal és szükség esetén vízzel.
2. Tartsa tisztán az ajtósinéket.
3. Azonnal távolítsa el a havat.
4. A tároló nem lakhatásra, hanem tárolásra való.
5. Kenje meg az ajtó sínjeit, hogy könnyen csússzanak.


Size of S2001A

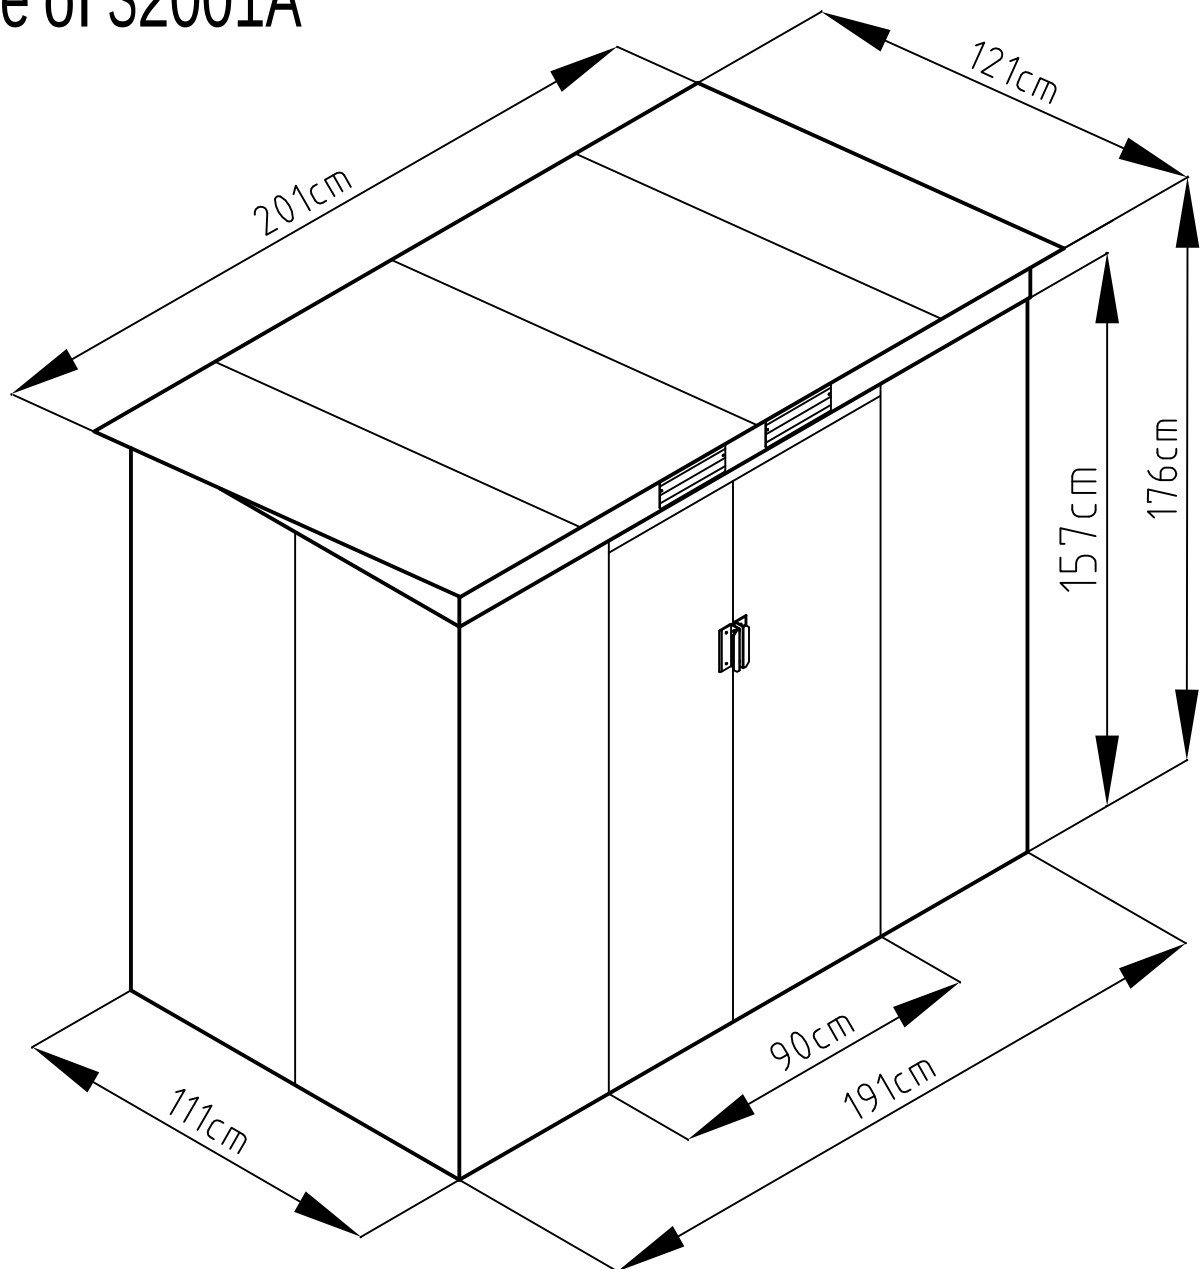

Area of installation requirement:

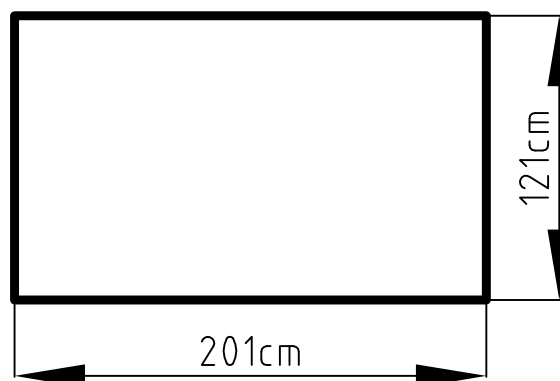

S2001A:

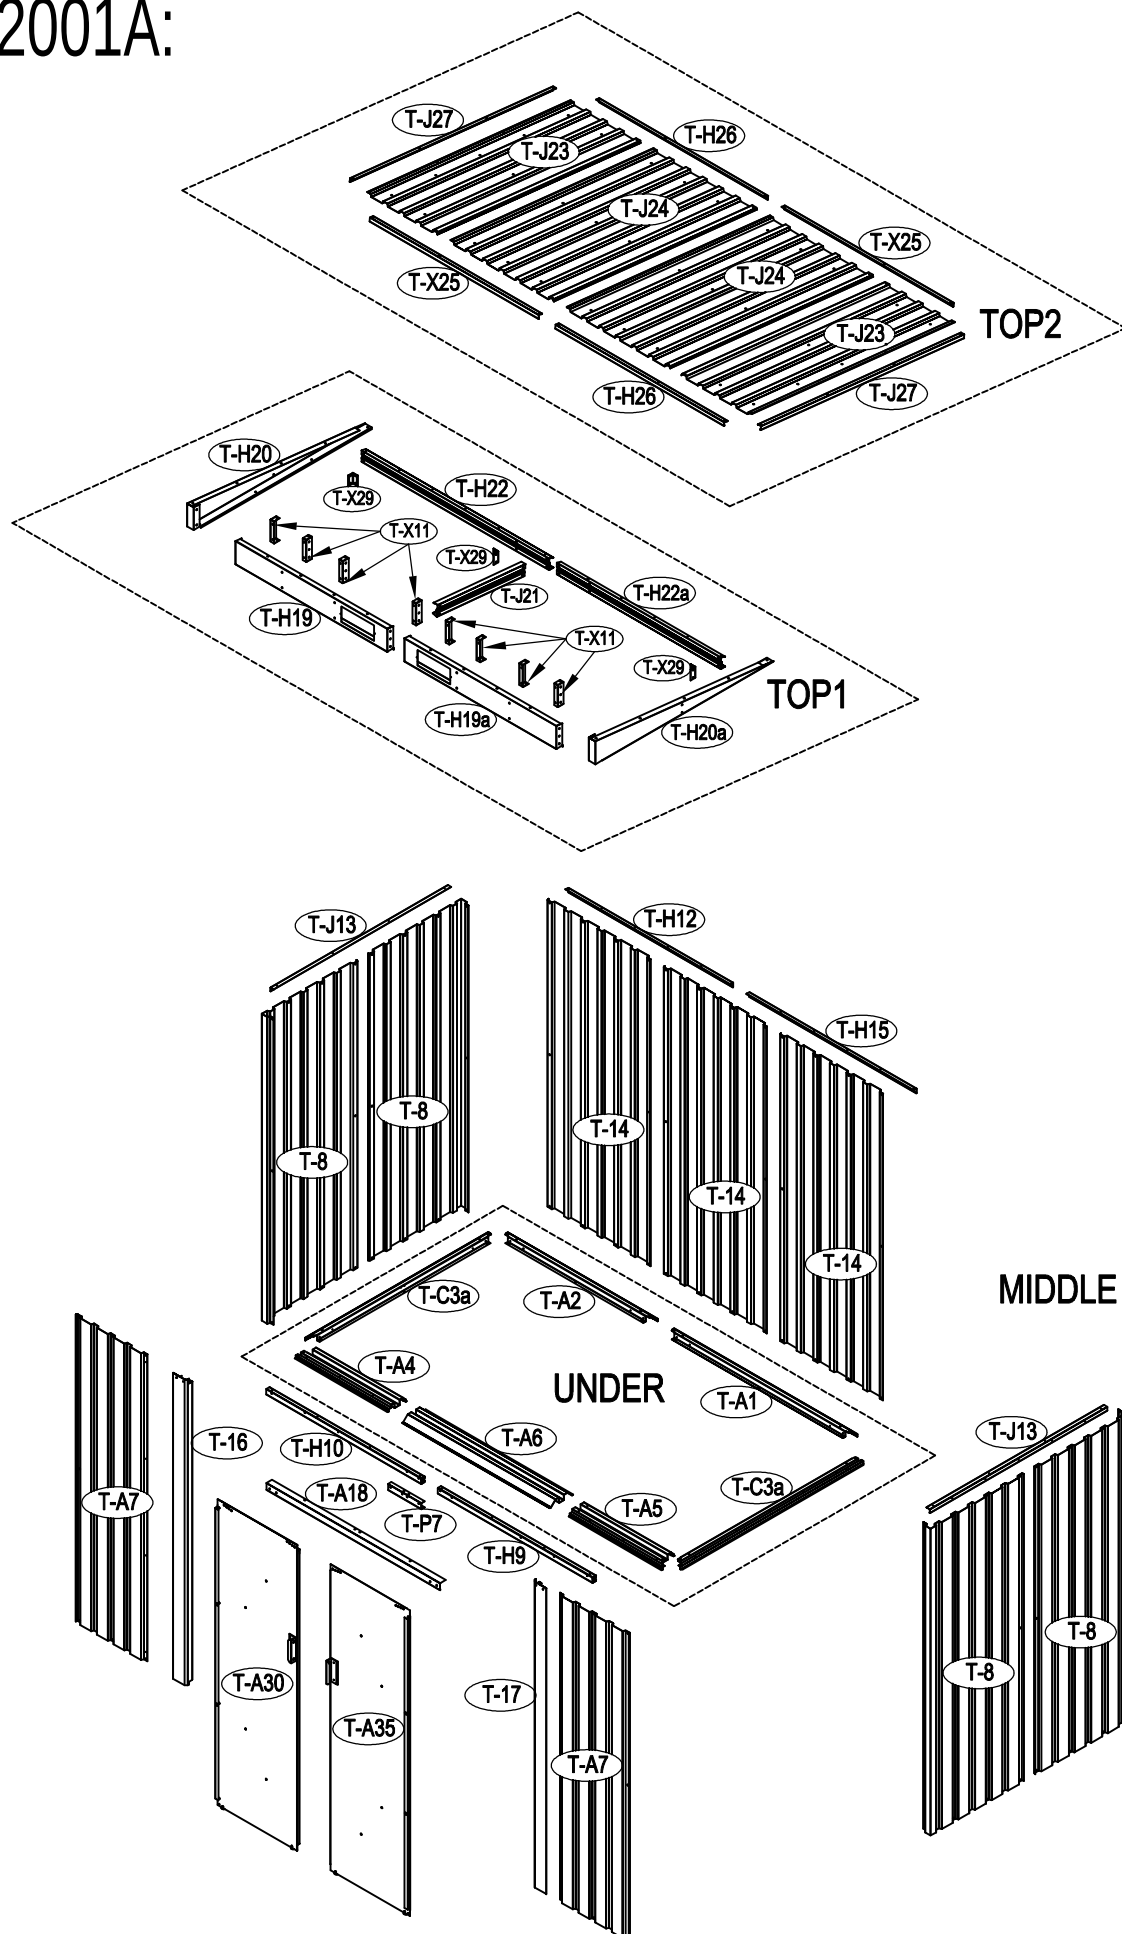

NO.	IMAGE	mm	QTY
UNDER			
T-A1		1102	x1
T-A2		902	x1
T-C3a		1102	x2
T-A4		560	x1
T-A5		560	x1
T-A6		895	x1
MIDDLE			
T-A7		1600	x2
T-8		1600	x4
T-14		1600	x3
T-H9		932	x1
T-H10		932	x1
T-J13		1068	x2
T-H12		990	x1
T-H15		1005	x1
T-16		1595	x1
T-17		1595	x1
T-A18		1040	x1
TOP 1			
T-X11		116	x8
T-H19		915	x1
T-H19a		915	x1
T-H20		1088	x1
T-H20a		1088	x1
T-J21		530	x1
T-H22		1129.5	x1
T-H22a		988	x1
T-X29		56	x3
TOP 2			
T-J23		1230	x2
T-J24		1230	x2
T-X25		1017	x2
T-H26		1017	x2
T-J27		1230	x2

NO.	IMAGE	mm	QTY
DOOR			
T-A30		1595	x1
T-A35		1595	x1
T-31		1535	x2
T-A32		836	x4
T-A33		456	x1
T-A34		456	x1
T-A36		456	x1
T-A37		456	x1
ANNEX			
T-P1			x4
T-P2			x4
T-P3			x4
TP5A			x2
T-P6			x2
T-P7		200	x1
T-H40			x128
T-H41		ST4x10	x148
T-H42		ST4x16	x16
T-H43		M4x10	x77
T-H44			x56

NOTE:It is important that these instructions are followed step by step.

Metal Shed must be installed on a level wooden platform or a level concrete foundation





Wooden platform is extra and is not included.
Don't install under windy conditions.

Wooden Platform
The following are a list of lumber and sizes you will need.




Pressure Treated-Wood Studs:
50mmX101.6mmX1220mm.....(2)
50mmX101.6mmX1801.8mm.....(3)




Exterior Grade (CDX-19mm) plywood
19mmX1220mmX2005mm.....(1)

We recommend to clear your metal shed of snow after each snowfall.

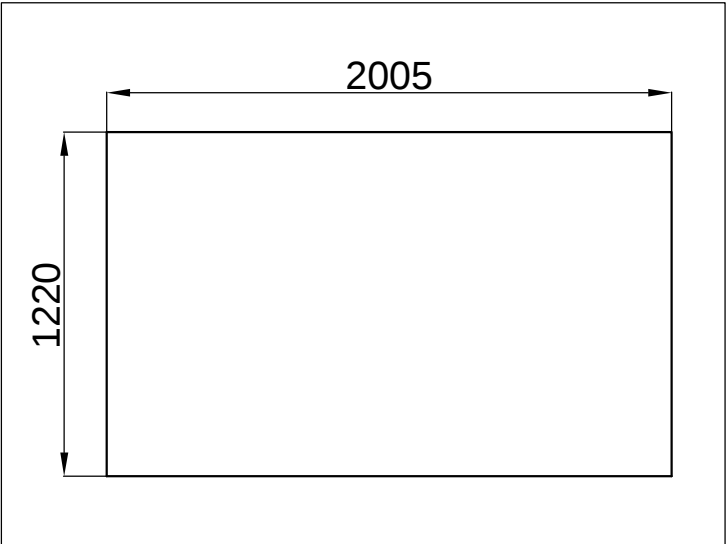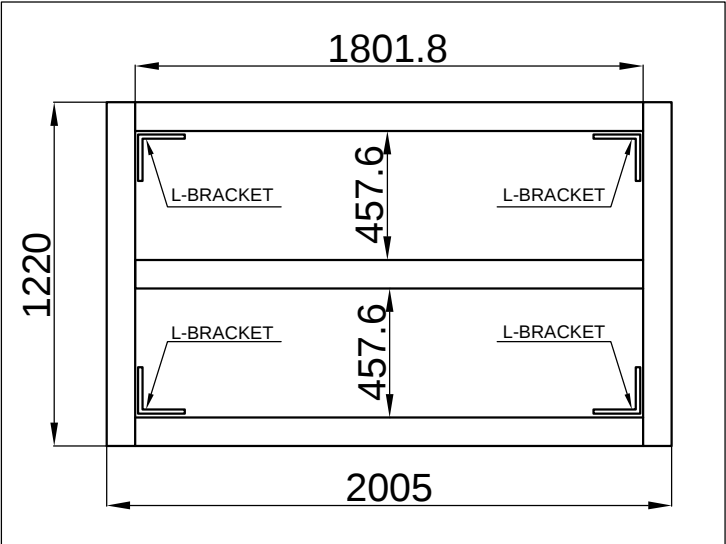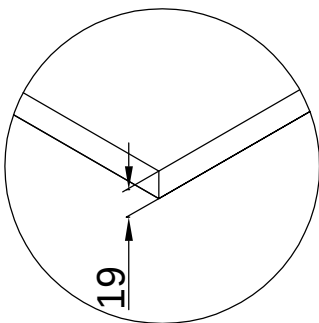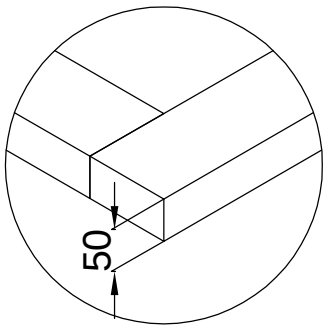


Important: Use hand gloves to prevent injury.

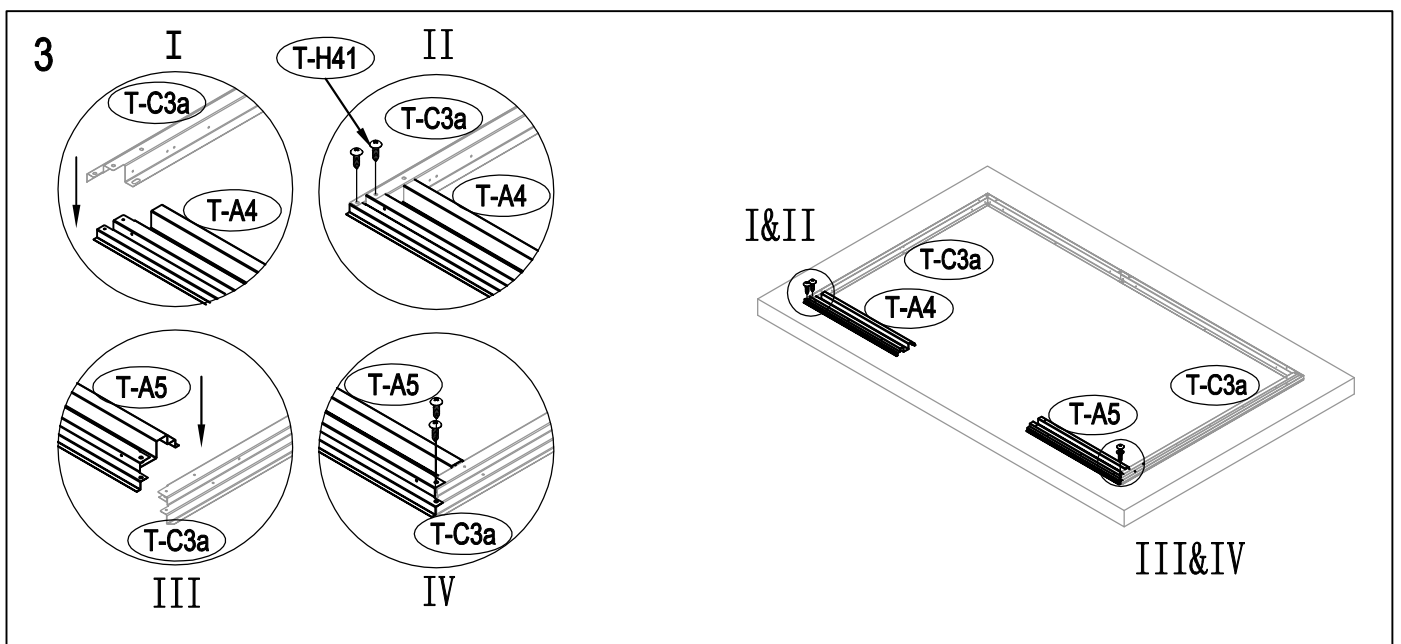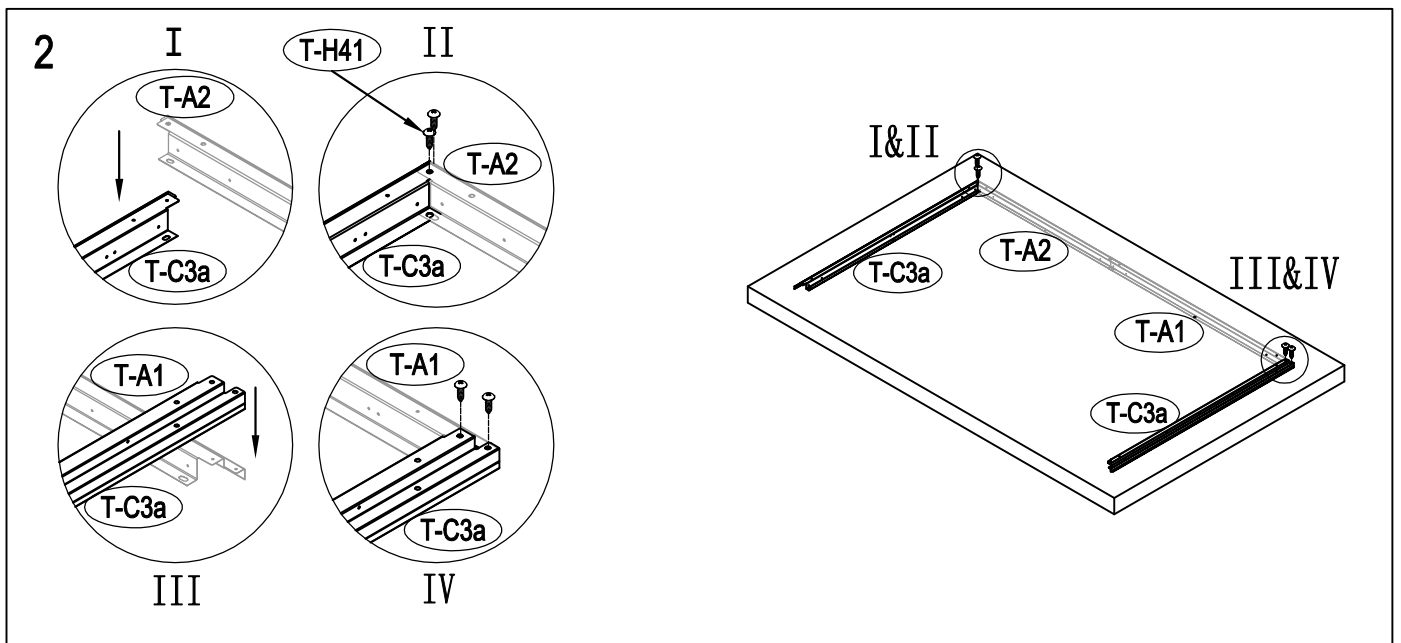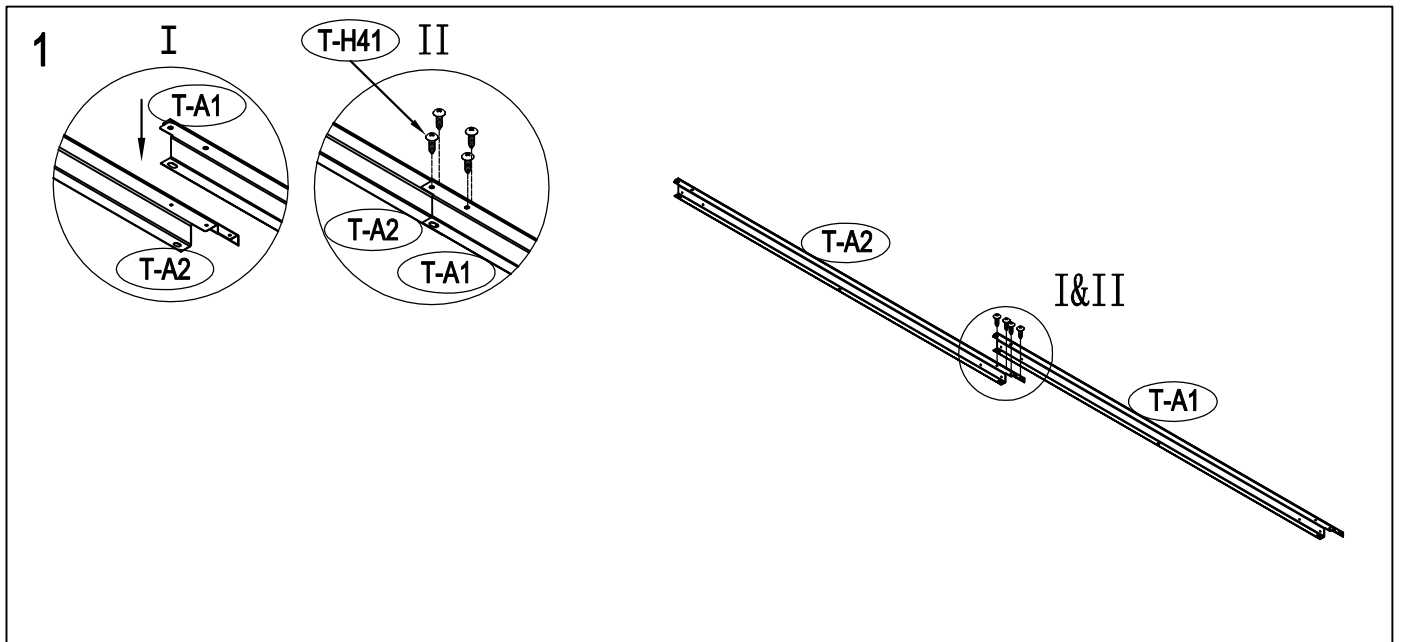


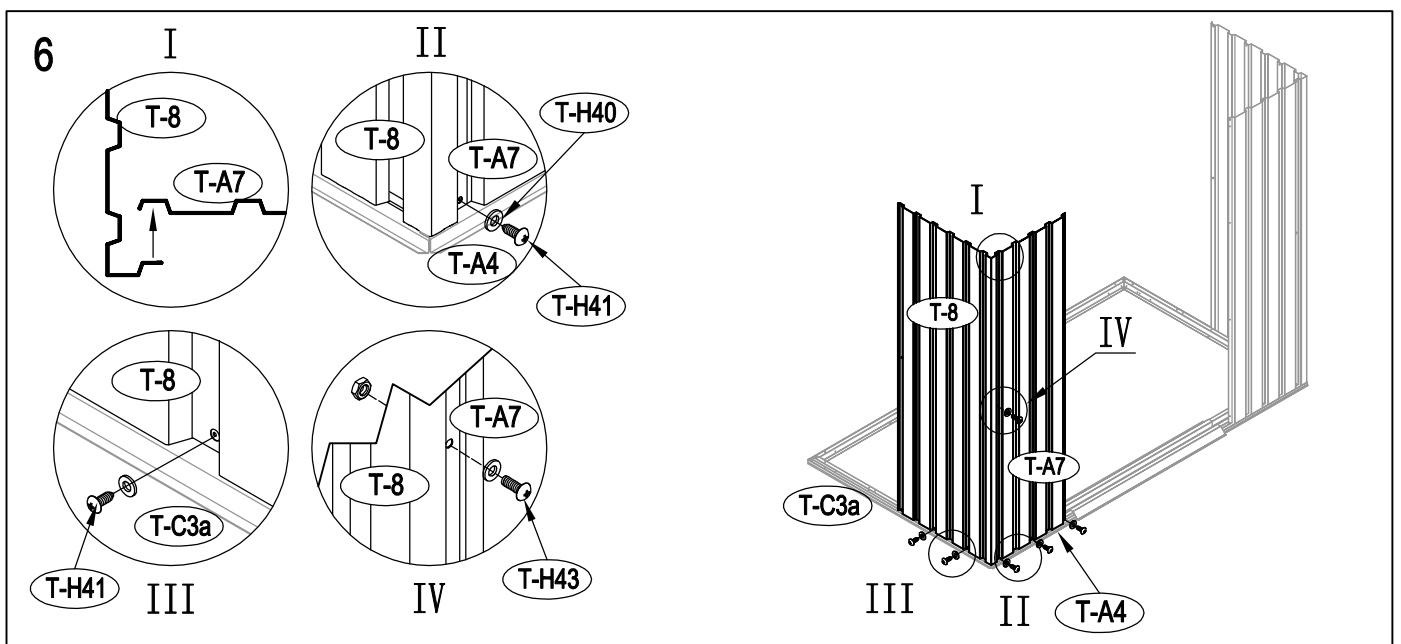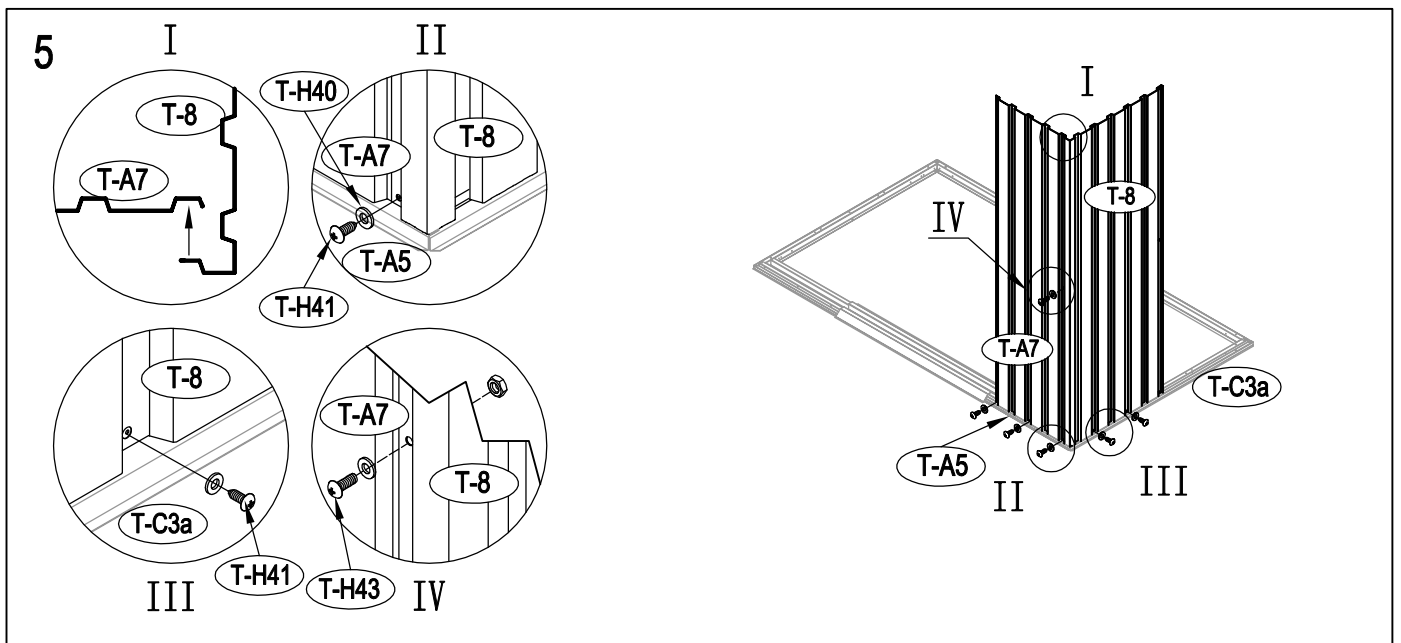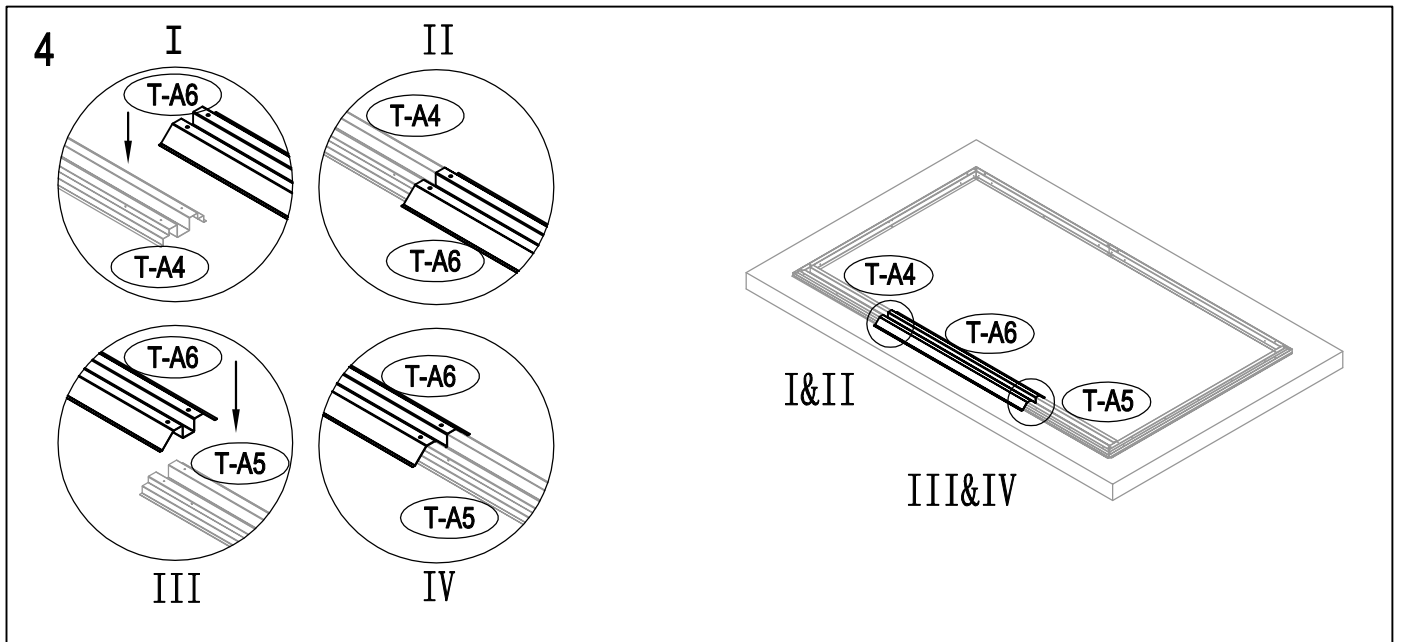


10

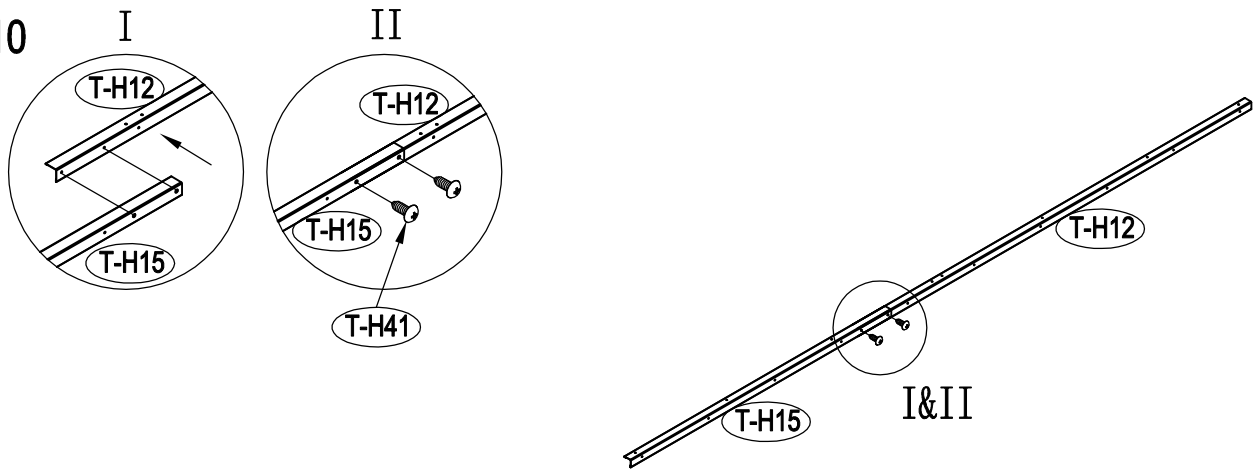



11

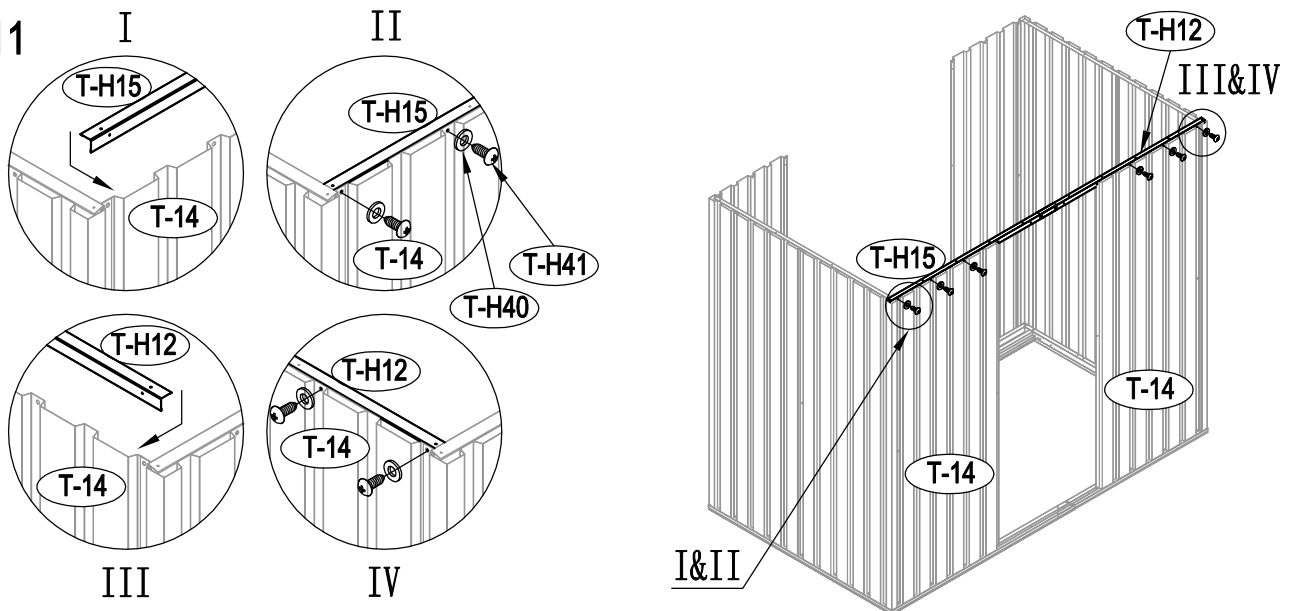



12

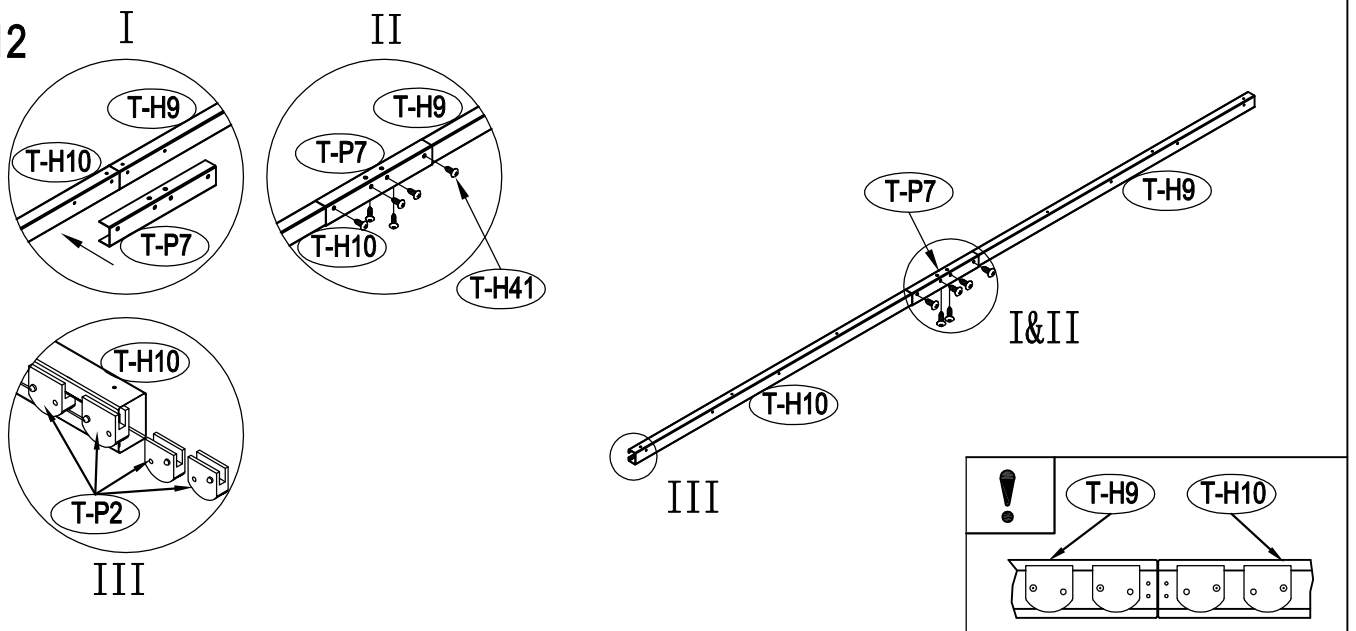



13


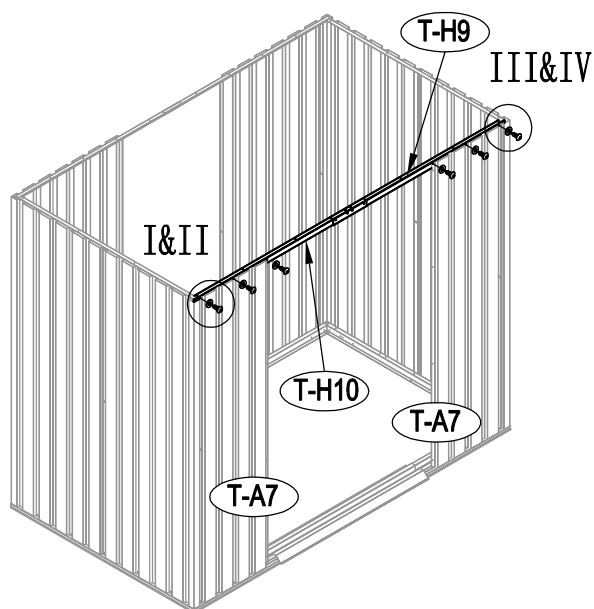
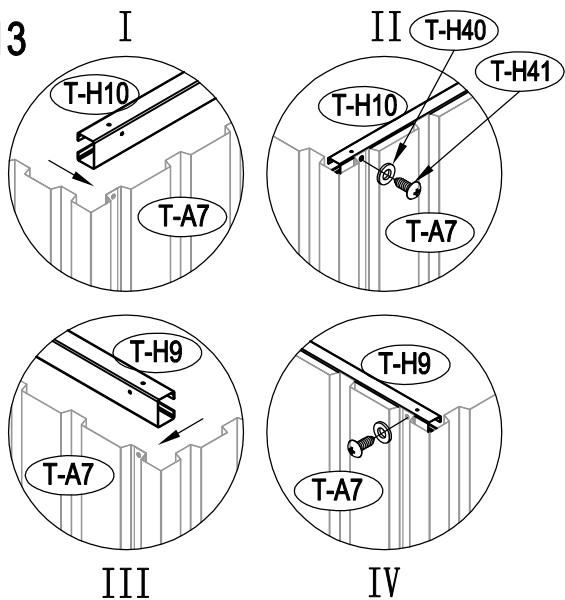





14

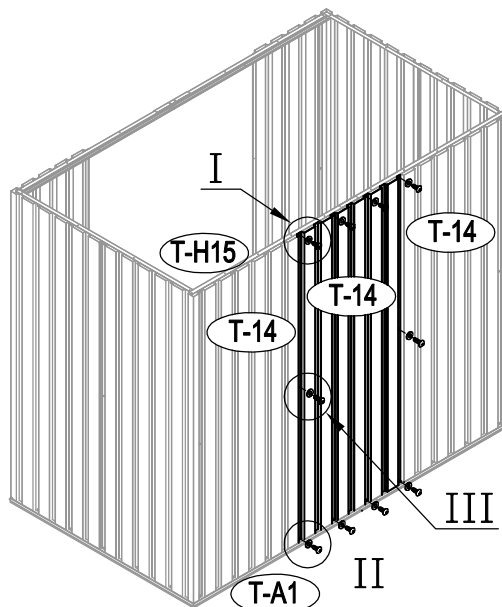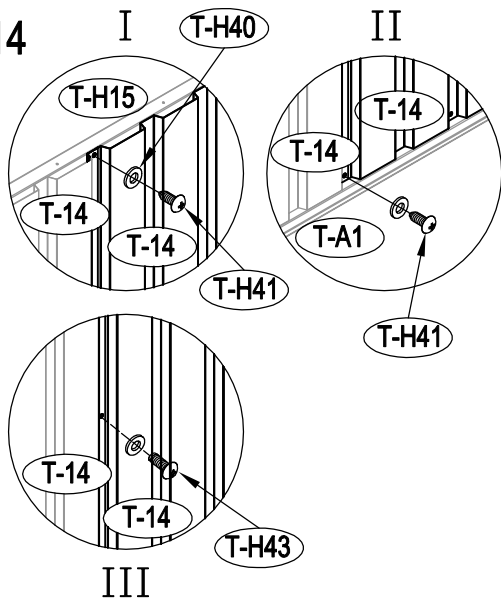

15

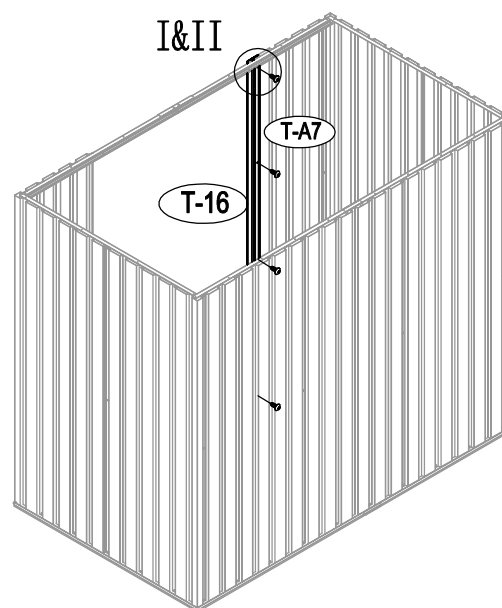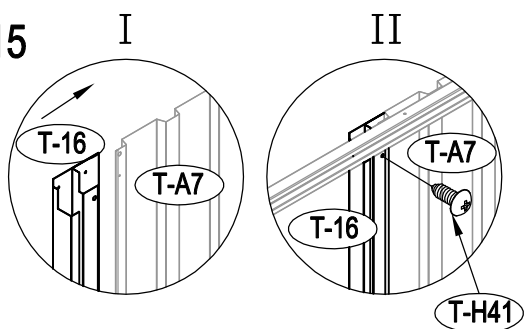

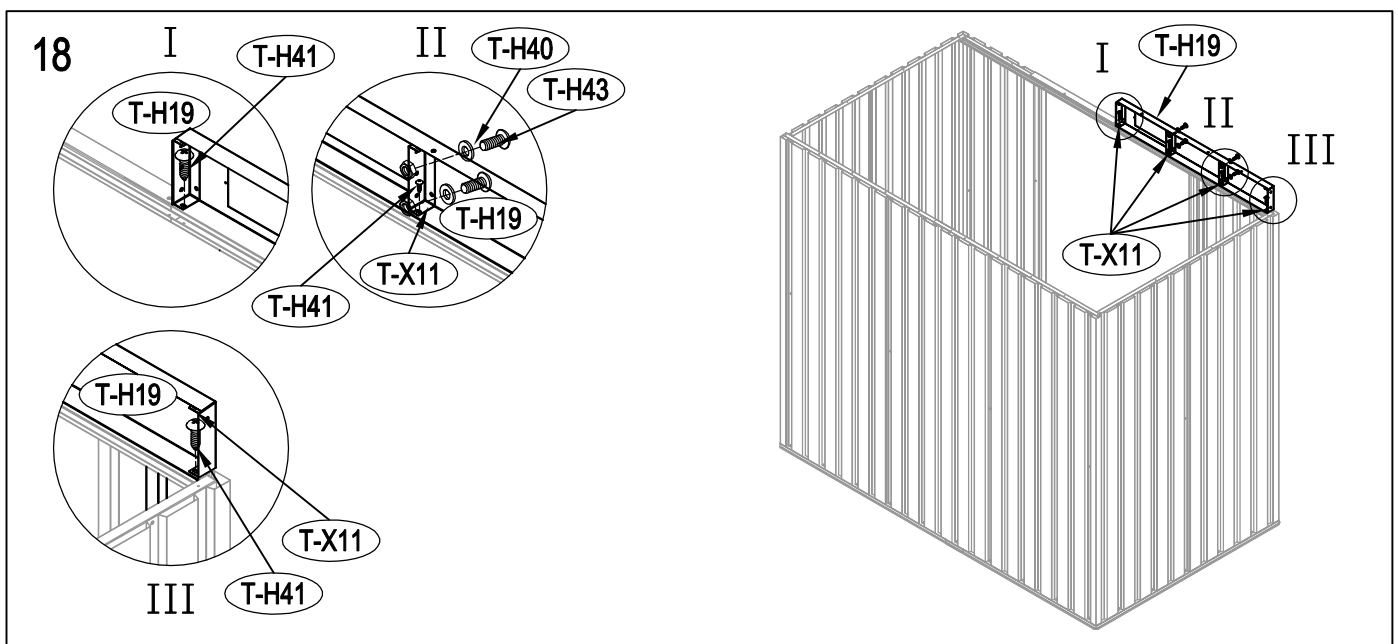
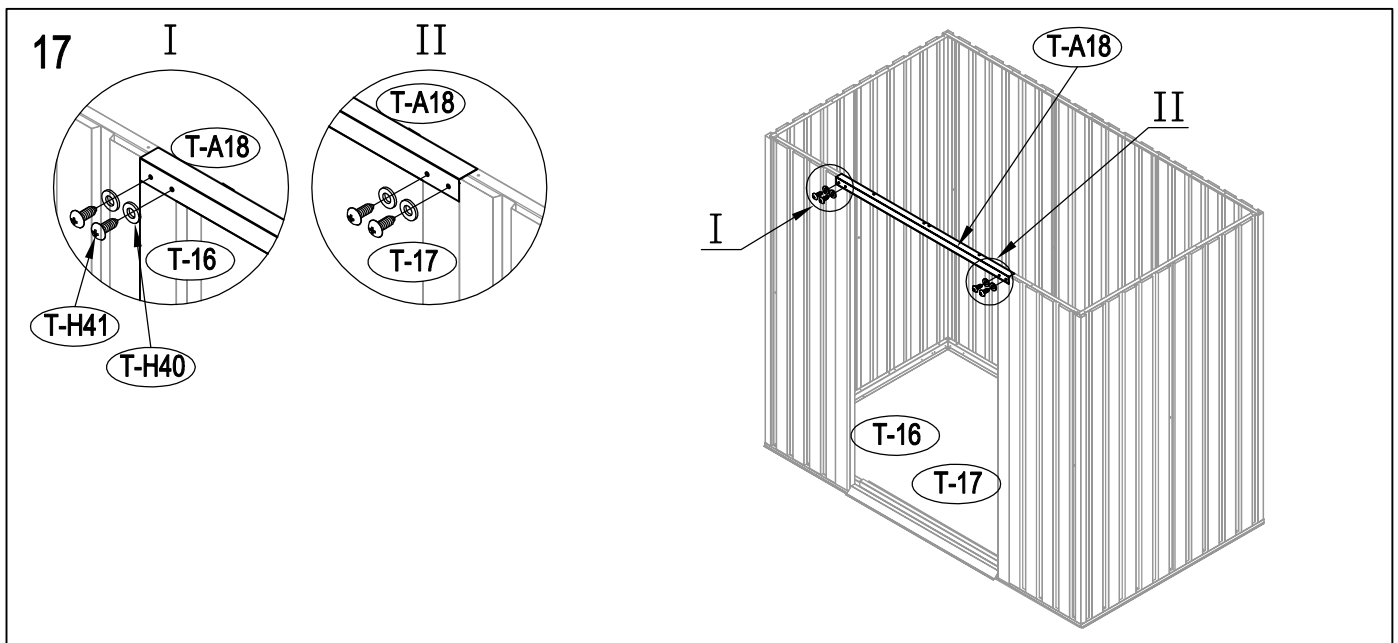
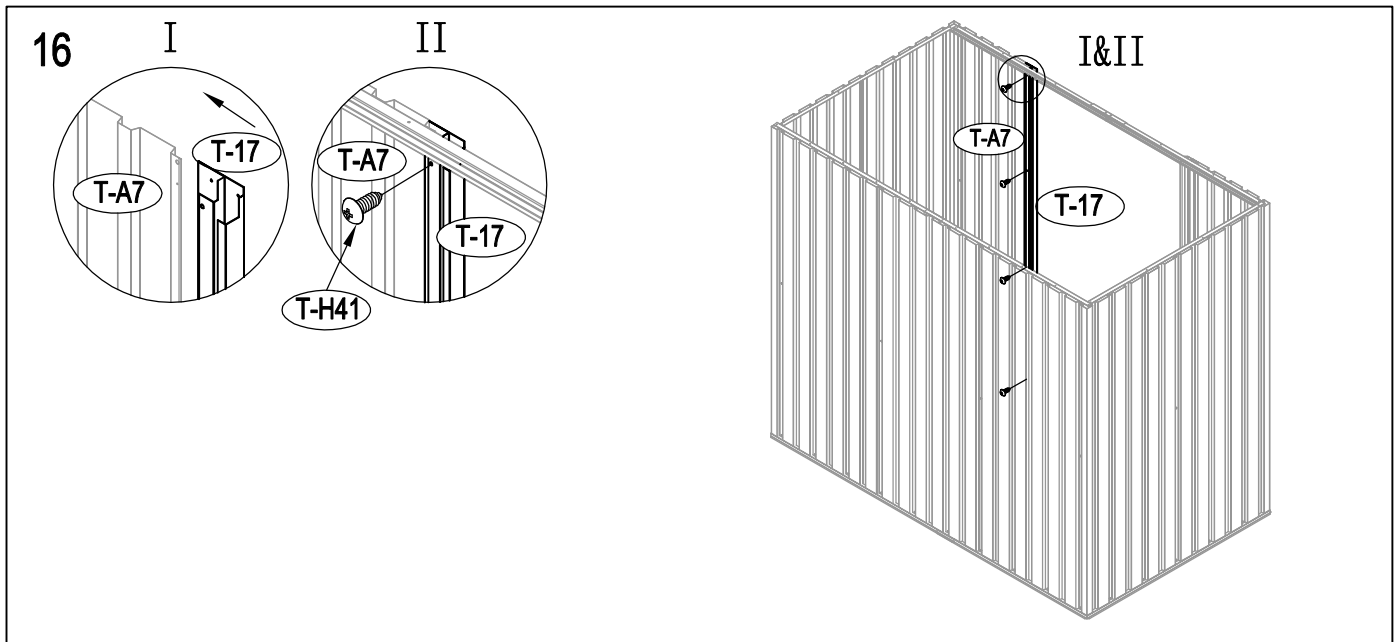


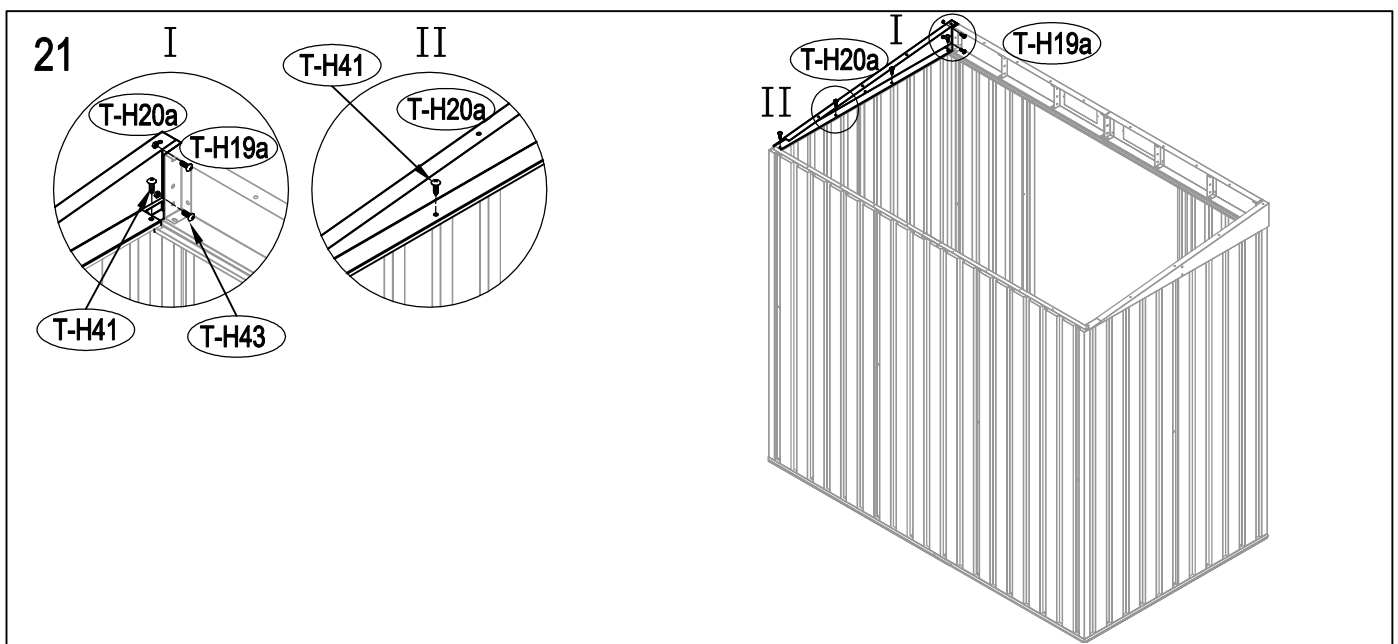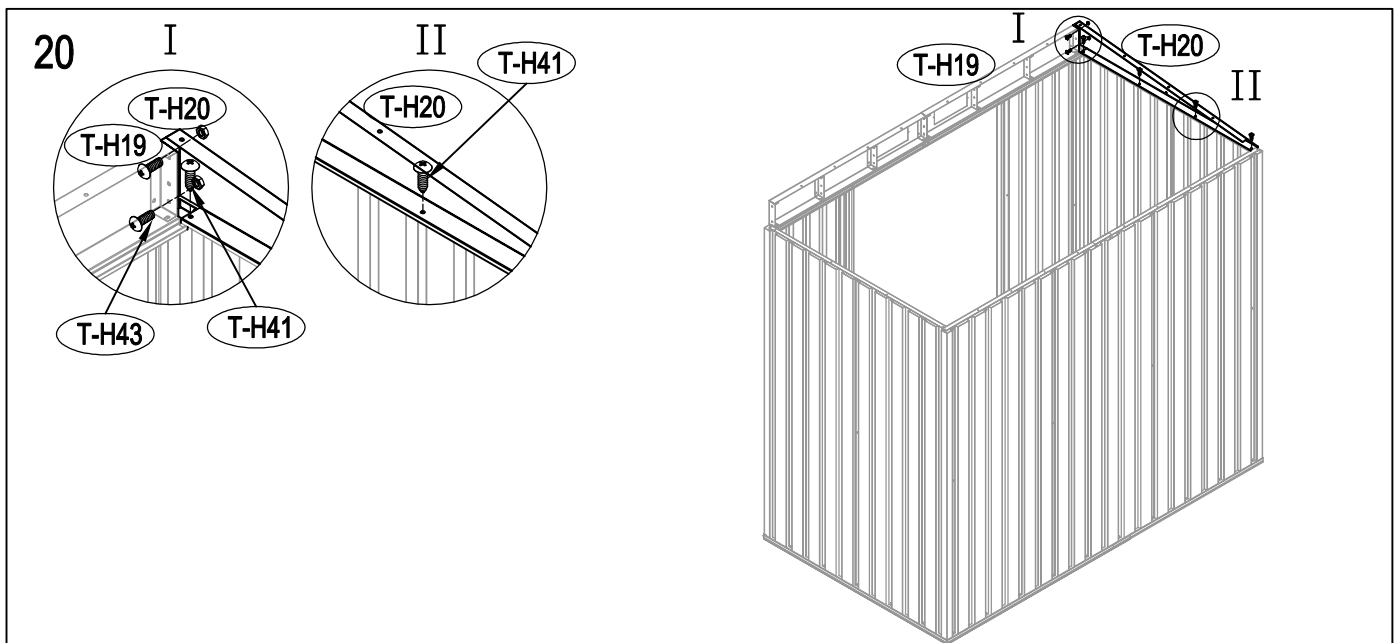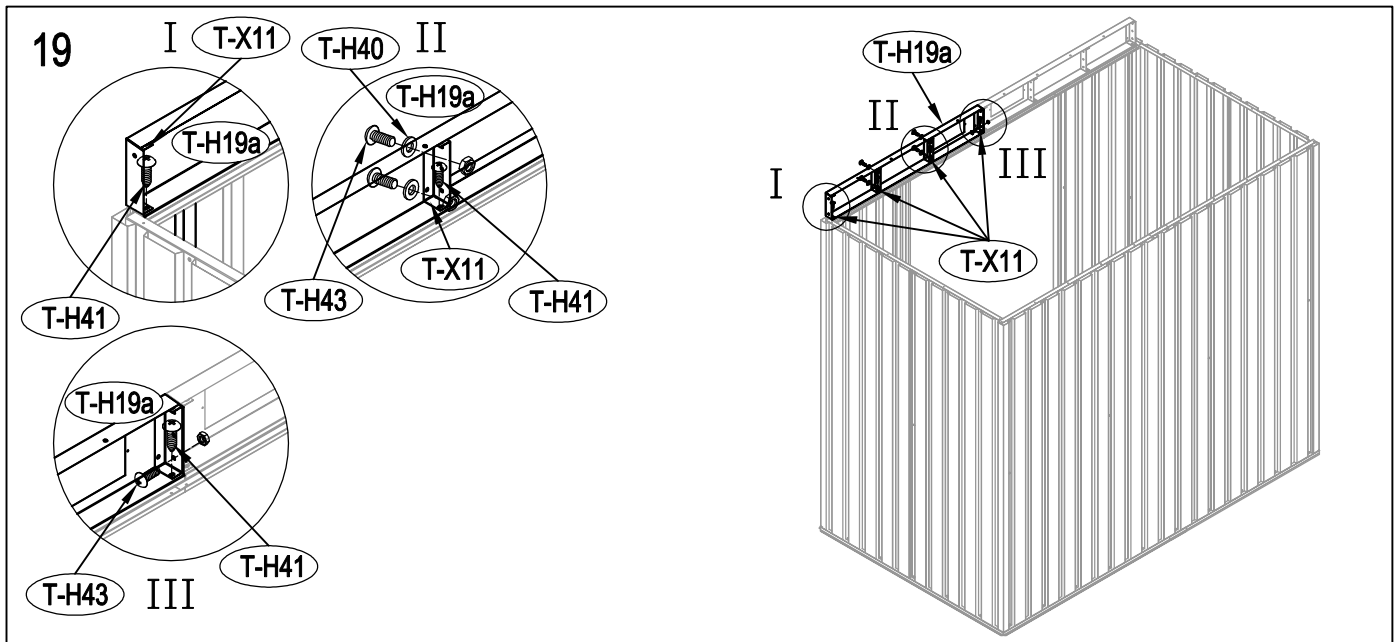

22

I


II

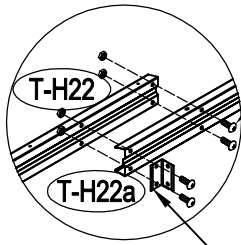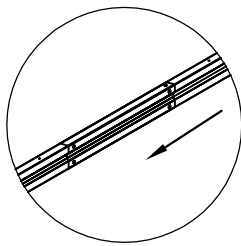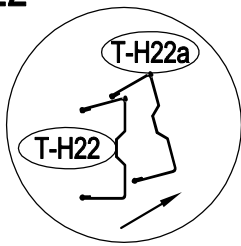

T-H43

III

T-X29


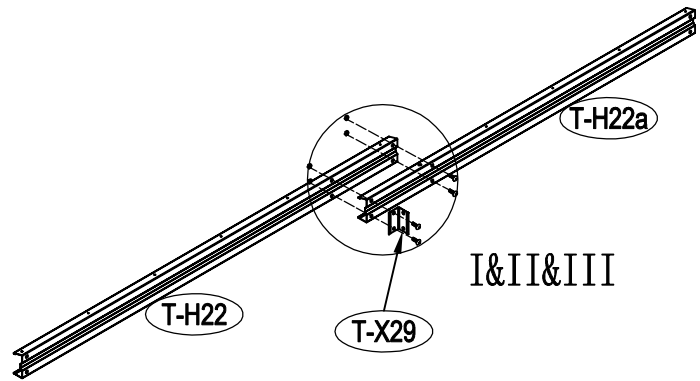


I&II&III


23

I

II

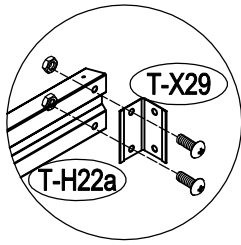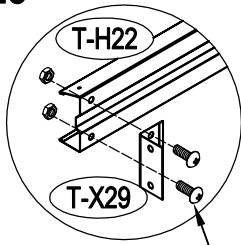

T-H43


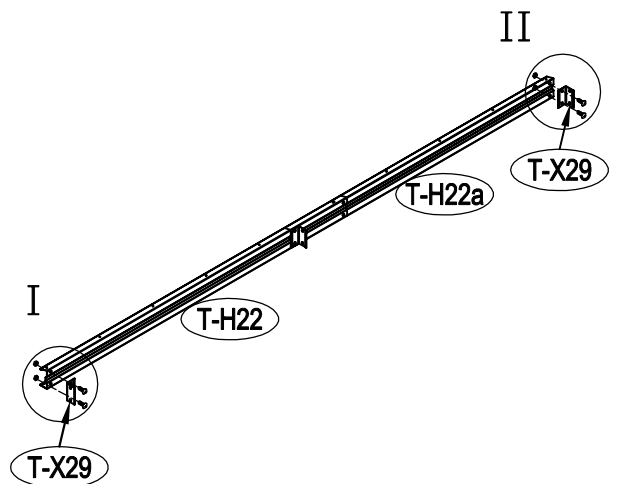


II


24

I

II

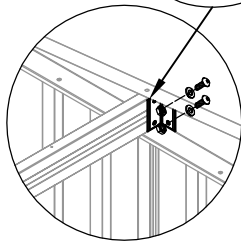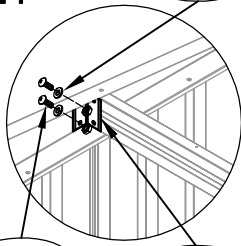




T-X29



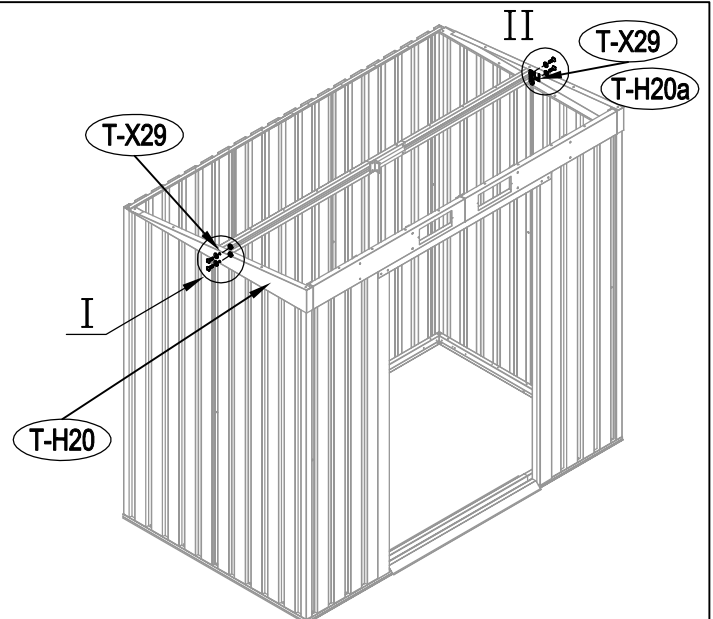


II



T-X29
T-H20a



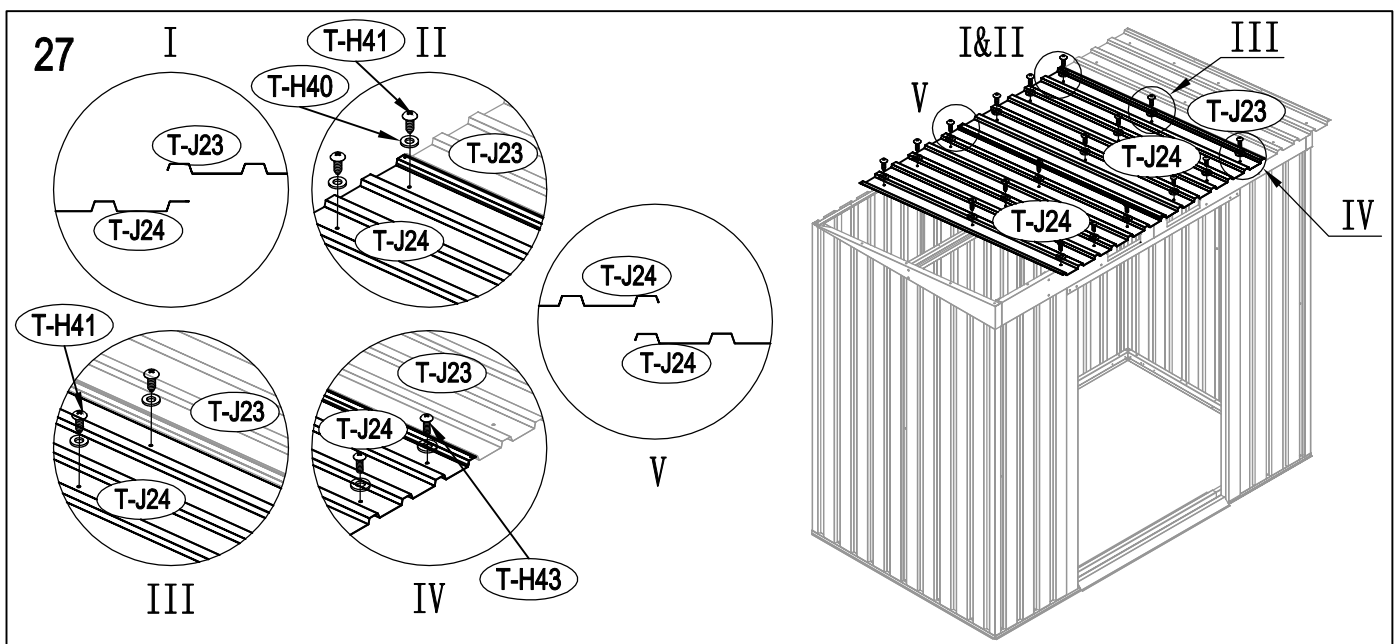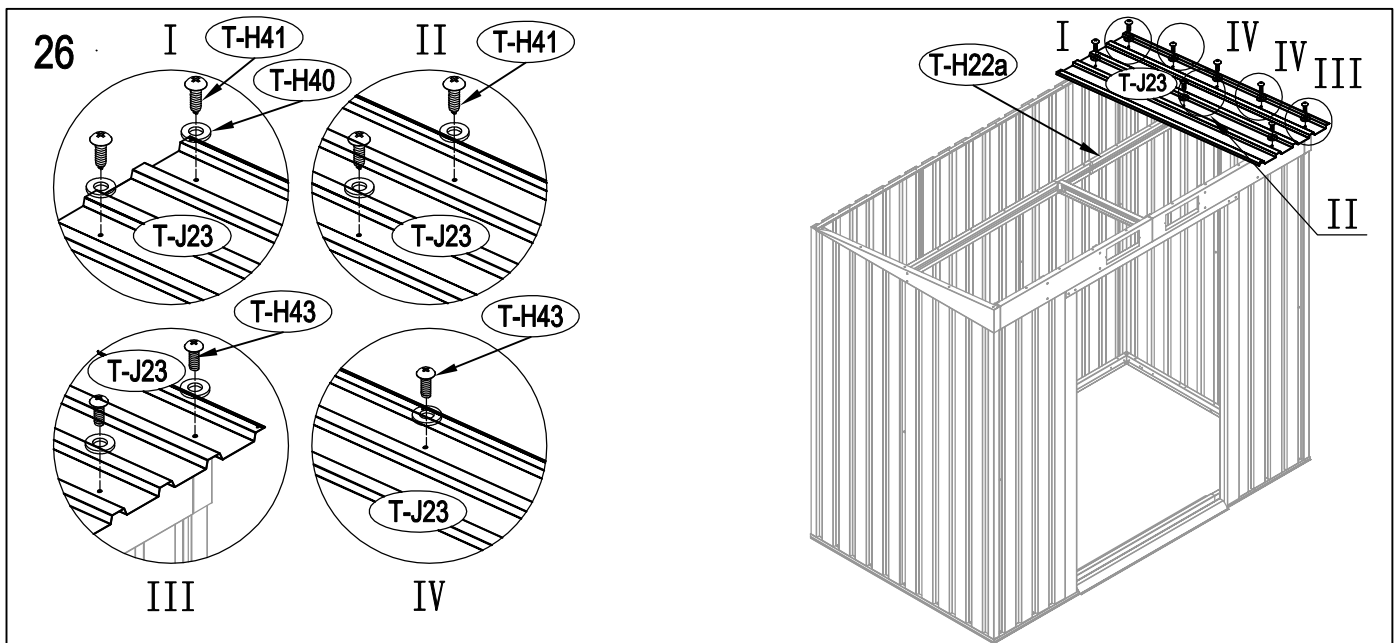
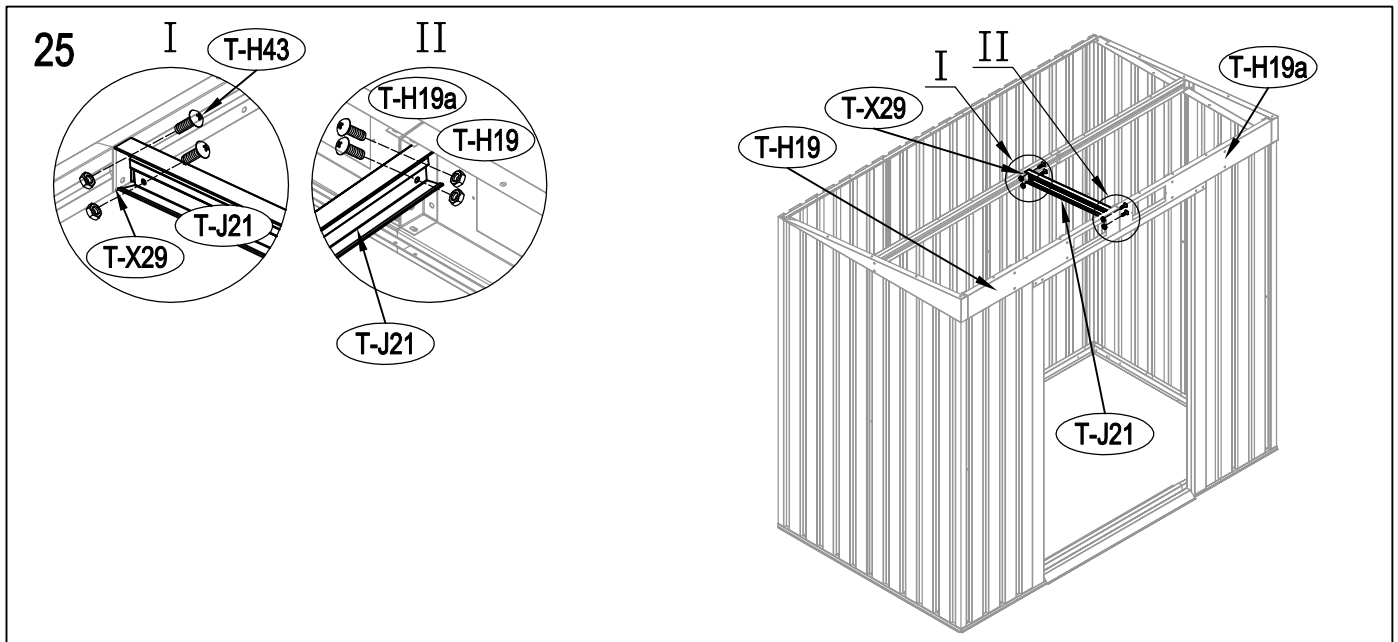


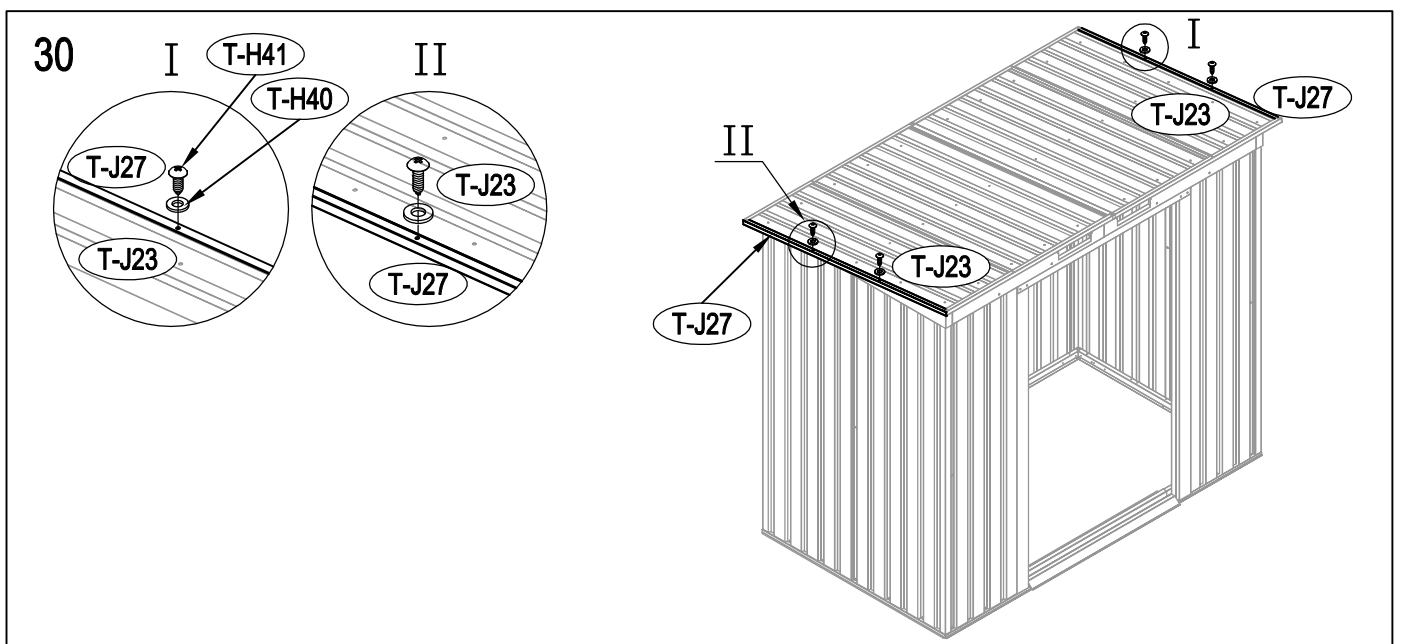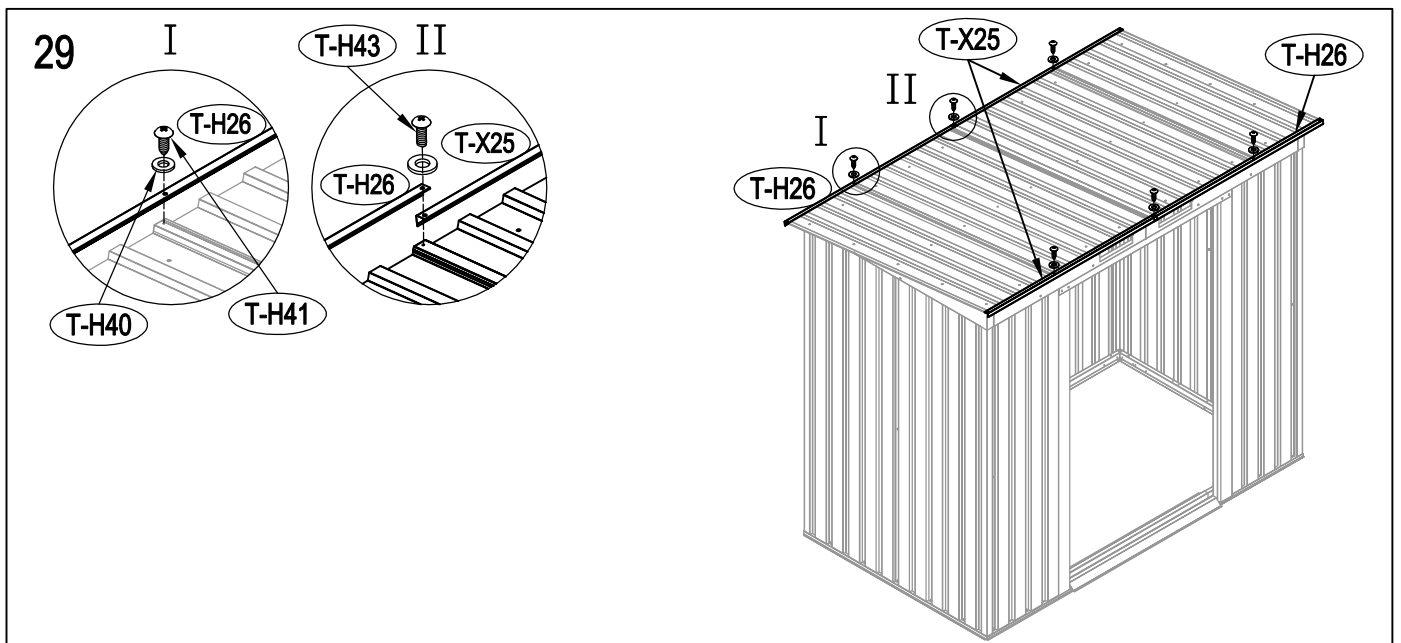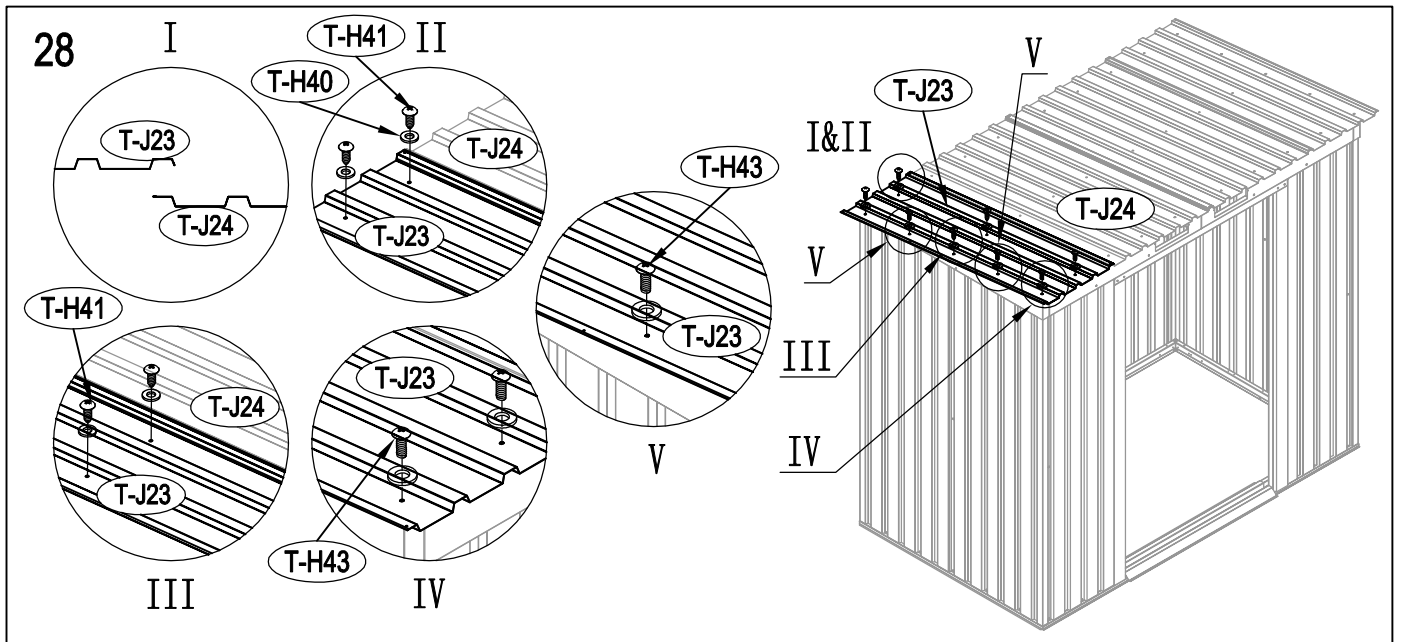



31

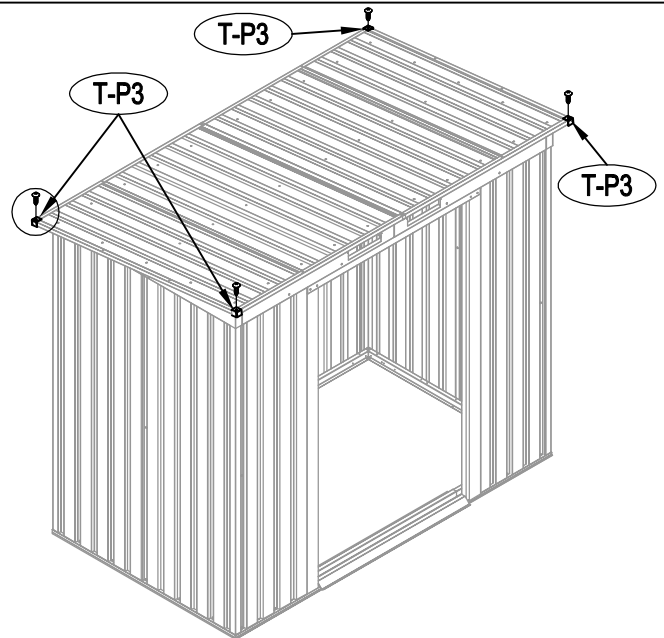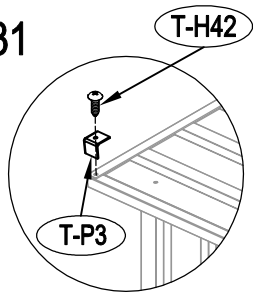



32

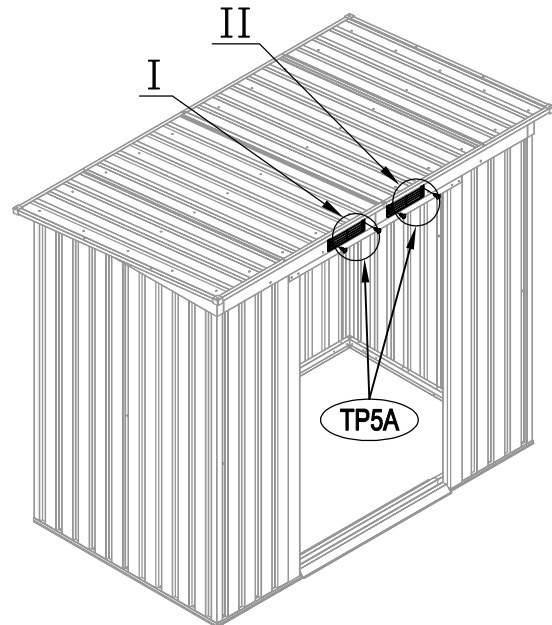
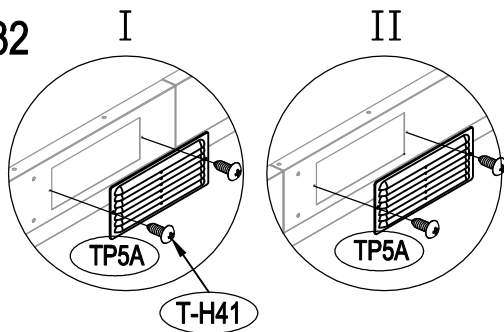


33


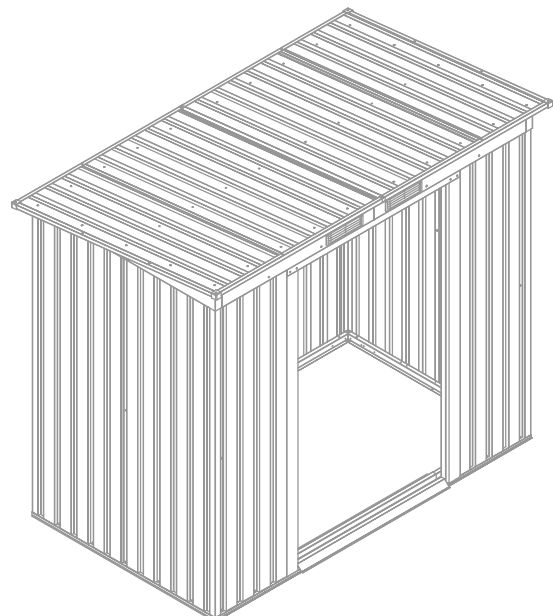
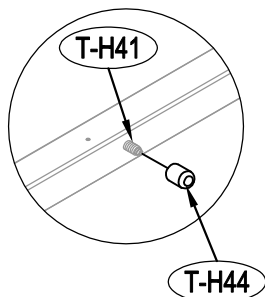


34


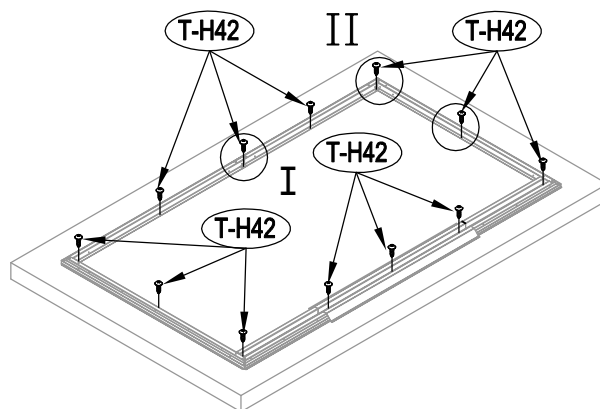
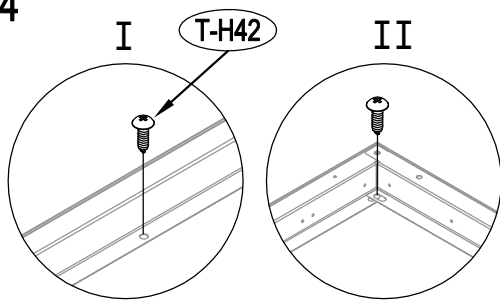


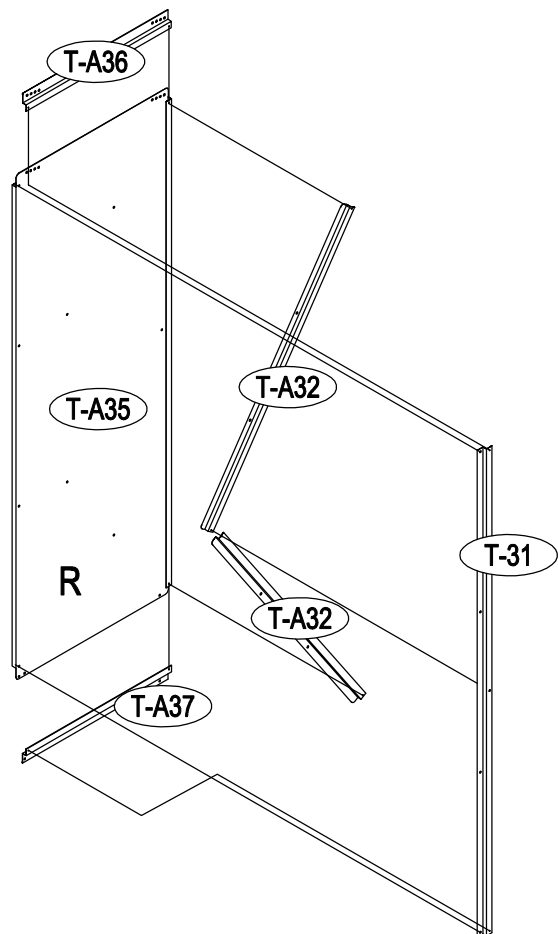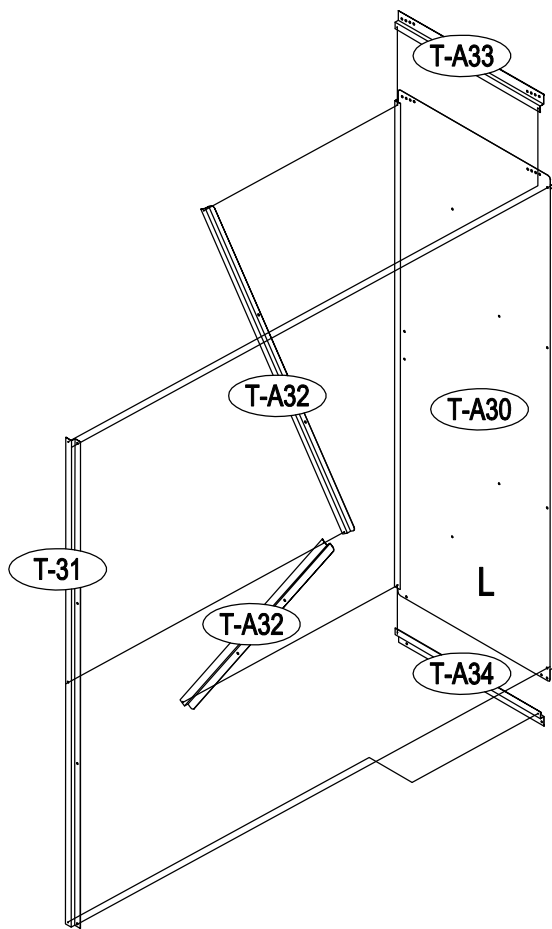

1

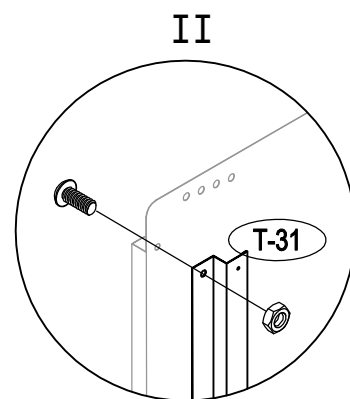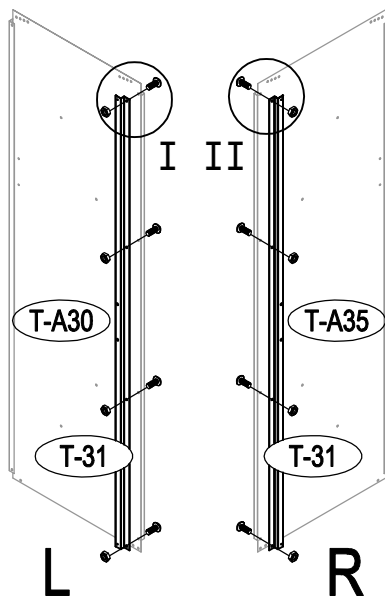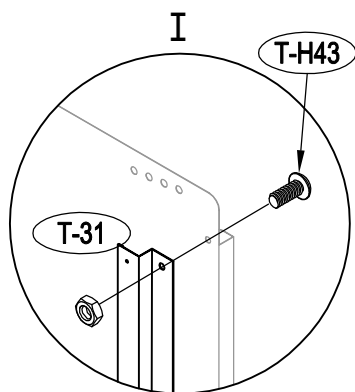

2

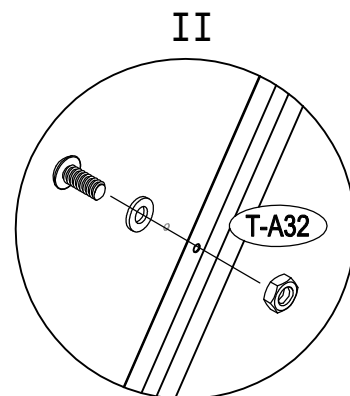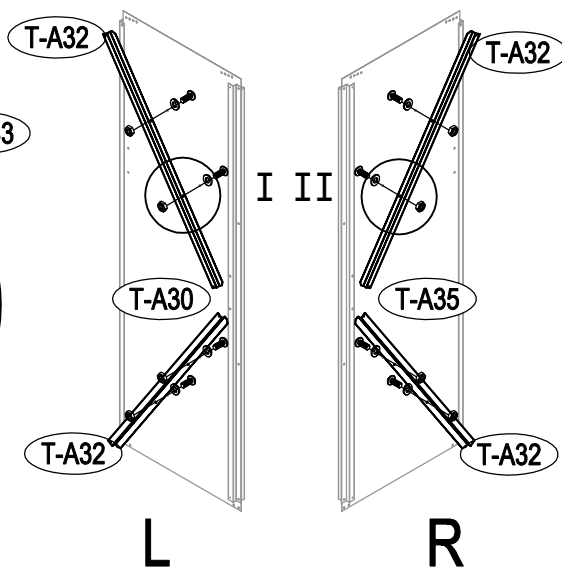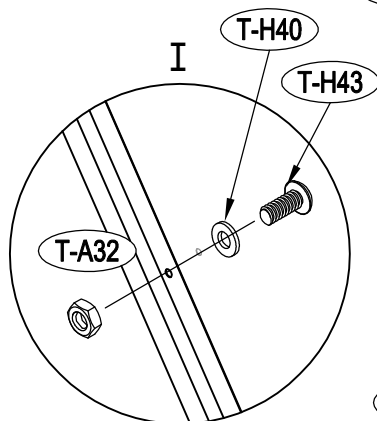

3

