


Metal Shed

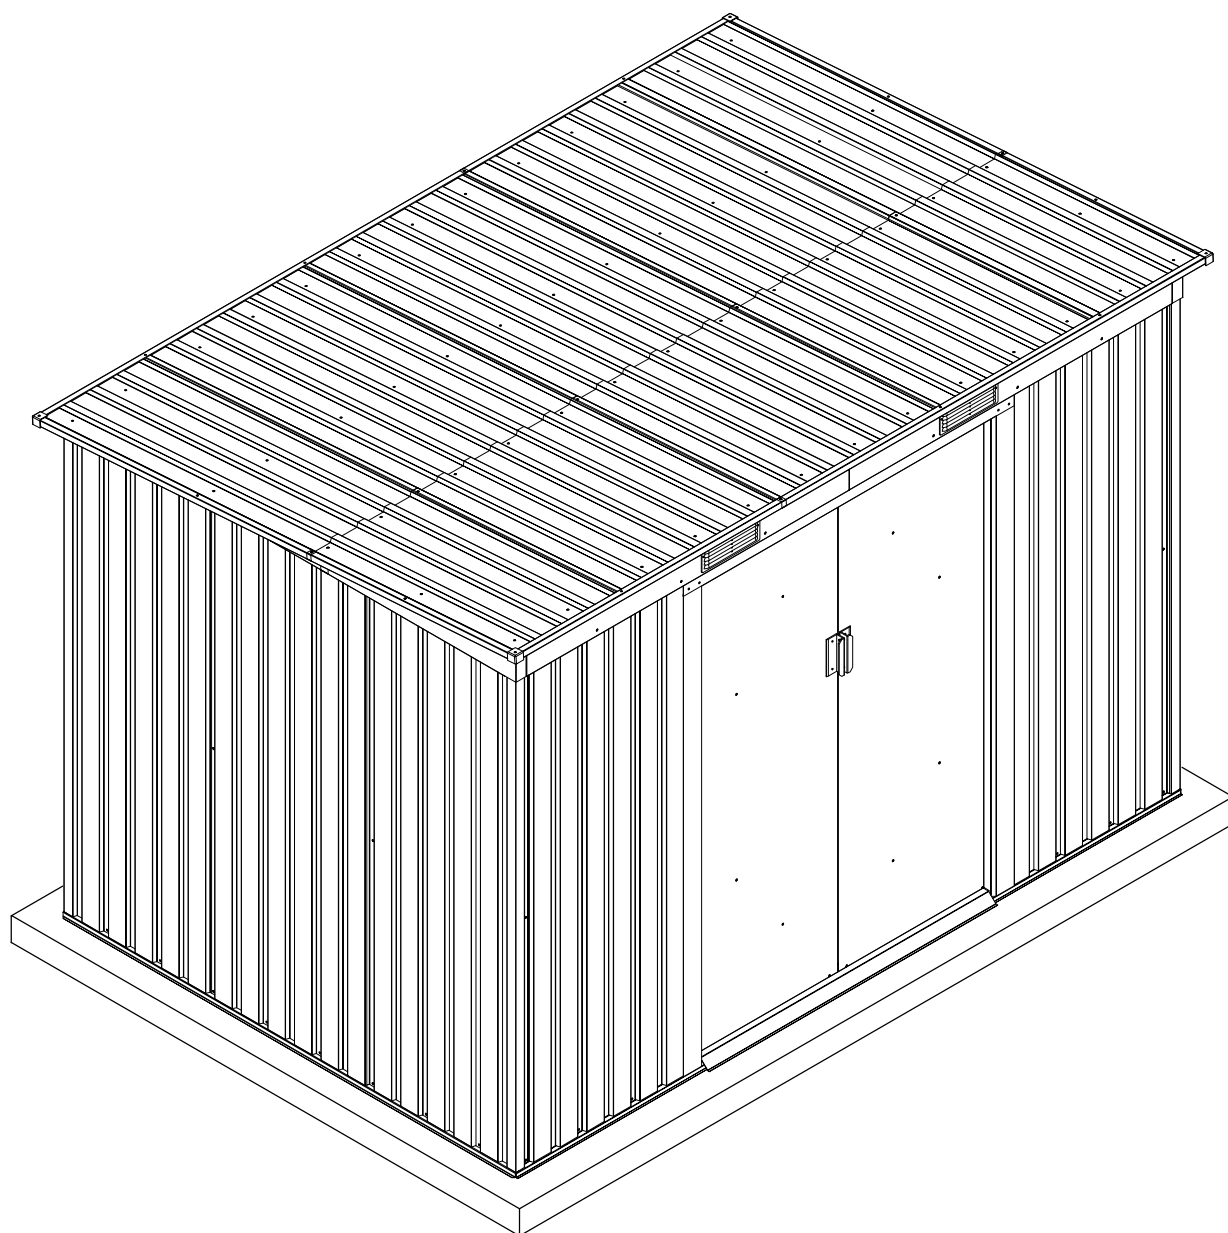

OWNER'S MANUAL /

Instructions for Assembly S2001C



EN: Requires two people and takes 2-3 hours for Installation.

RO: Necesită două persoane și durează 2-3 ore pentru instalare.

HU: Két személy szükséges, a szerelés 2-3 órát vesz igénybe.

Assembly Preparation

Owner's Manual

Please check local building codes regarding footings, location and other requirements before beginning construction.

Assembly instructions:

Reviewing all instructions and the appropriate information before you begin, make sure following the step sequence carefully for successful results.

Flooring base:

A good location for the storage building is a square and level area with good drainage. The base is not included in the kit which may need purchase separately or may construct a foundation and anchoring system of your own. The foundation base should be 10 cm larger than the base rail of the shed (minimum 10cm thickness concrete slab is recommended).


A strong plastic sheet (thickness: at least 150µm) should be placed under the foundation to assist in reducing rising dampness from the soil, thus reducing condensation build up in the shed. Your storage building must be anchored to prevent wind damage.

Parts and Parts List:

Before you start, check to be sure that you have all the necessary parts for your building (refer to the Parts List Page). Do not attempt to assemble the building if parts are missing because any building left partially assembled may be seriously damaged by light winds.

Please tear off the safety protection layer before assembly, keep the part number label if needed.

Tools you need:

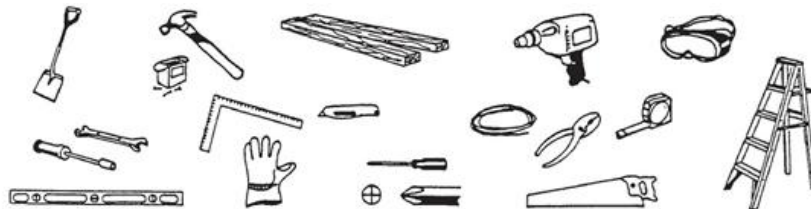

Safety must be put in the No. 1 position:

1. Select a dry and calm day for your assembly. Team works (Two or more people) are required during the assembly. It is also recommended to finish the assembly in a day to avoid damage to the product or missing of some small parts. Keep all small parts (screws etc.) in a bowl so they do not get lost.
2. Wearing safety gloves, eye protection and long sleeves during the assembly to prevent injury. Pay attention to the sharp edge of some parts.
3. Children and pets are not allowed entering into the construction site.
4. Never concentrate your total weight on the roof of the building.
When using a step ladder make sure that it is safe.

Care & Maintenance:

1. Keep the shed clean with soft cloth, use water if necessary.
2. Keep the door tracks clear of dirt and other stuff that prevent them from sliding easily.
3. Clean the snow timely with necessary tools to make sure it is safe to enter into.
4. The shed is not made for living but storing stuff.
5. Please add some oil on the top and bottom door sliding channel to make door slides smoothly.

Pregătirea pentru asamblare

Verificați reglementările locale privind fundațiile, amplasarea și alte cerințe înainte de a începe construcția.

Instrucțiuni de asamblare:

Citiți toate instrucțiunile înainte de a începe. Urmați cu atenție pașii pentru un rezultat reușit.

Bază pentru pardoseală:


Alegeți un loc dreptunghiular, nivelat și bine drenat. Baza nu este inclusă în kit. Trebuie să fie cu 10 cm mai mare decât șina de bază și să aibă o grosime minimă de 10 cm (placă de beton).

Folosiți o folie de plastic cu grosime de cel puțin 150micronm sub fundație pentru a reduce umezeala și condensul. Ancorarea este obligatorie pentru a preveni daunele cauzate de vânt.

Piese și unelte:

Verificați toate piesele (consultați lista de piese). Nu începeți dacă lipsesc componente. Îndepărtați stratul protector înainte de asamblare.

Unelte:

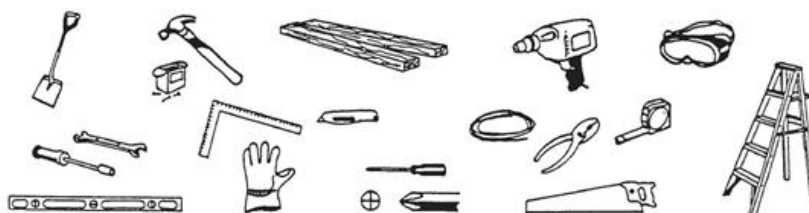

Siguranță:

1. Alegeți o zi uscată și calmă; lucrați cu cel puțin două persoane.
2. Purtați mănuși, ochelari de protecție și mâneci lungi.
3. Țineți copiii și animalele departe.
4. Nu vă sprijiniți complet pe acoperiș. Folosiți o scară stabilă.

Îngrijire și întreținere:

1. Curățați cu o cârpă moale și apă.
2. Mențineți șinele ușilor curate.
3. Îndepărtați zăpada prompt.
4. Căsuța este destinată depozitării, nu locuirii.
5. Lubrifiați șinele de glisare ale ușilor.

Összeszerelés előkészítése

Kérjük, ellenőrizze a helyi építési előírásokat az alapozás, az elhelyezés és más követelmények kapcsán a munkálatok megkezdése előtt.

Összeszerelési útmutató:

Olvassa el figyelmesen az utasításokat a kezdés előtt. Kövesse lépésről lépésre a sorrendet a sikeres eredmény érdekében.

Alap:


Válasszon egy szögletes, sík és jól vízelvezetésű helyet. Az alap nem része a csomagnak. Az alapnak 10cm-rel nagyobbnak kell lennie, mint az alsó sín, ajánlott legalább 10 cm vastag betonlap.

Tegyen le egy legalább 150 micronm vastag műanyag fóliát az alap alá, hogy csökkentse a talajból származó nedvességet és a kondenzációt. A tárolót rögzíteni kell, hogy ne sérüljön meg a szél miatt.

Alkatrészek és szerszámok:

Ellenőrizze az összes alkatrészt (lásd az alkatrészlistát). Ne kezdje el, ha hiányzik valamelyik. Távolítsa el a védőréteget az összeszerelés előtt.

Szerszámok:

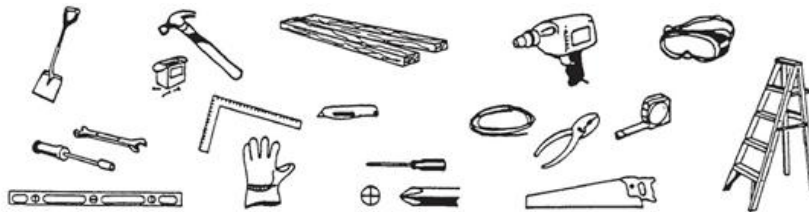


Biztonság:

1. Válasszon száraz, szélcsendes napot, és legalább két személy dolgozzon együtt.
2. Viseljen védőkesztyűt, védőszemüveget és hosszú ujjú ruhát.
3. Tartsa távol a gyerekeket és háziállatokat.
4. Ne terhelje a tetőt teljes testsúllyal. Stabil létrát használjon.


Karbantartás:

1. Tisztítsa meg puha ronggyal és szükség esetén vízzel.
2. Tartsa tisztán az ajtósinéket.
3. Azonnal távolítsa el a havat.
4. A tároló nem lakhatásra, hanem tárolásra való.
5. Kenje meg az ajtó sínjeit, hogy könnyen csússzanak.


Size of S2001C:

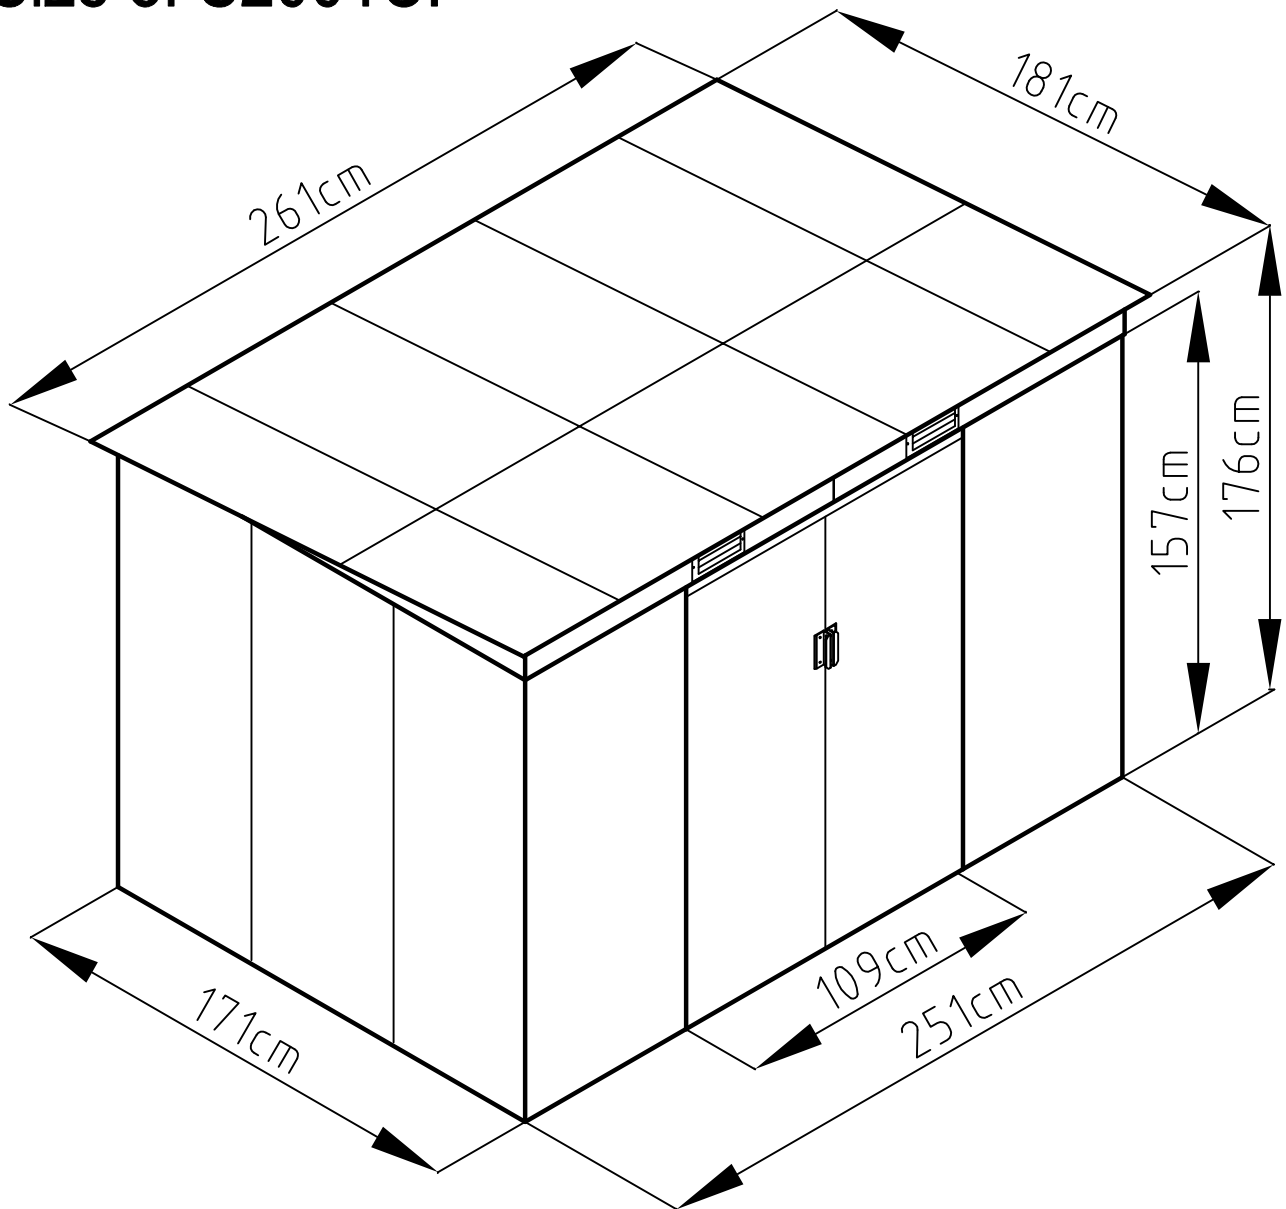

Area of installation requirement:

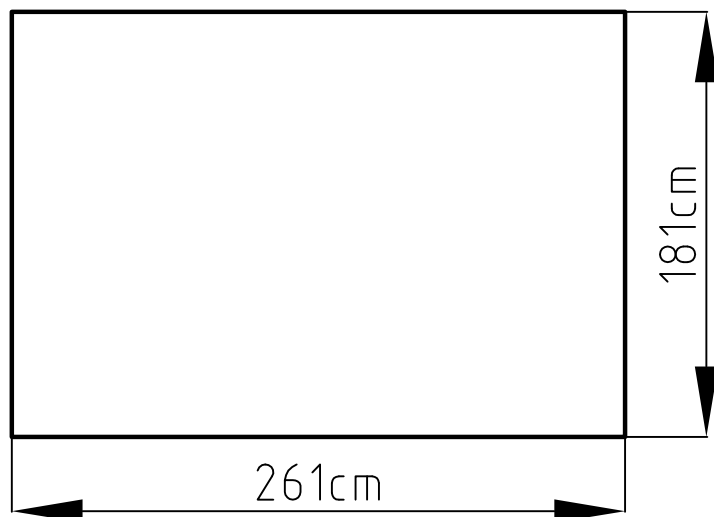

S2001C:

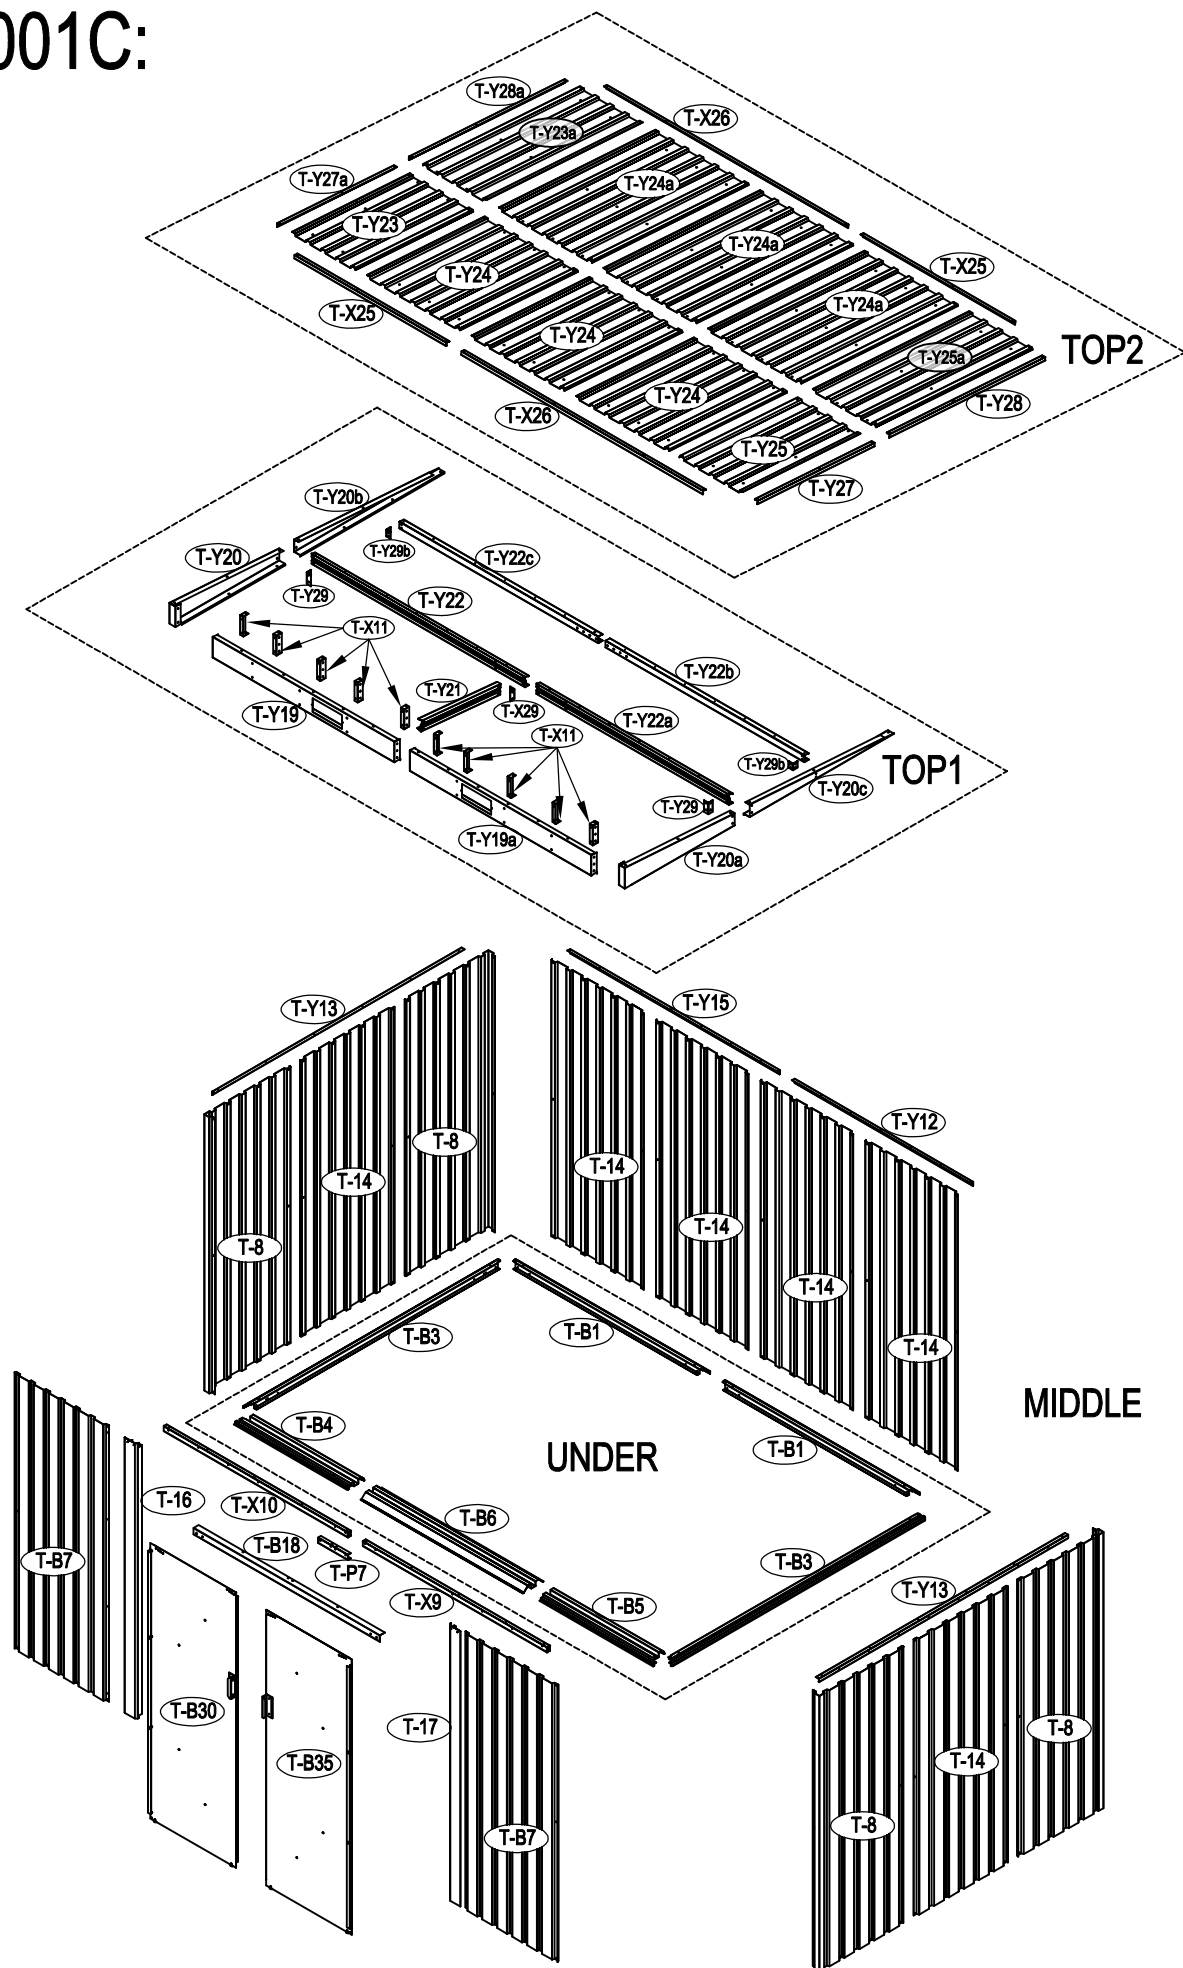

NO.	IMAGE	mm	QTY
UNDER			
T-B1		1302	x2
T-B3		1702	x2
T-B4		760	x1
T-B5		760	x1
T-B6		1095	x1
MIDDLE			
T-B7		1600	x2
T-8		1600	x4
T-14		1600	x6
T-X9		1232	x1
T-X10		1232	x1
T-Y13		1668	x2
T-Y12		1193	x1
T-Y15		1403	x1
T-16		1595	x1
T-17		1595	x1
T-B18		1240	x1
TOP 1			
T-X11		116	x10
T-Y19		1215	x1
T-Y19a		1215	x1
T-Y20		735	x1
T-Y20a		735	x1
T-Y20b		966	x1
T-Y20c		966	x1
T-Y21		701.6	x1
T-Y22		1429	x1
T-Y22a		1288.5	x1
T-Y22b		1330	x1
T-Y22c		1330	x1
T-X29		56	x1
T-Y29		66	x2
T-Y29b		36	x2
TOP 2			

NO.	IMAGE	mm	QTY
T-Y23		804	x1
T-Y23a		1064	x1
T-Y24		804	x3
T-Y24a		1064	x3
T-Y25		804	x1
T-Y25a		1064	x1
T-X25		1016	x2
T-X26		1616	x2
T-Y27		784	x1
T-Y27a		784	x1
T-Y28		1044	x1
T-Y28a		1044	x1
DOOR			
T-B30		1595	x1
T-B35		1595	x1
T-31		1535	x2
T-B32		890	x4
T-B33		551	x1
T-B34		551	x1
T-B36		551	x1
T-B37		551	x1
ANNEX			
T-P1			x4
T-P2			x4
T-P3			x4
TP5A			x2
T-P6			x2
T-P7		200	x1
T-Y40			x187
T-Y41		ST4x10	x203
T-Y42		ST4x16	x20
T-Y43		M4x10	x95
T-Y44			x78

NOTE:It is important that these instructions are followed step by step.

Metal Shed must be installed on a level wooden platform or a level concrete foundation





Wooden platform is extra and is not included.
Don't install under windy conditions.

We recommend to clear your metal shed of snow after each snowfall.




Wooden Platform
The following are a list of lumber and sizes you will need.




Pressure Treated-Wood Studs:
50mmX101.6mmX1820mm.....(2)
50mmX101.6mmX2401.8mm.....(4)




Exterior Grade (CDX-19mm) plywood
19mmX1220mmX2605mm.....(1)
19mmX600mmX2605mm.....(1)

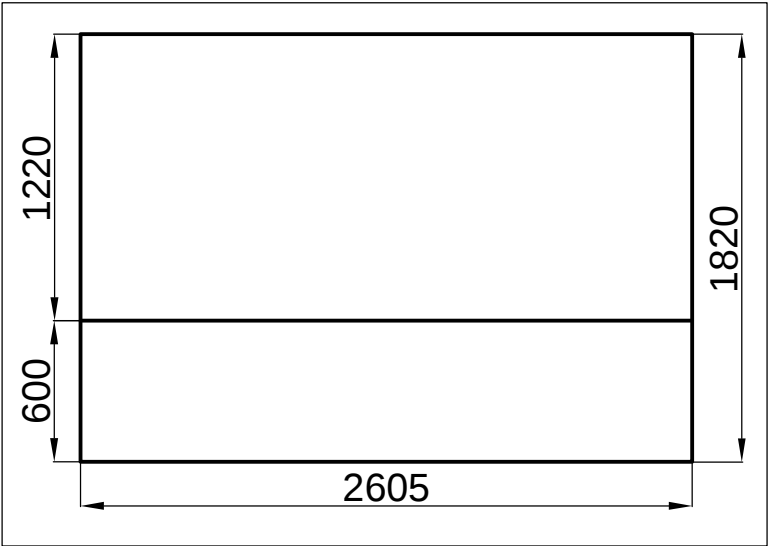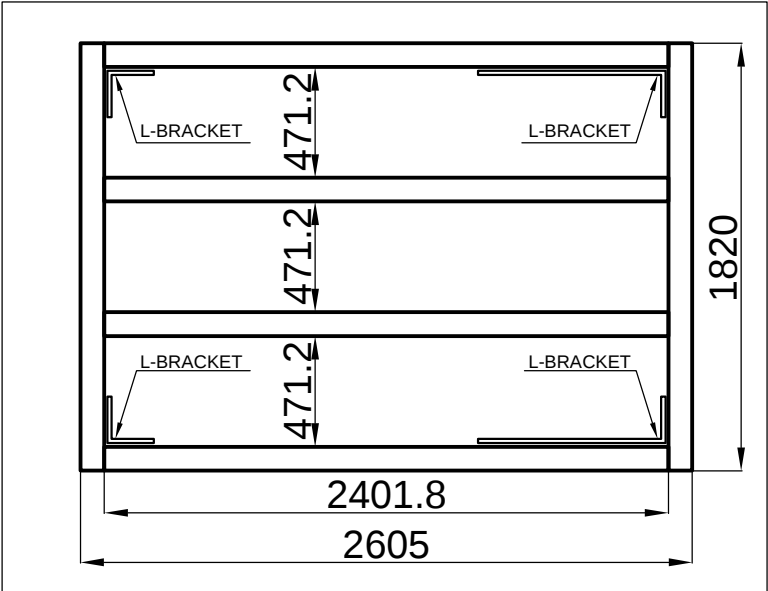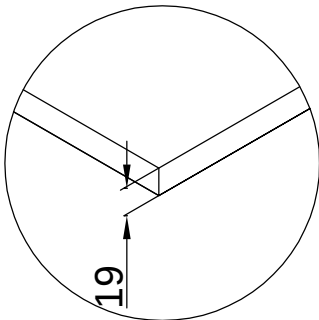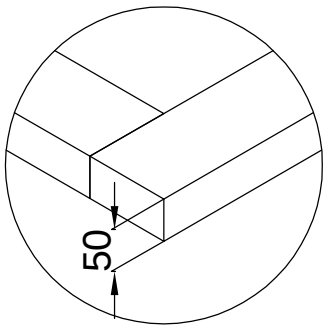


Important: Use hand gloves to prevent injury.

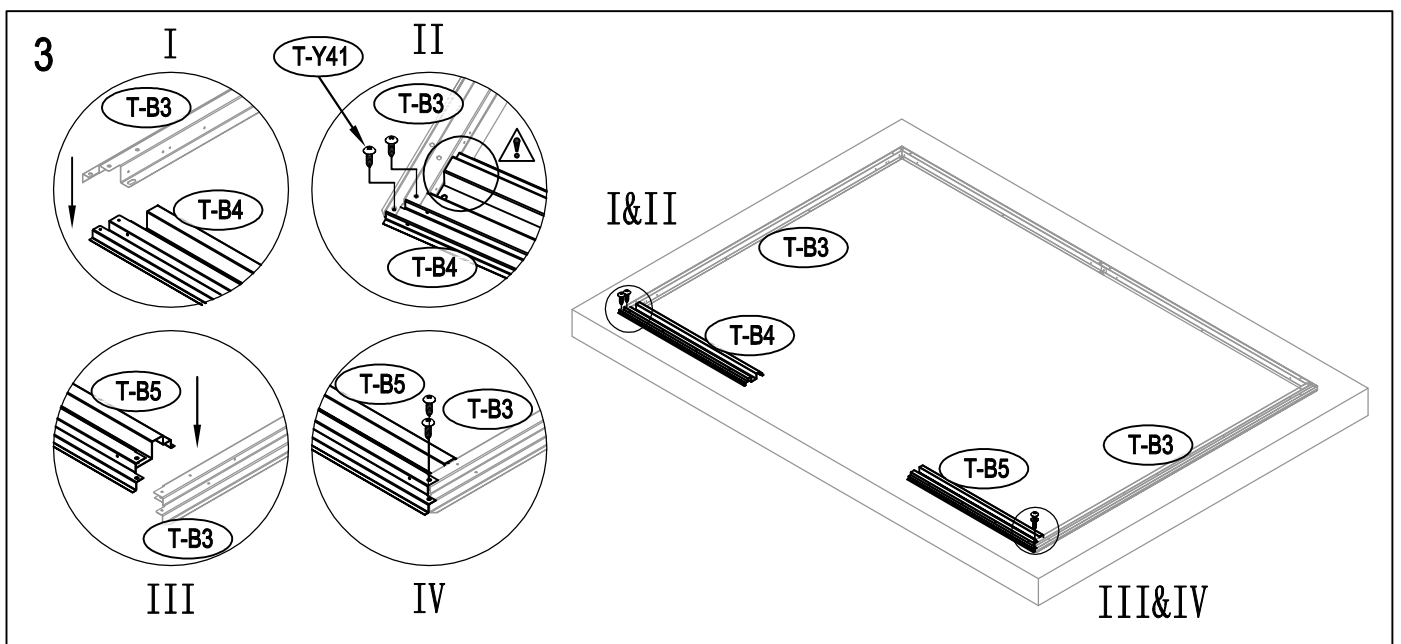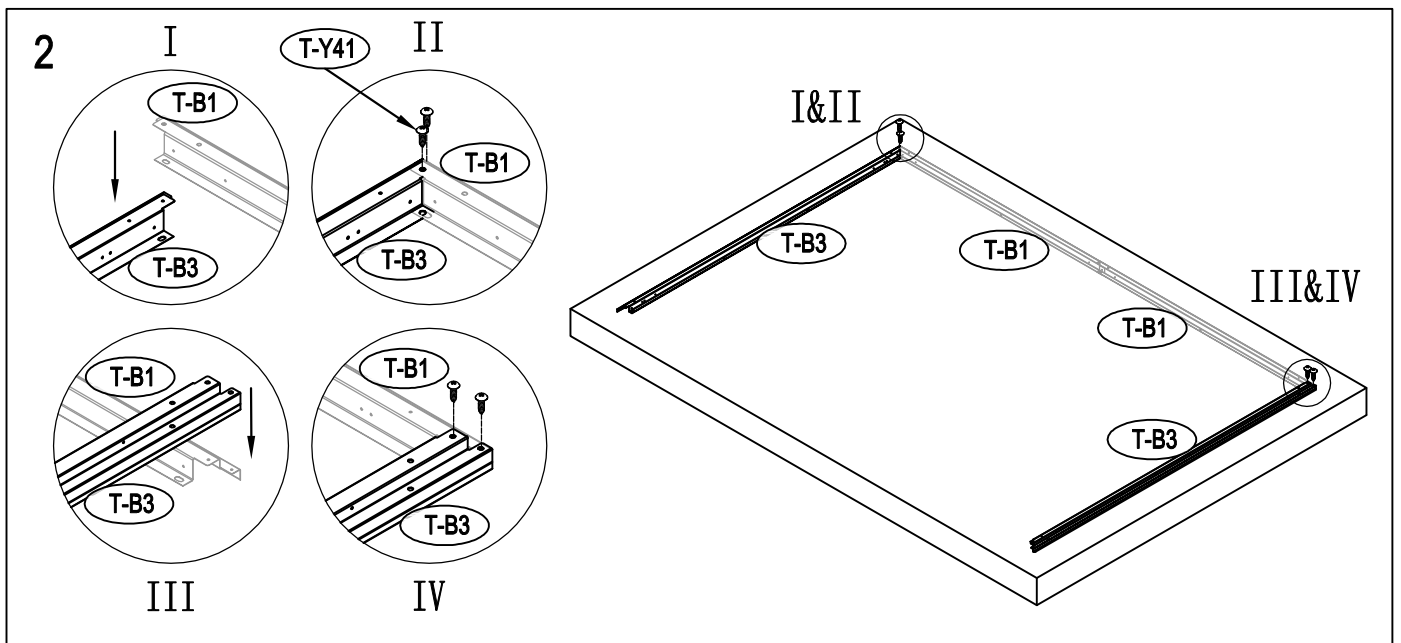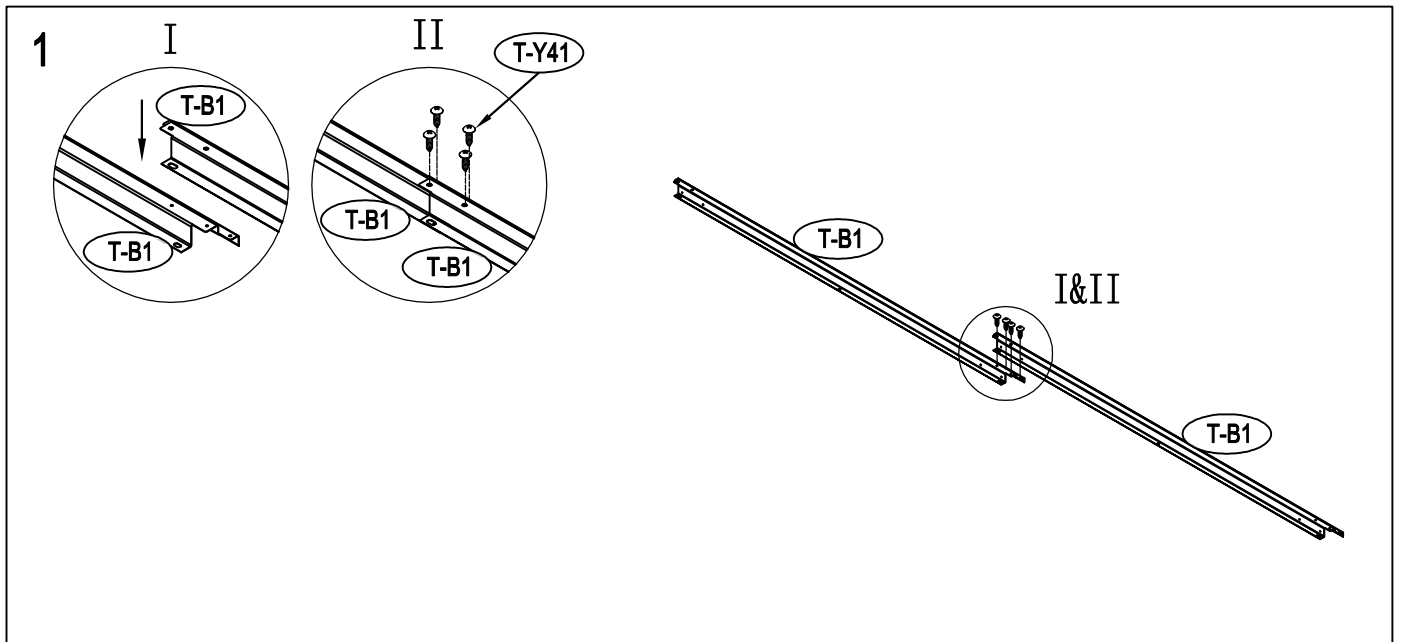

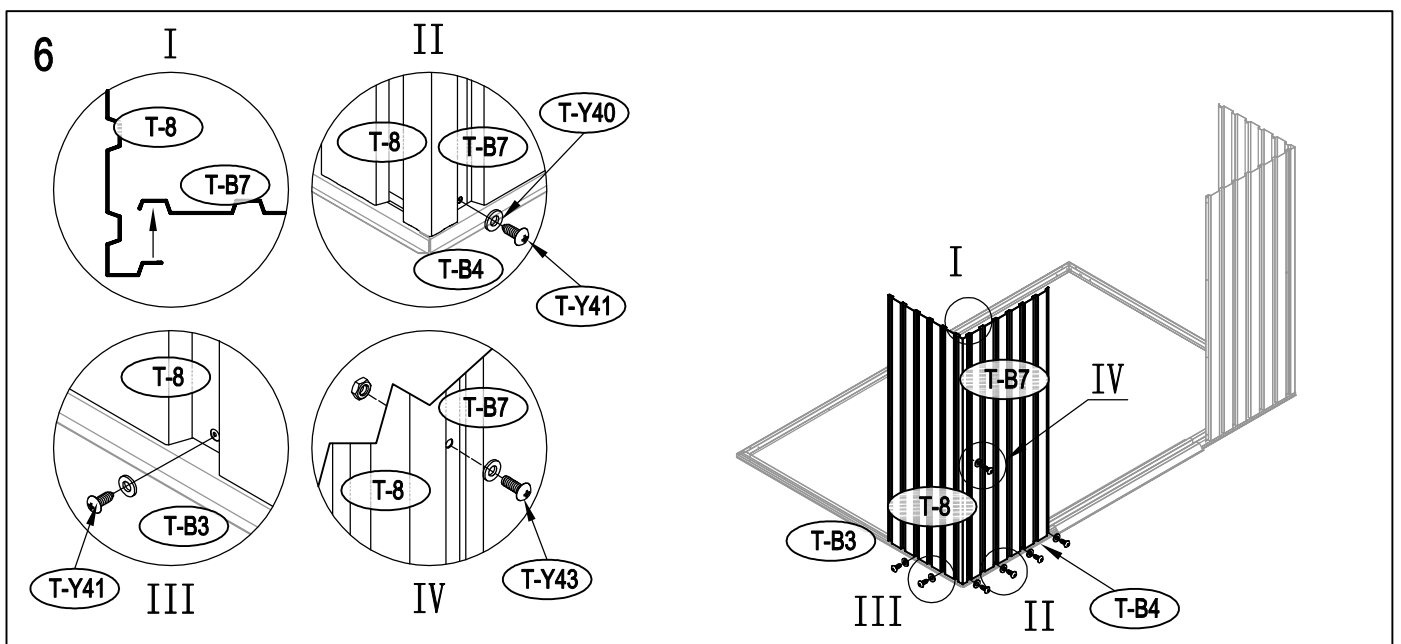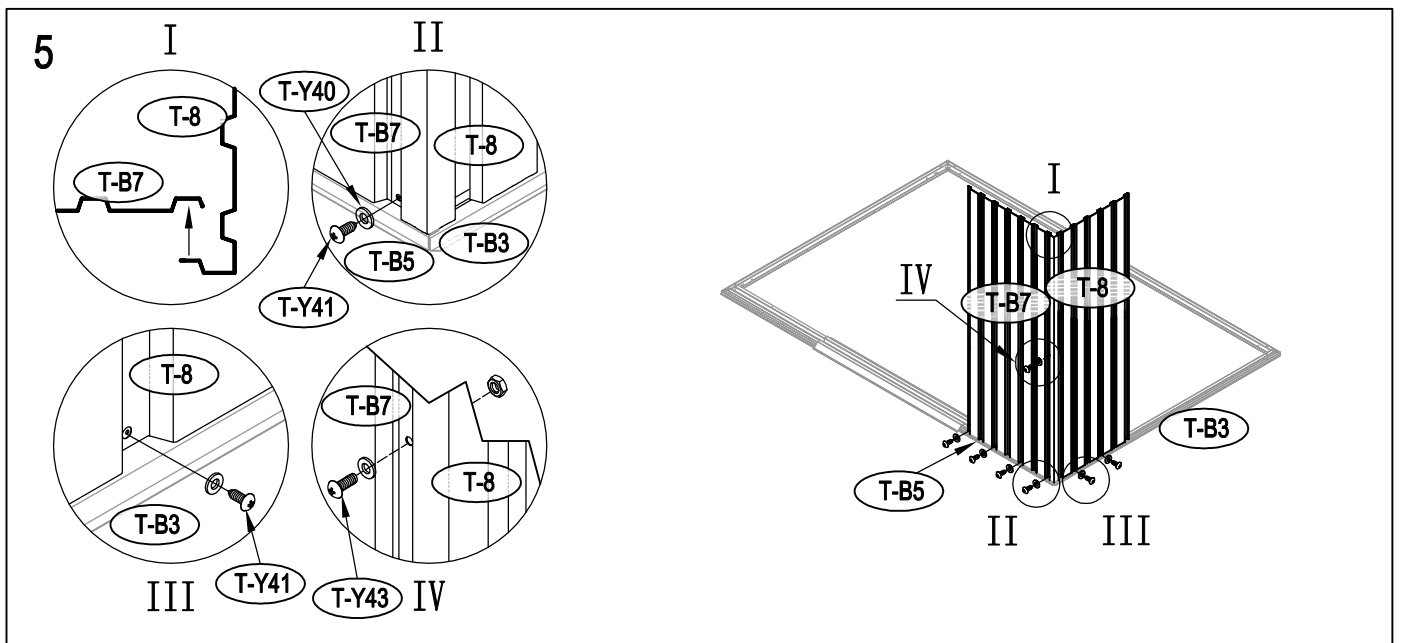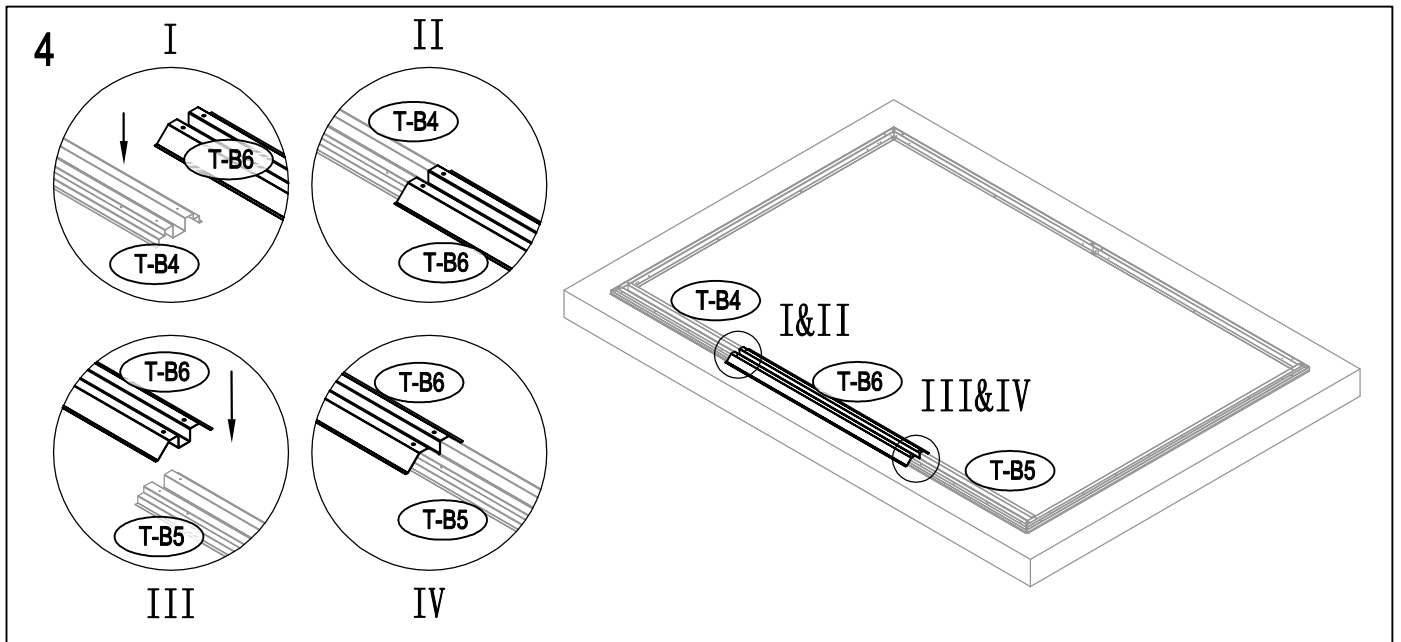


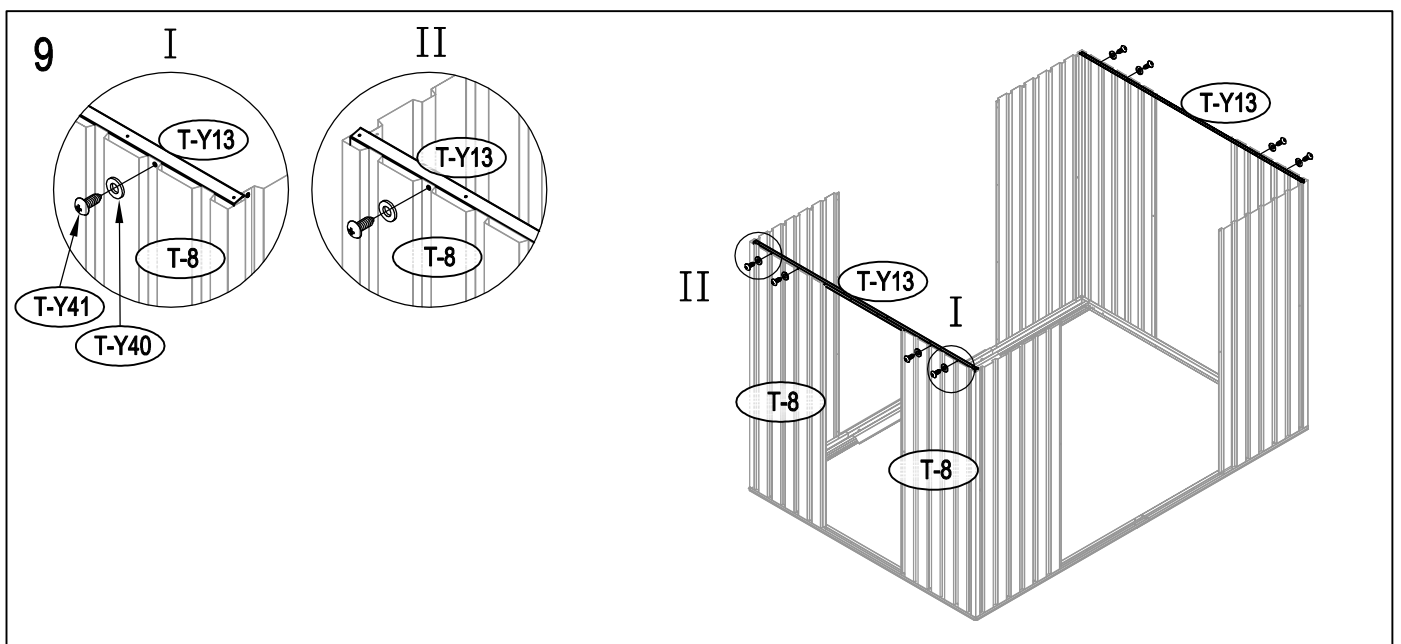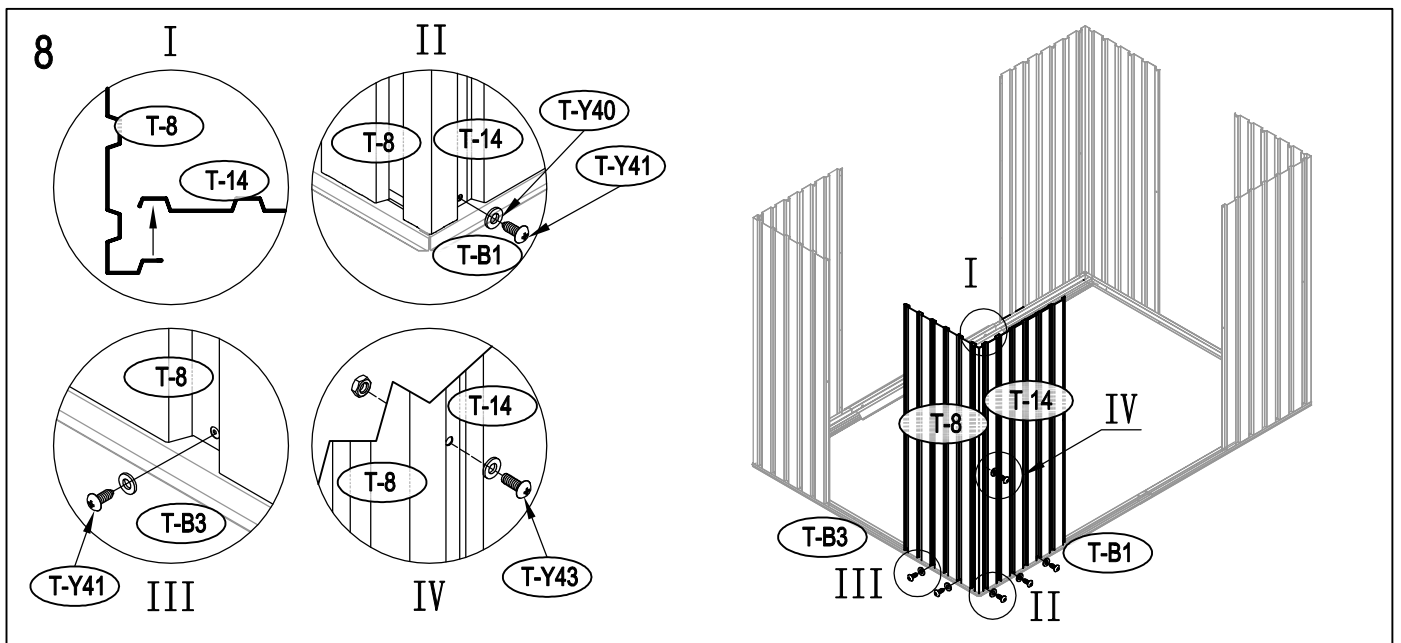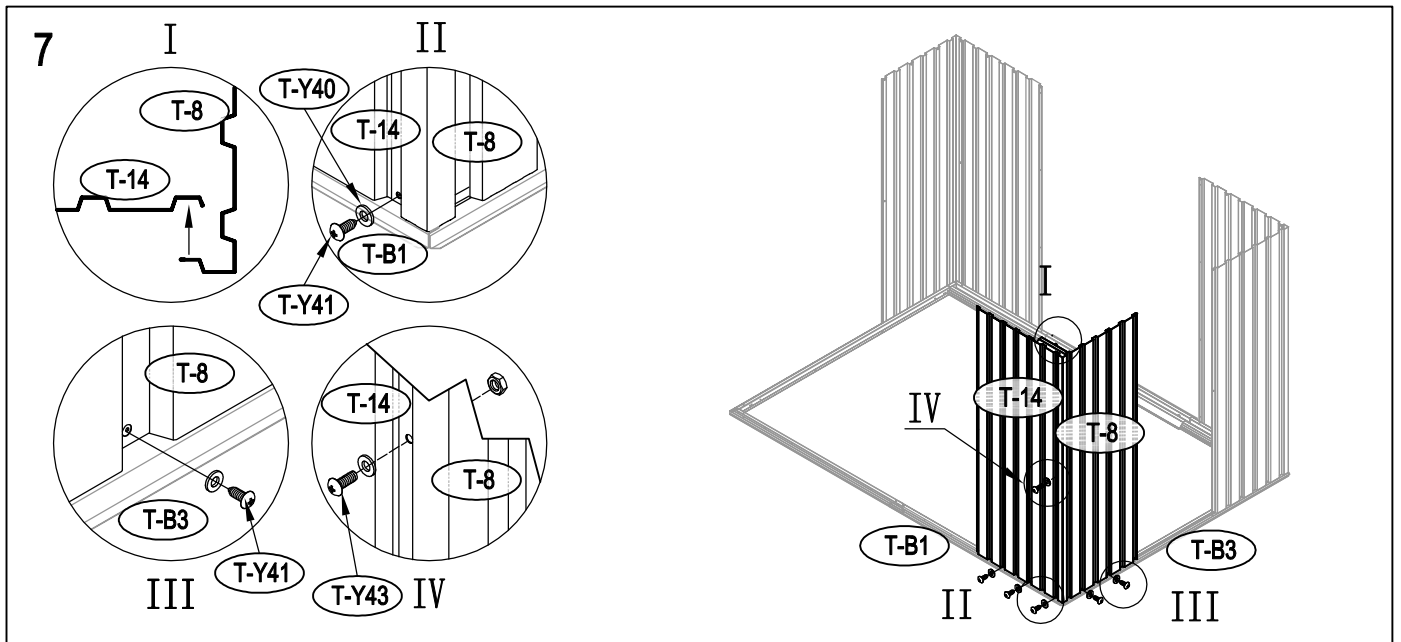


10



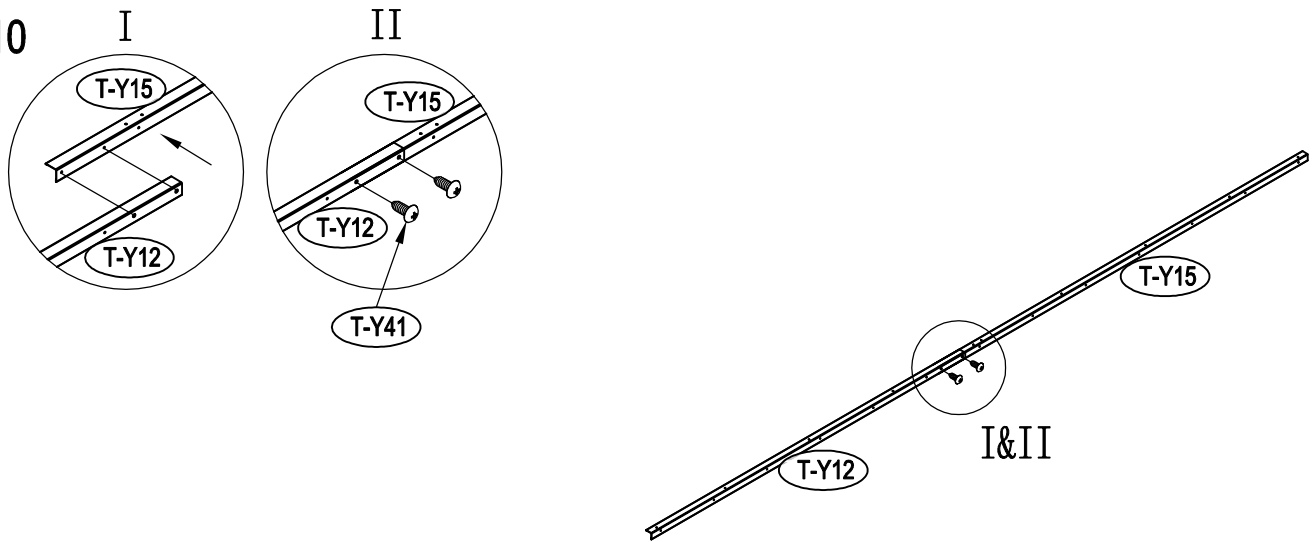


11

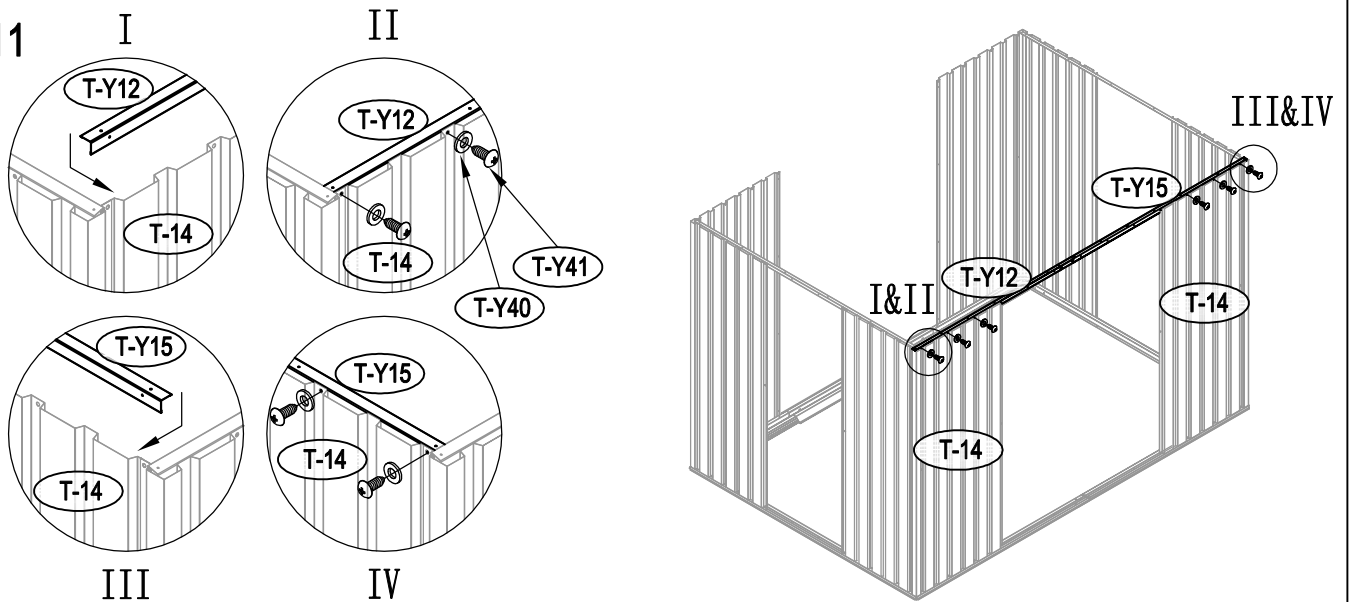

12



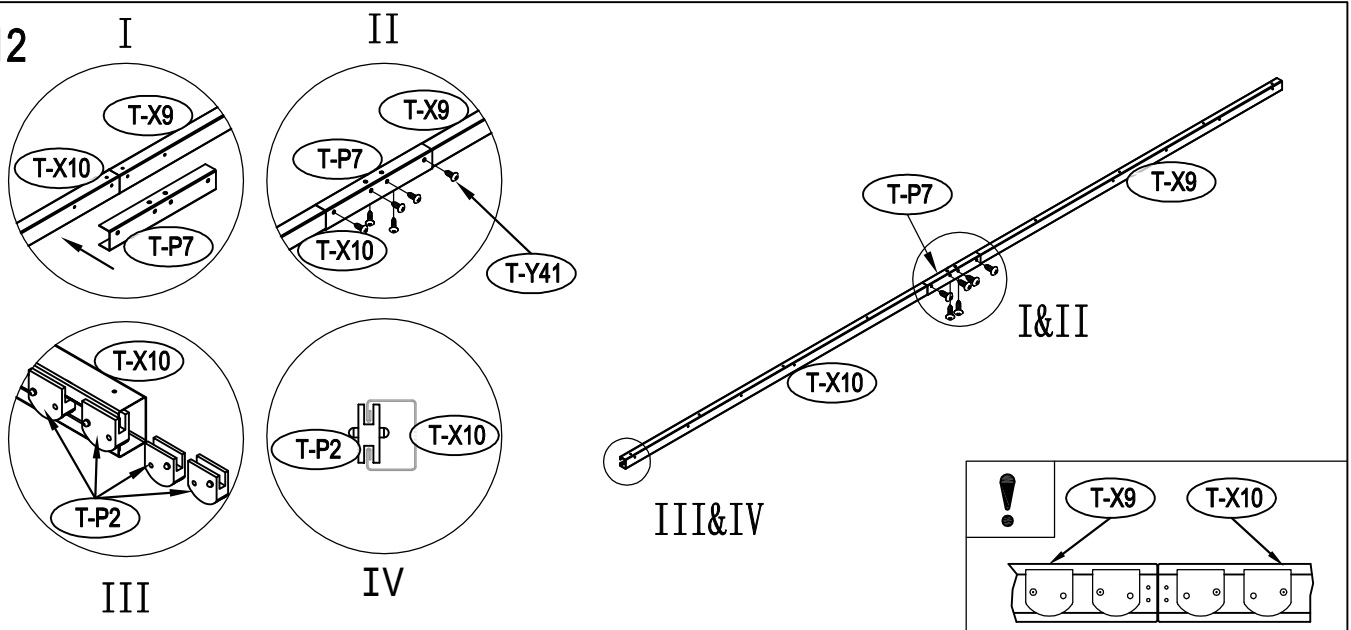


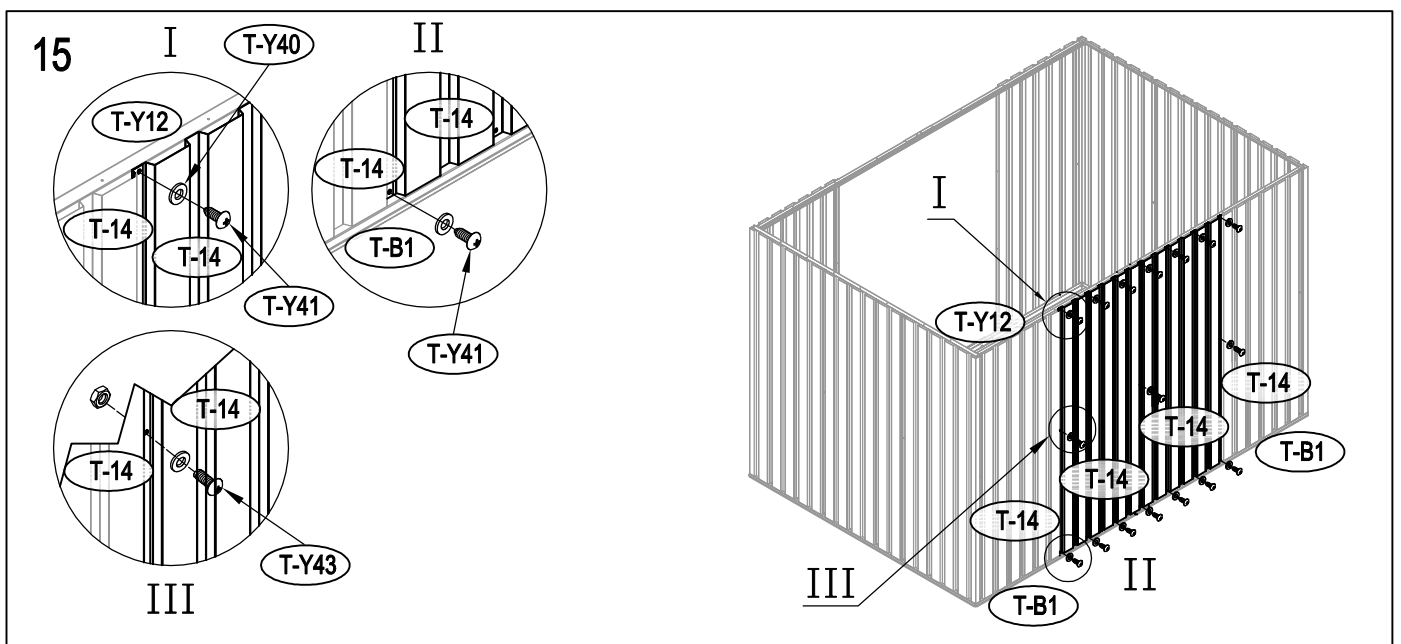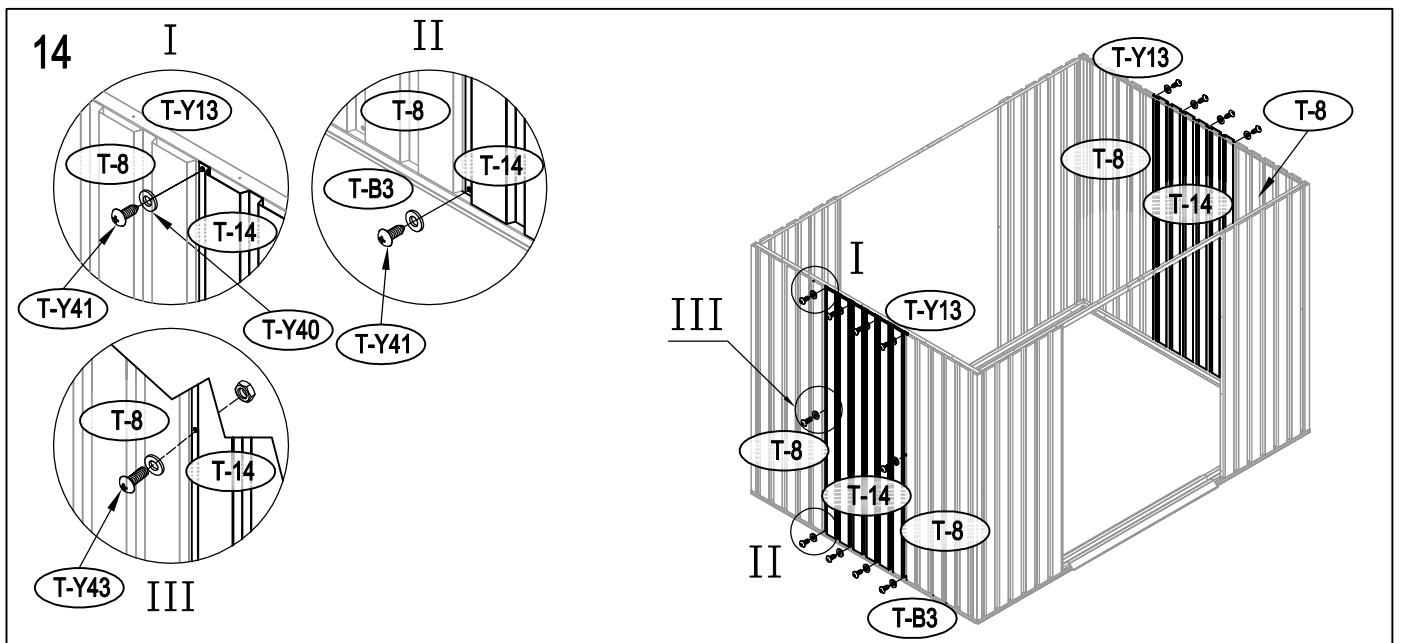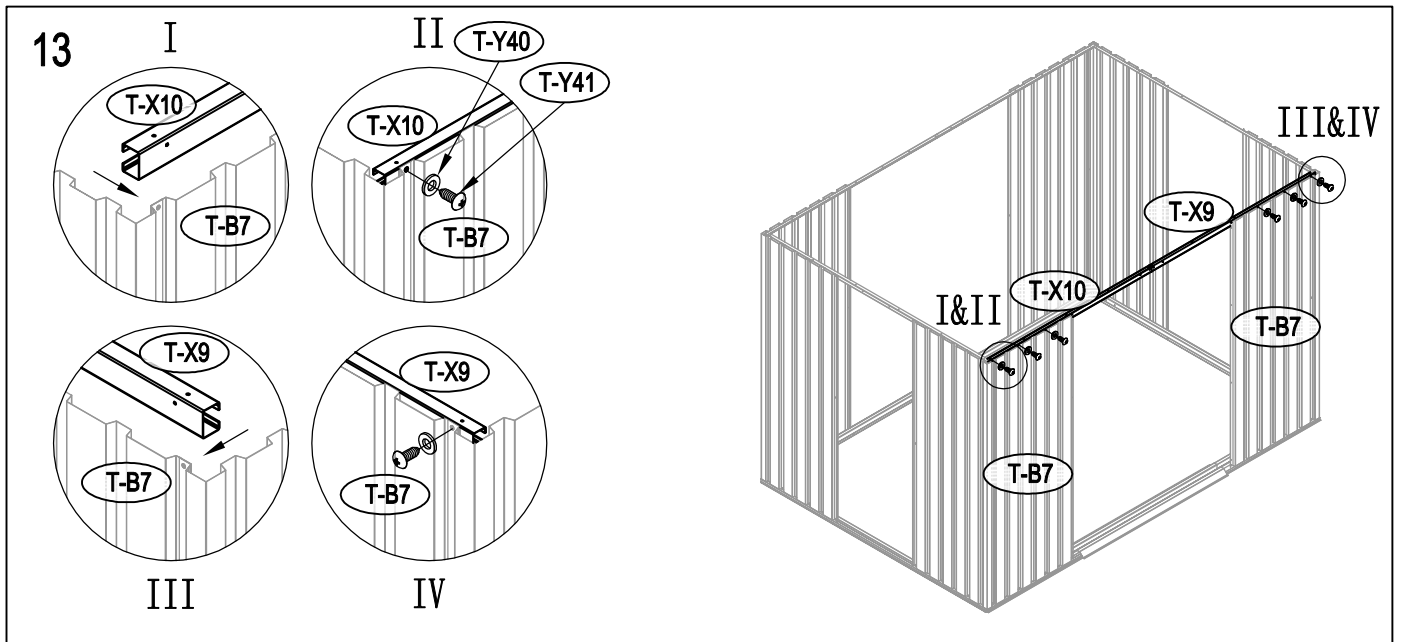

16

I




II

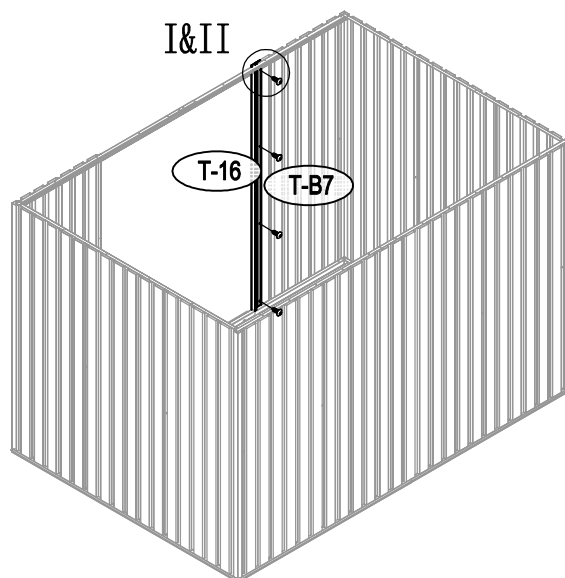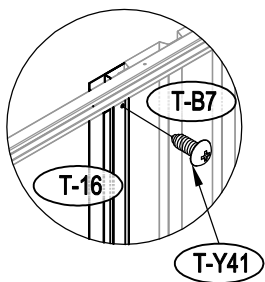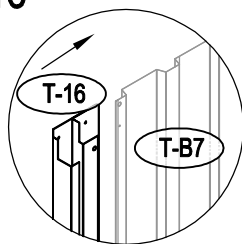

17

I




II

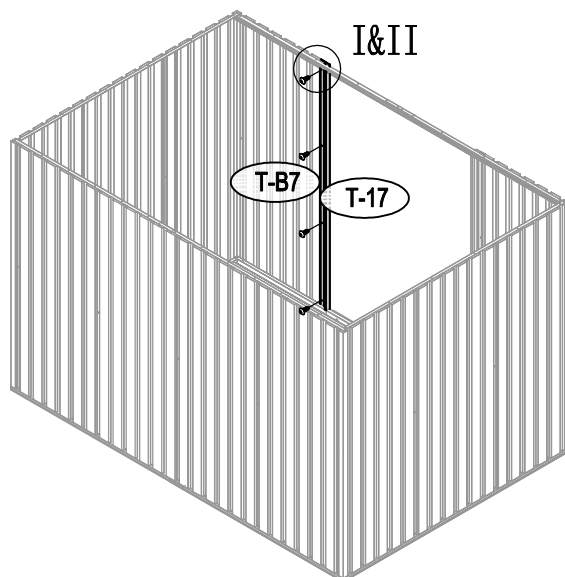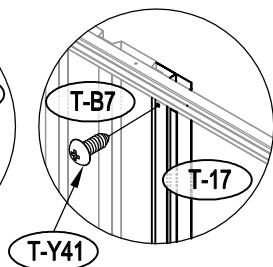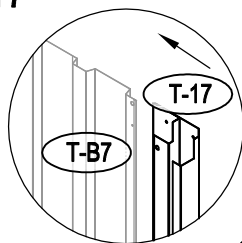



18

I



II

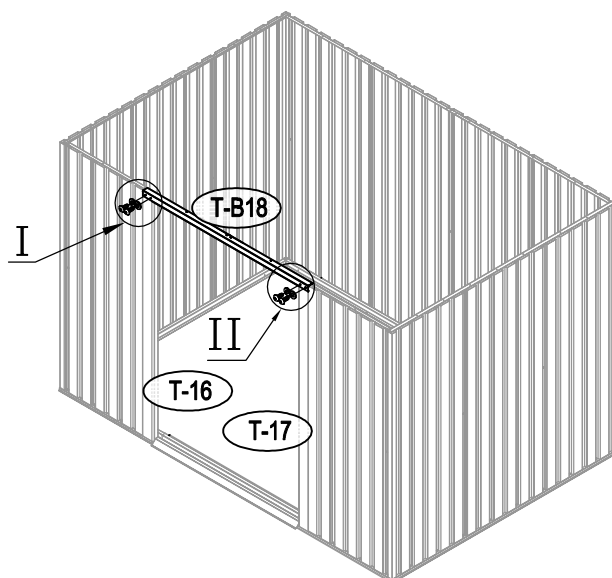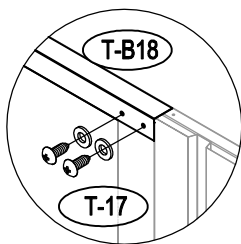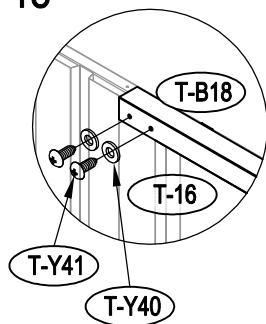



19

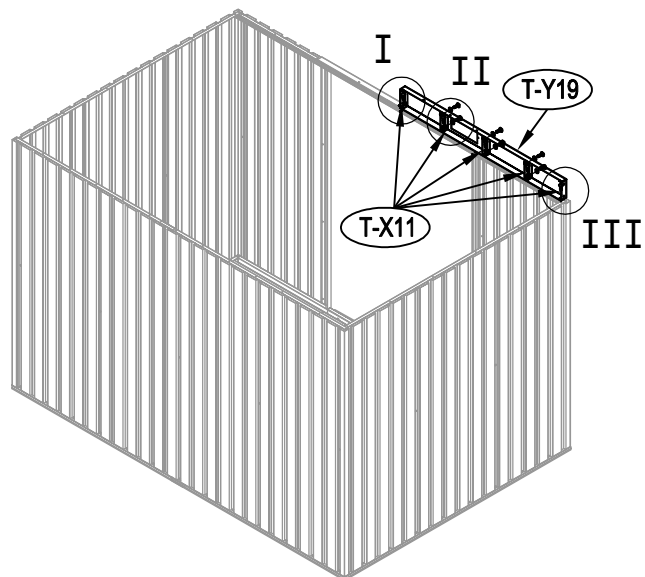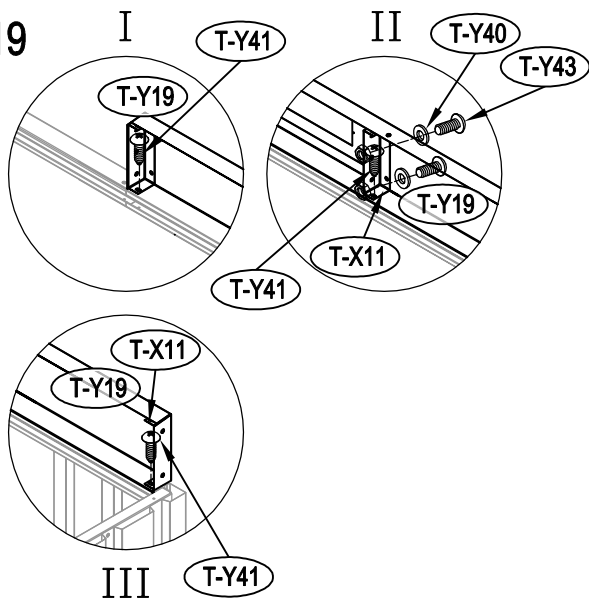



20

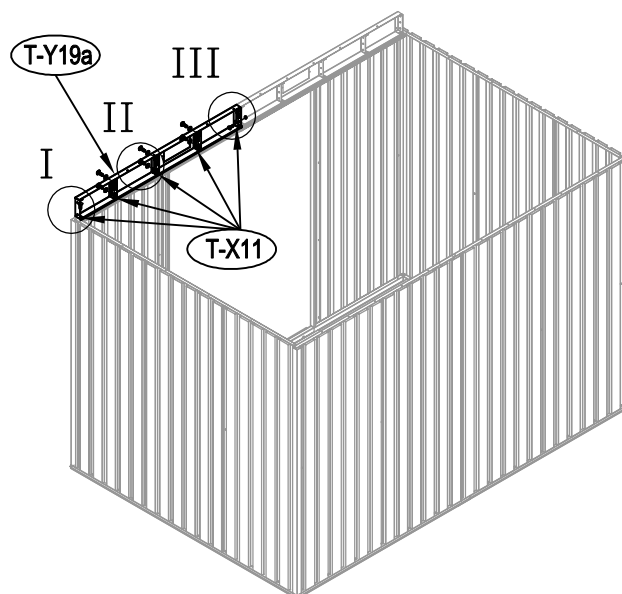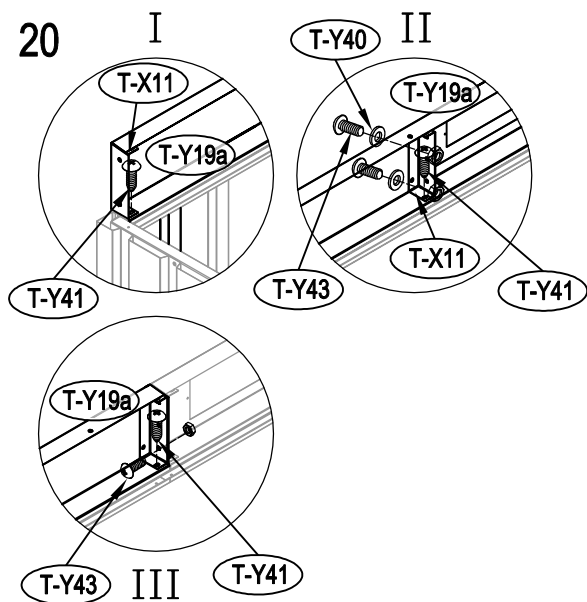



21

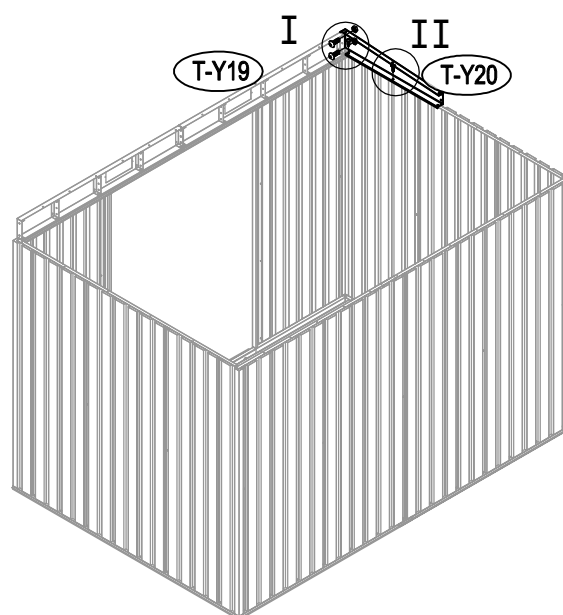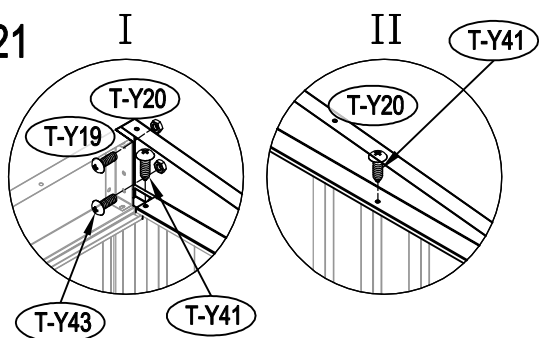



22

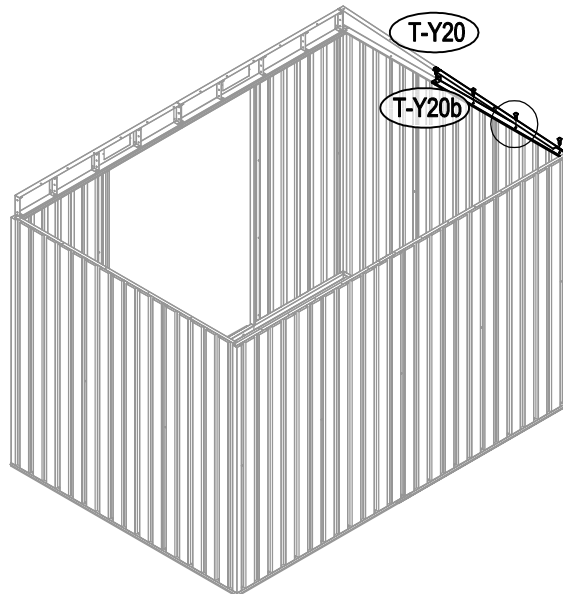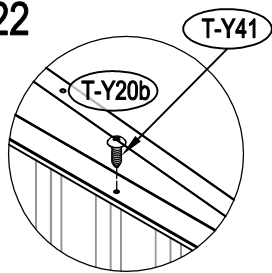



23

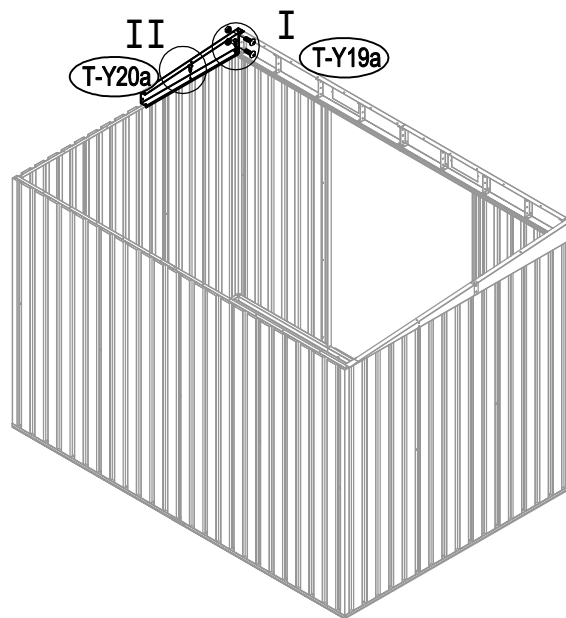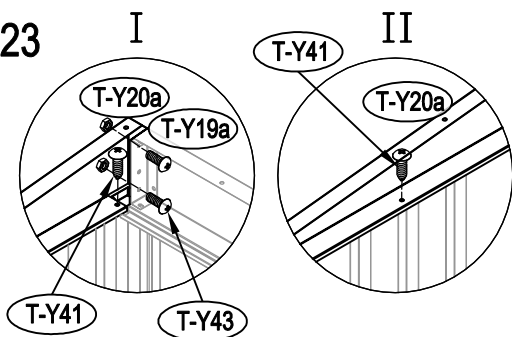



24

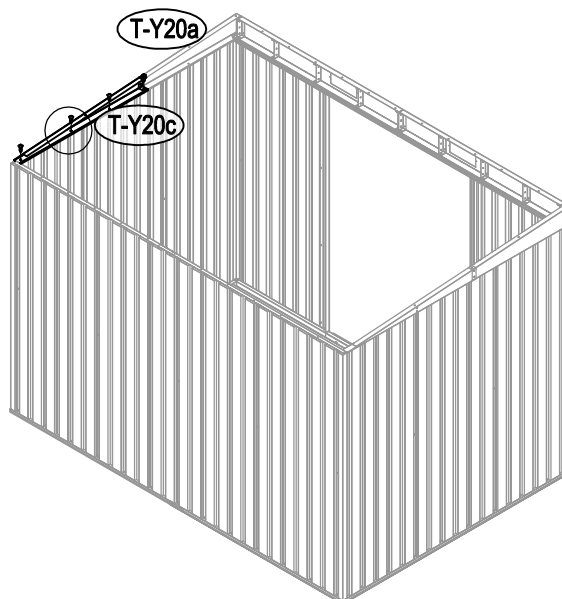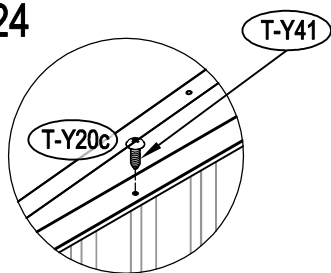



25

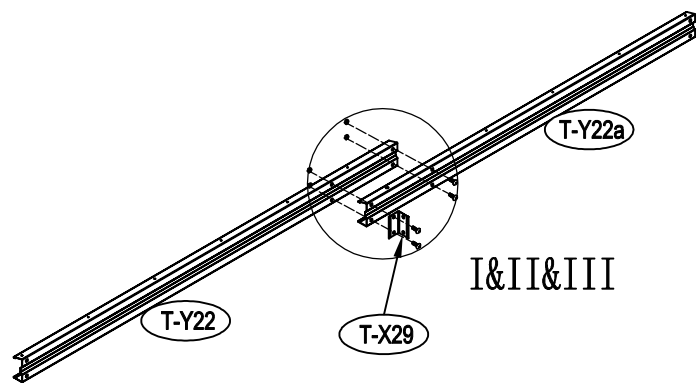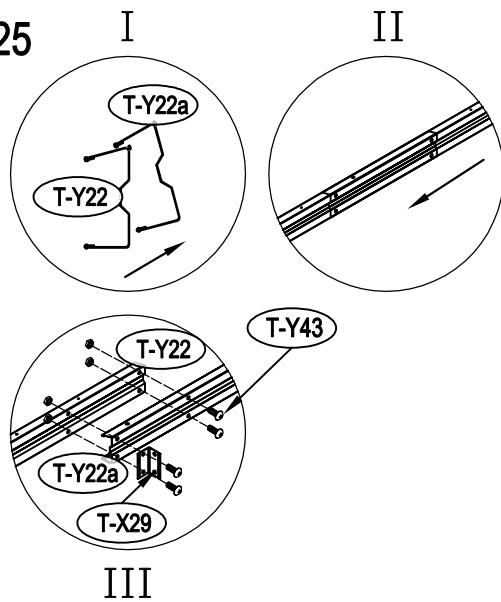



26

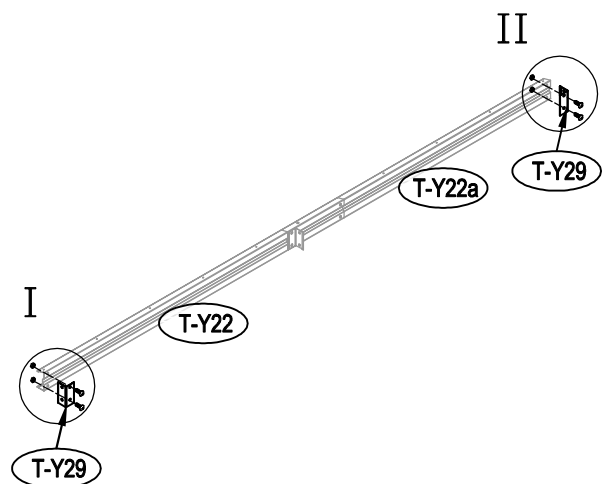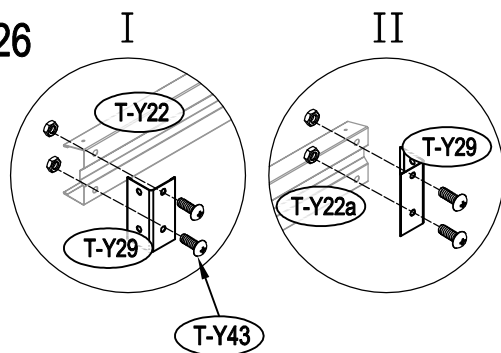



27

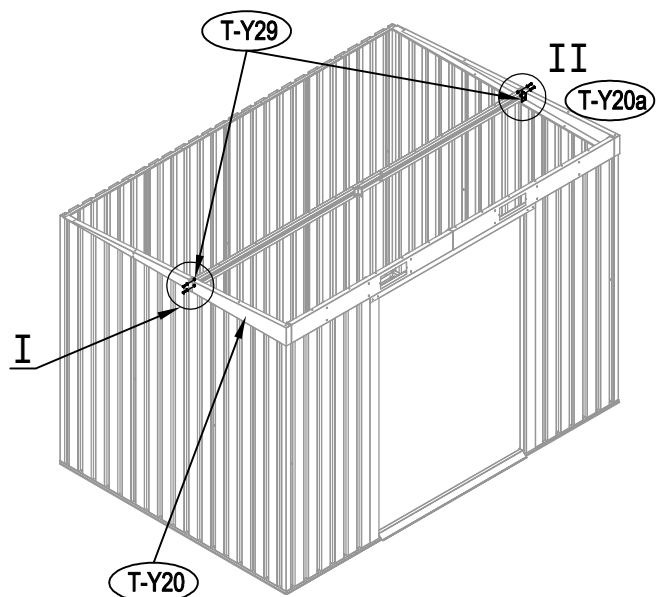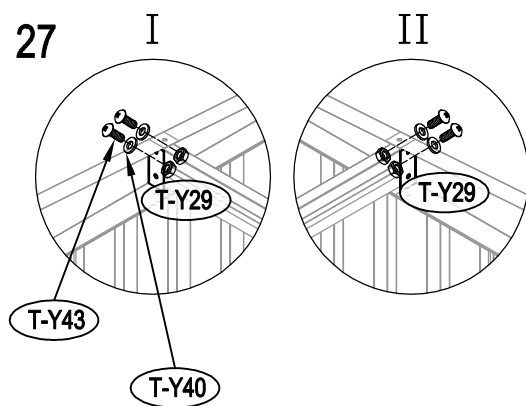



28


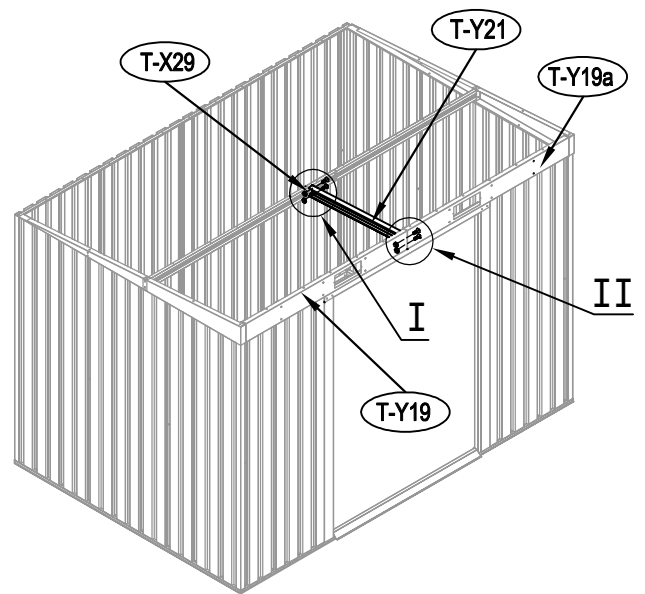
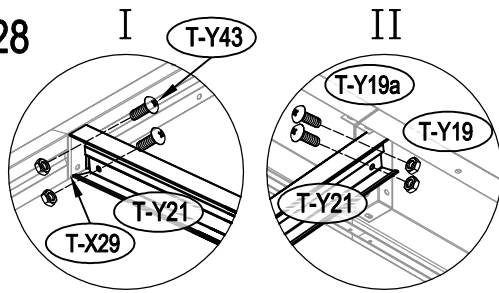





29


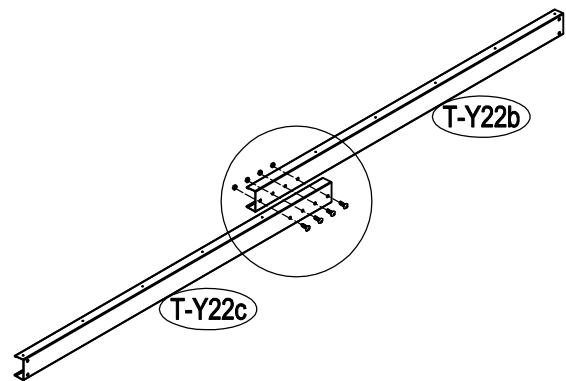
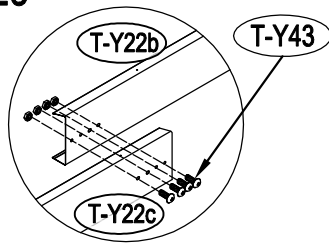


30

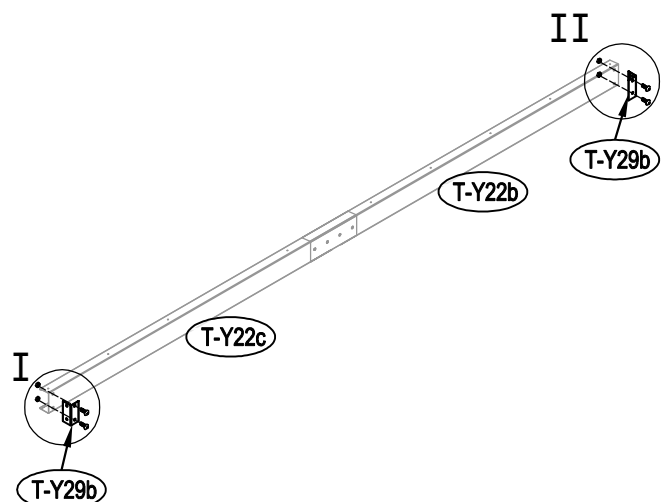
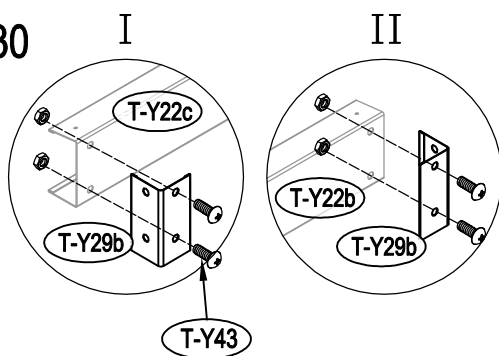


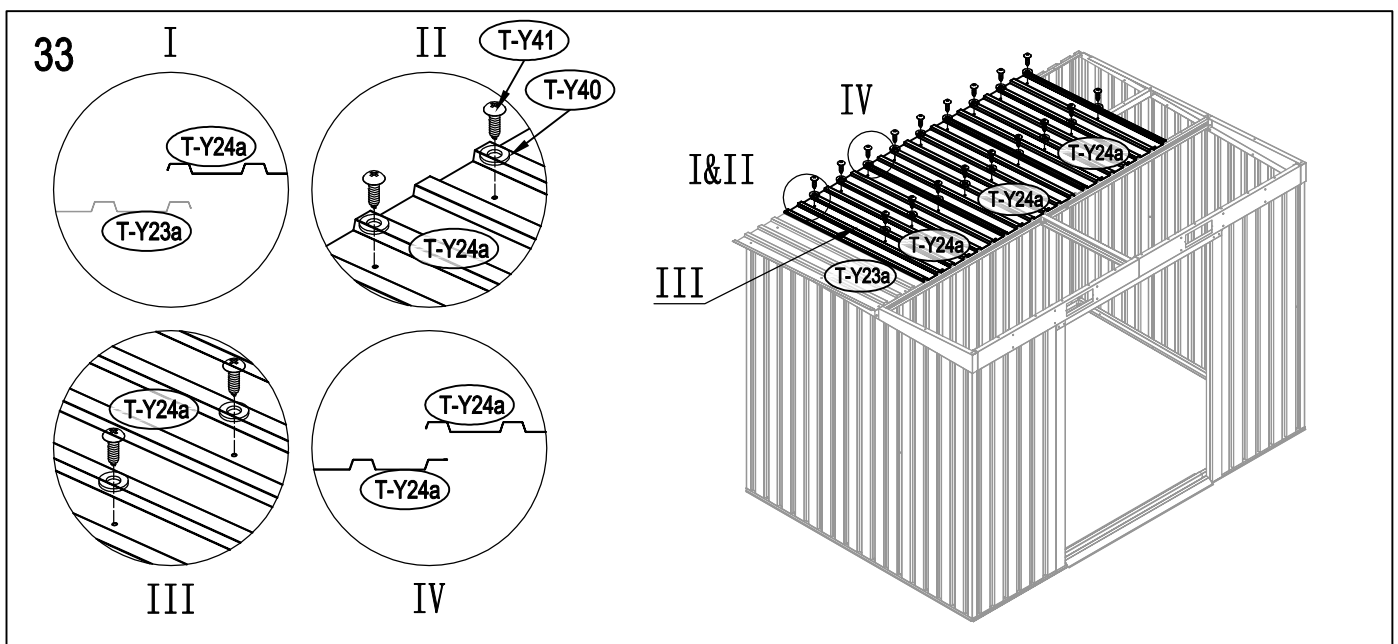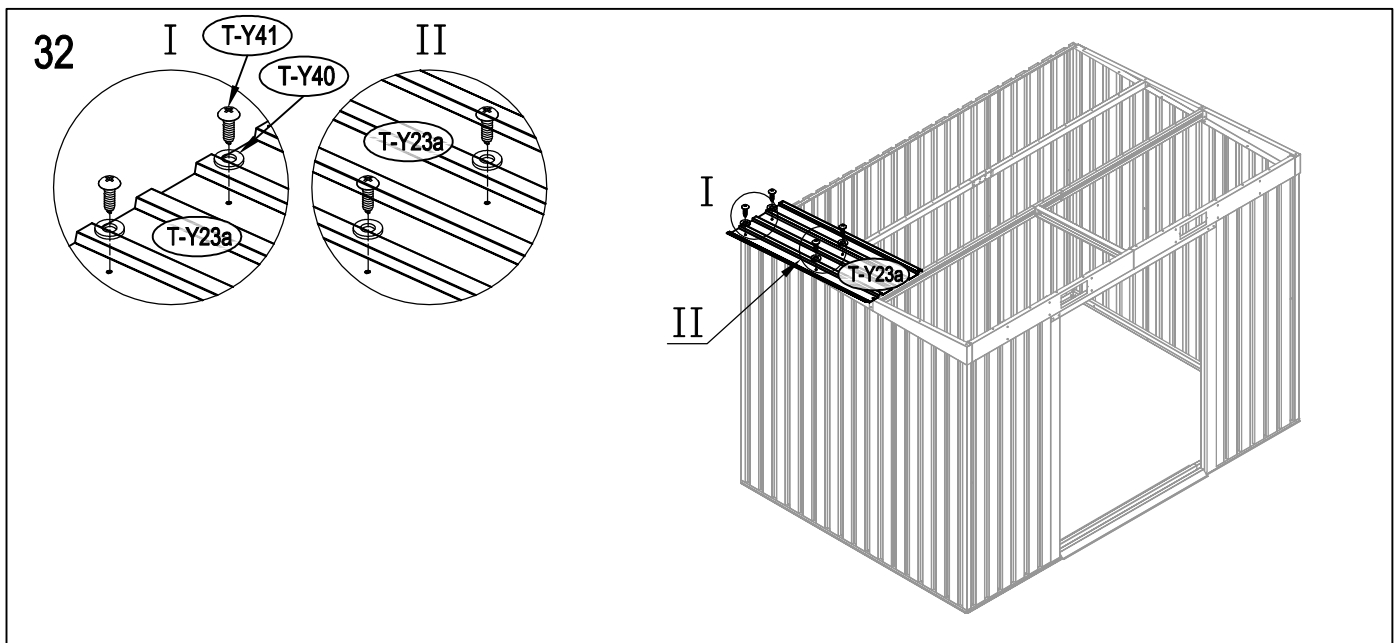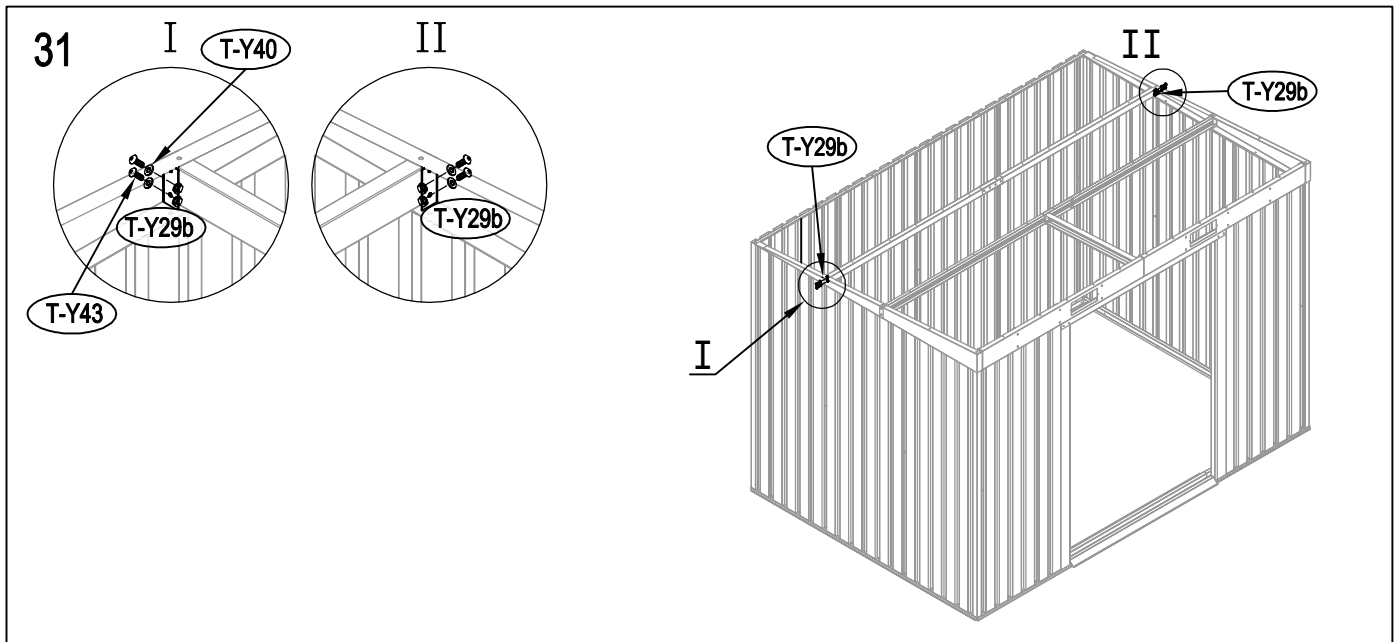

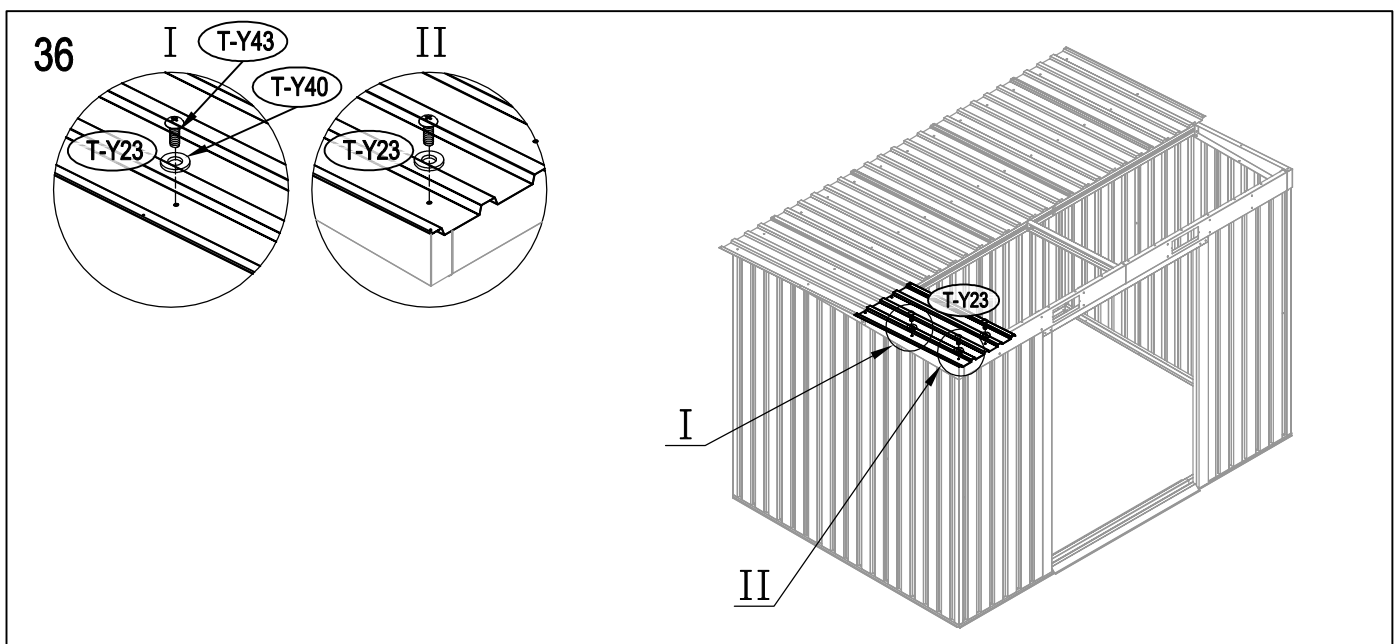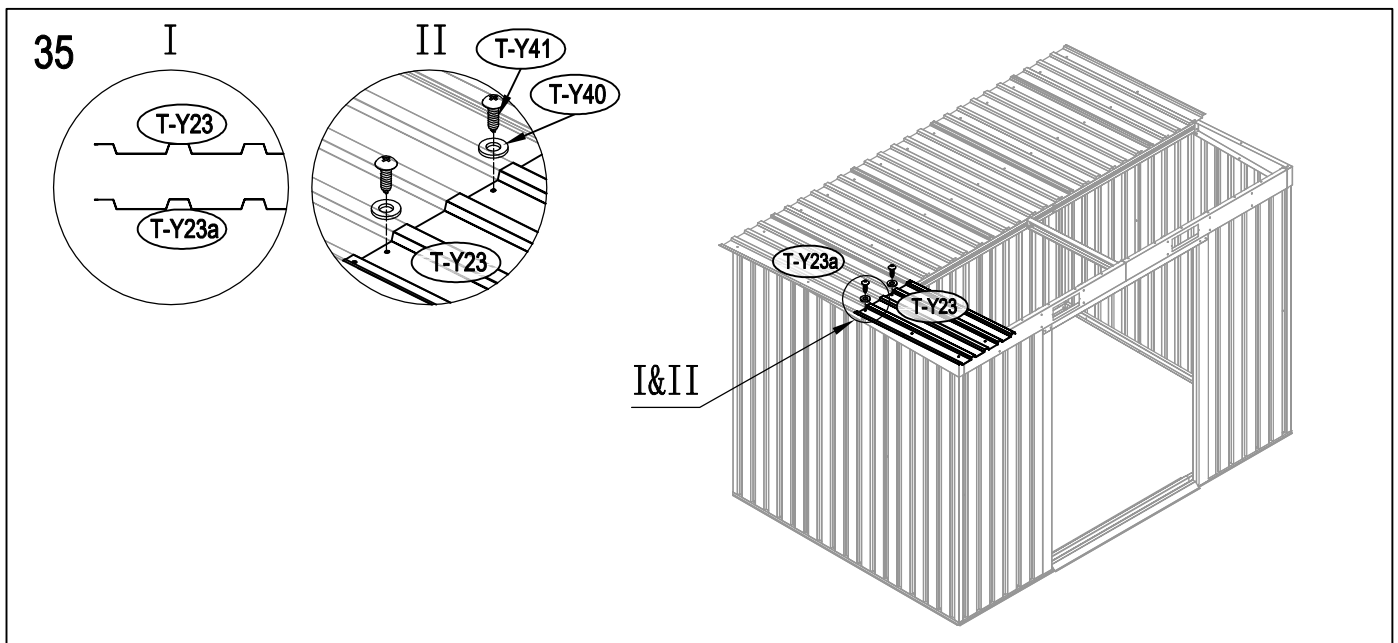
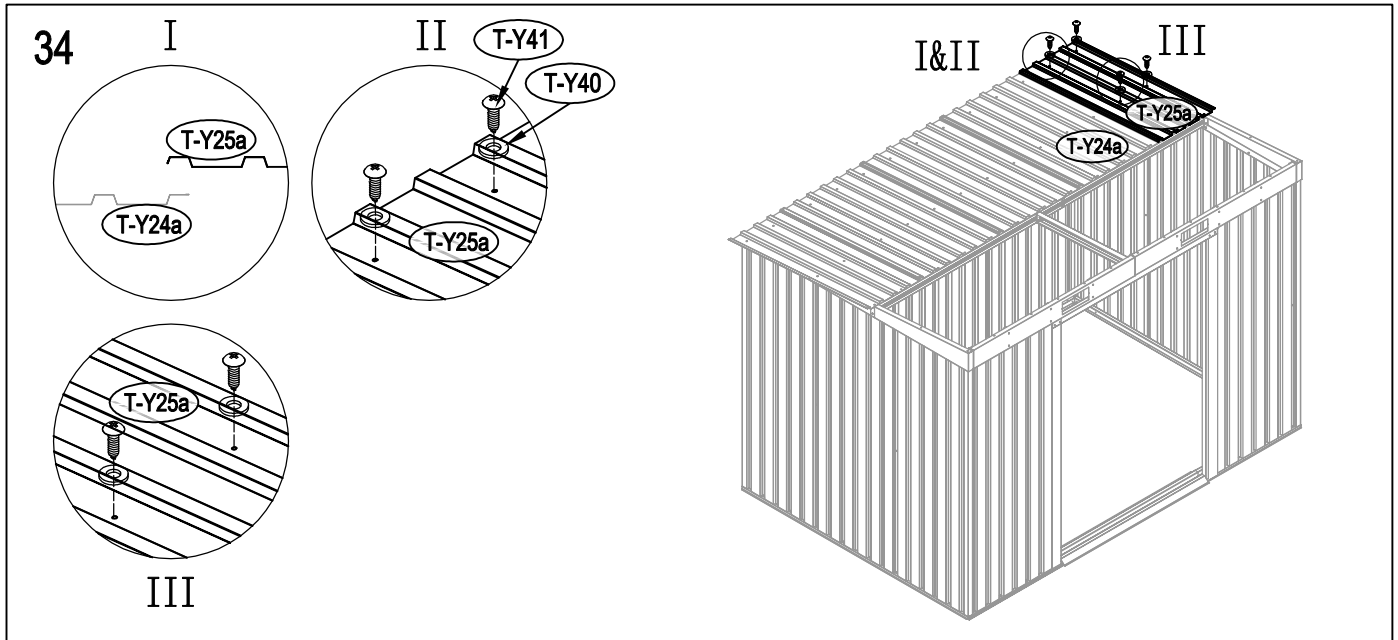


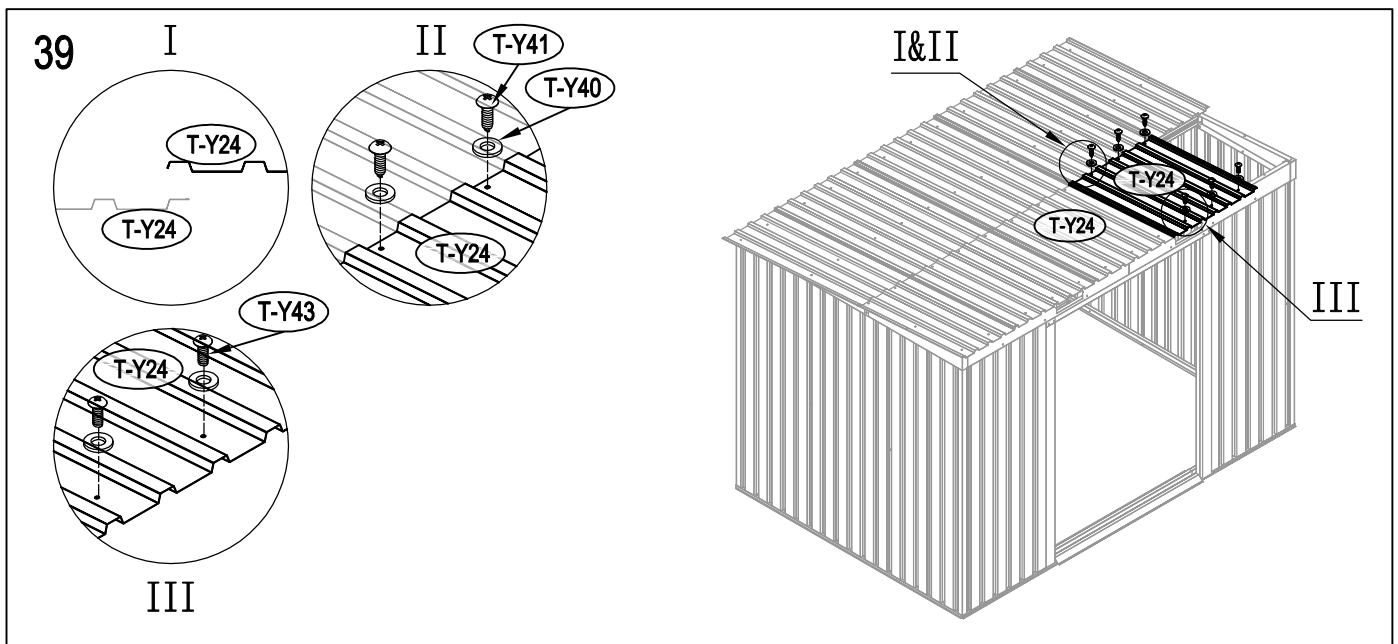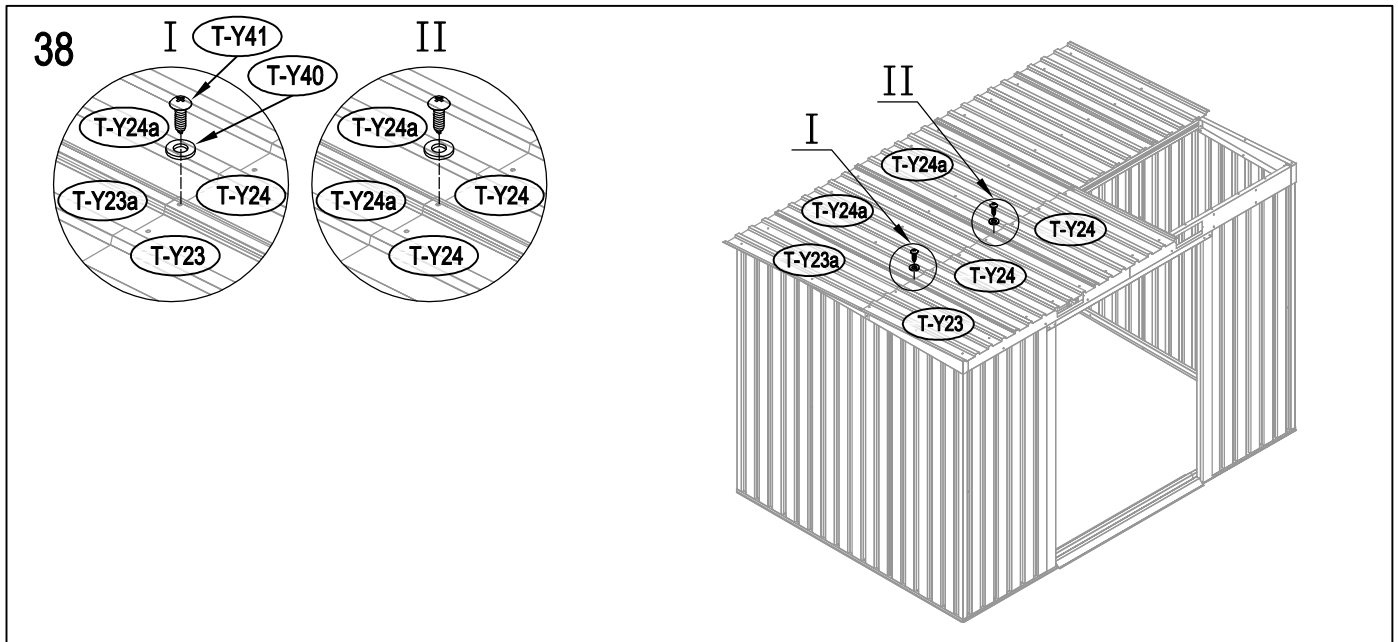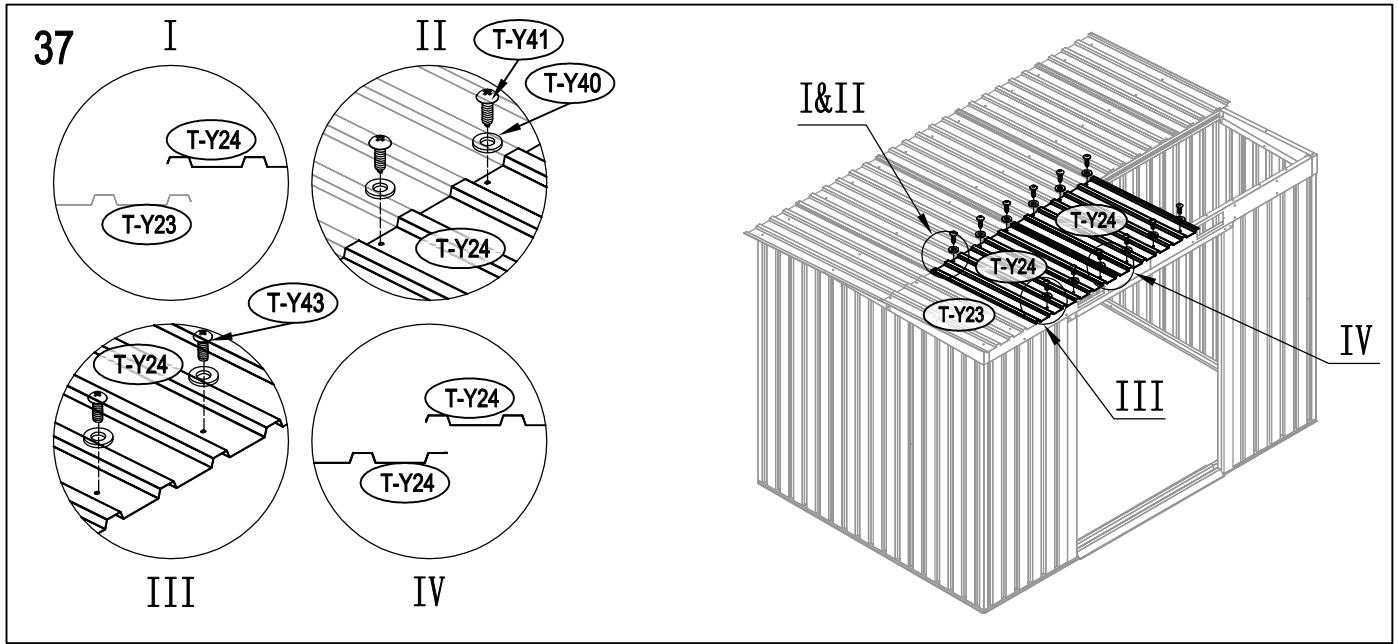



40

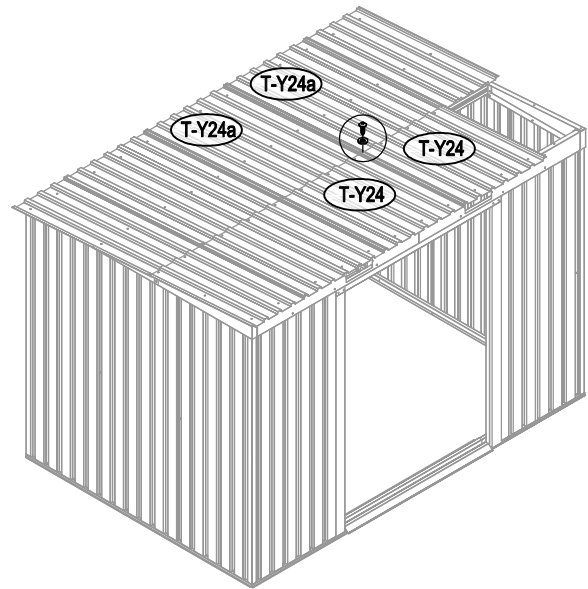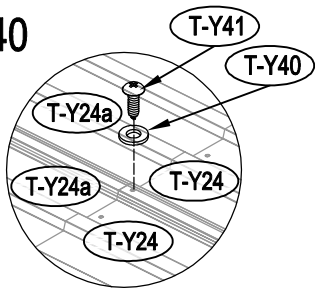



41

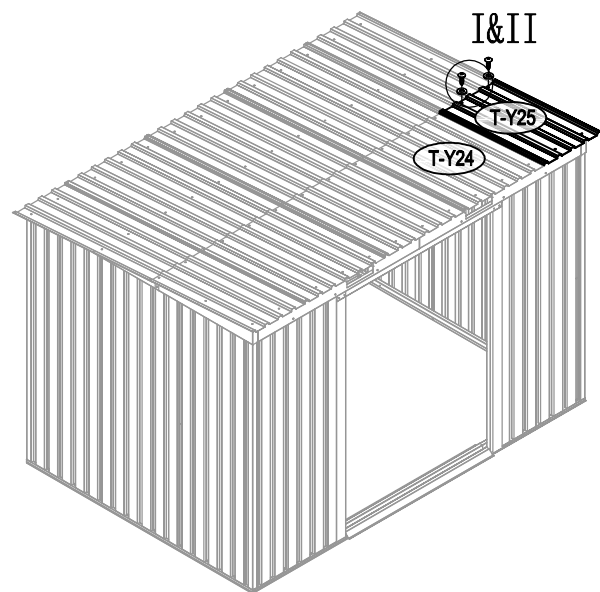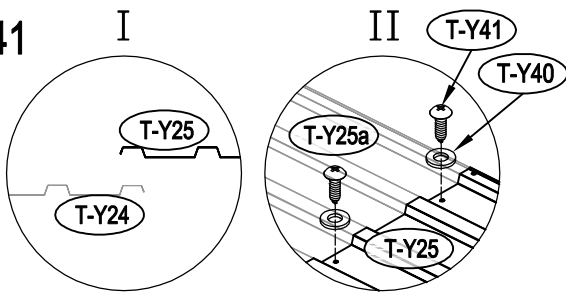



42

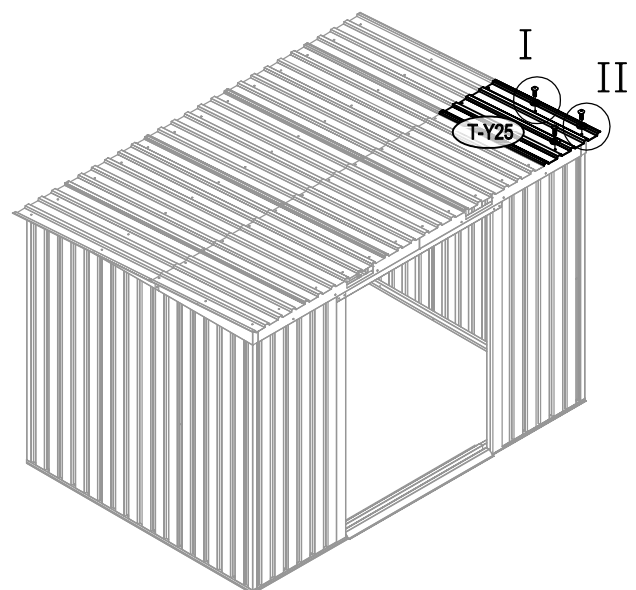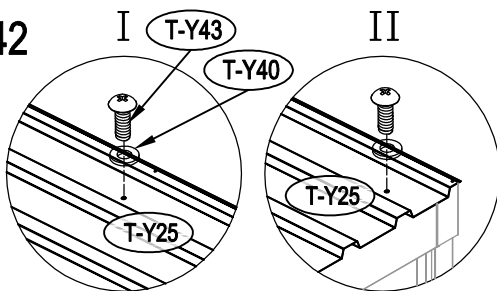



43


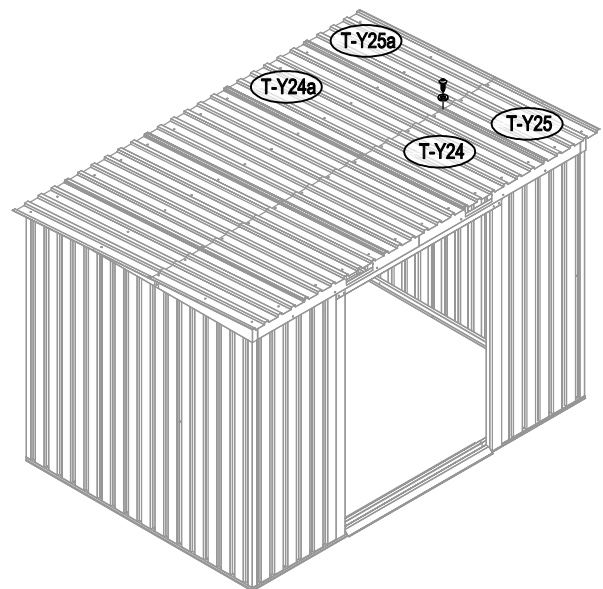
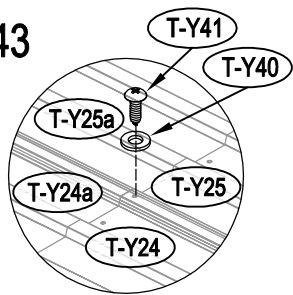


44

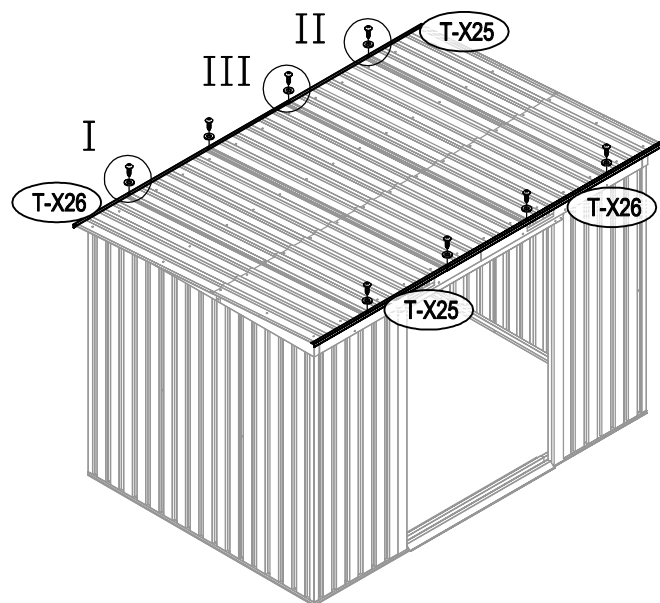
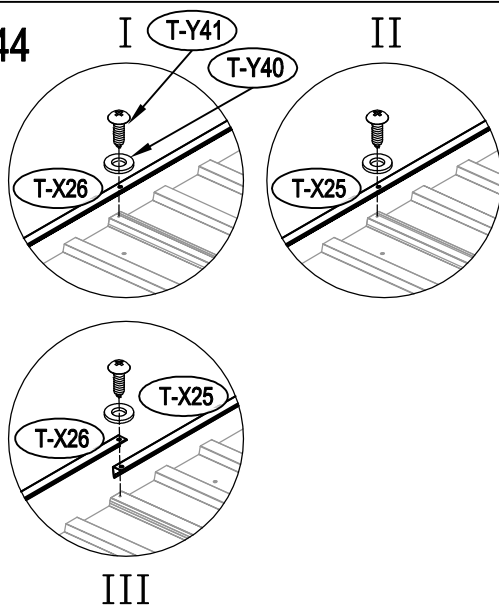


45

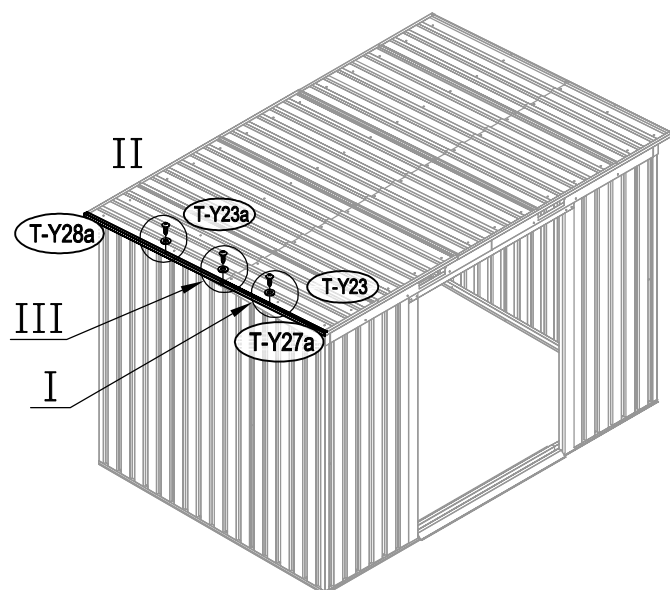
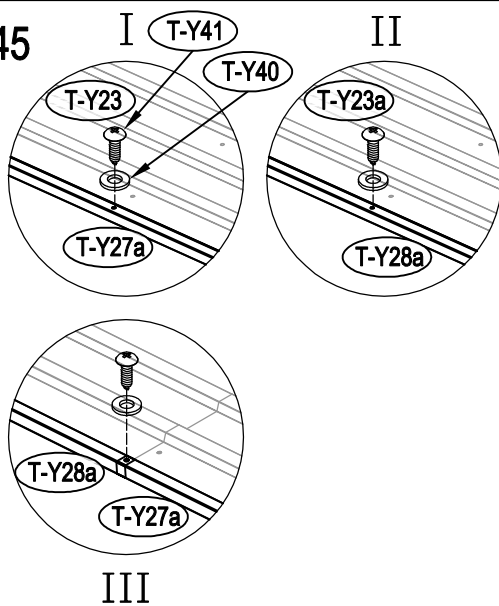


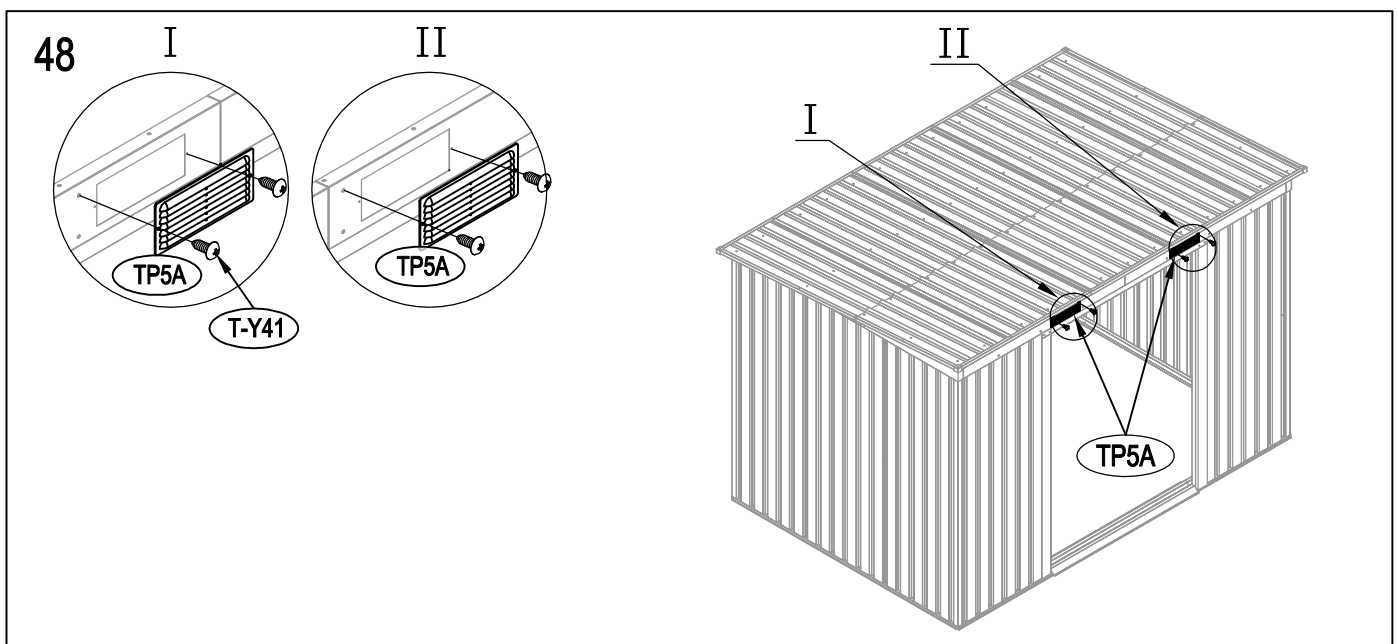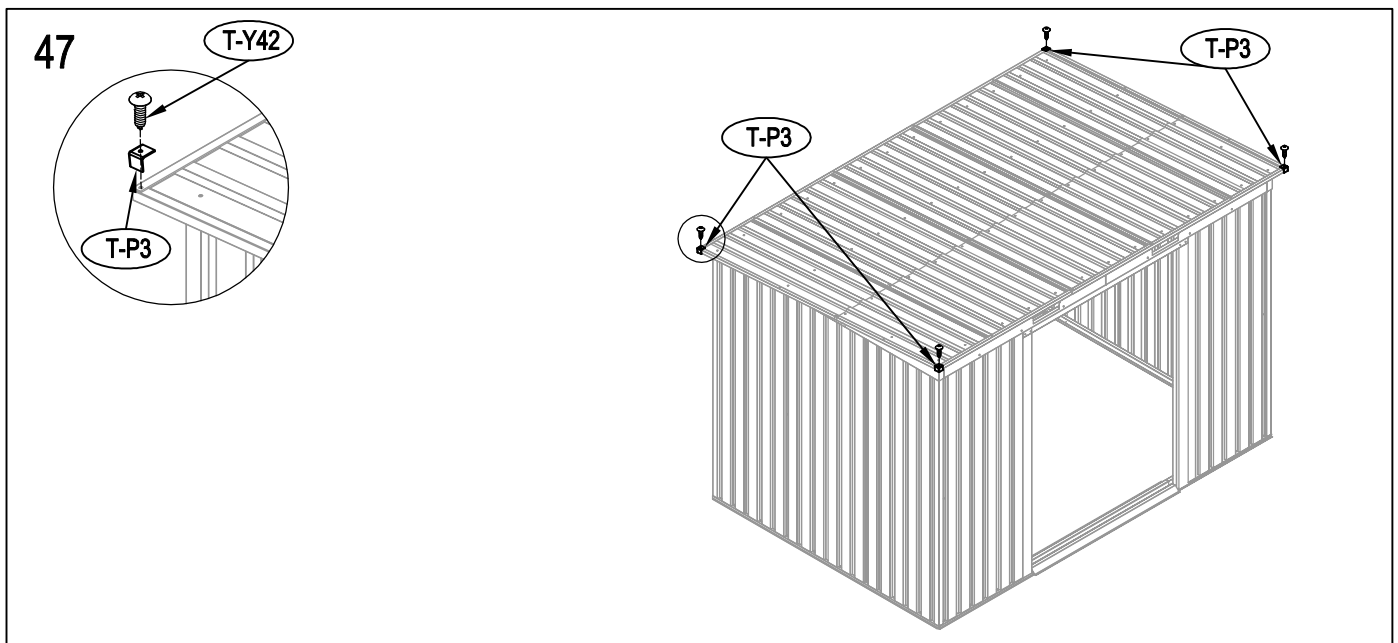
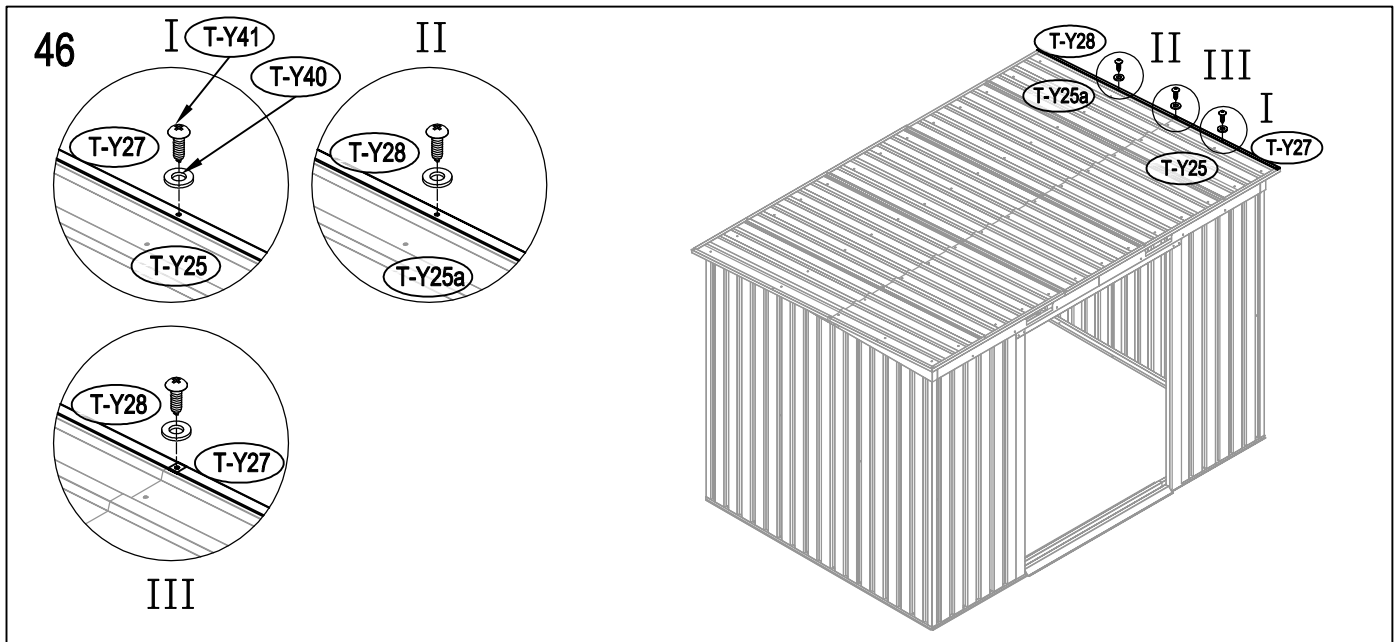


49


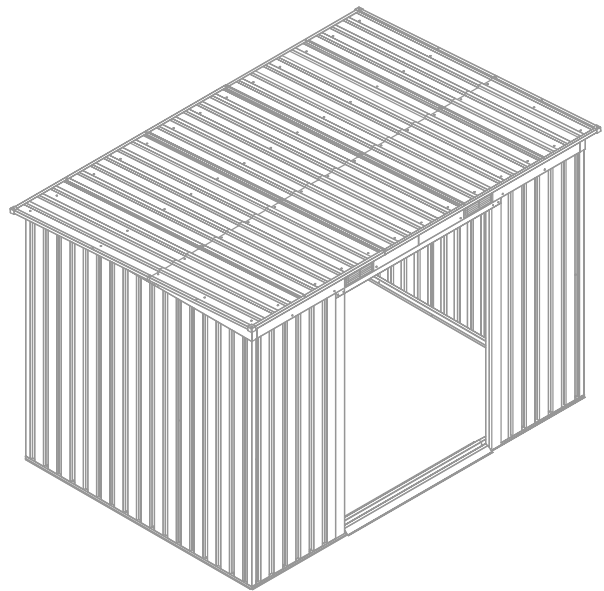
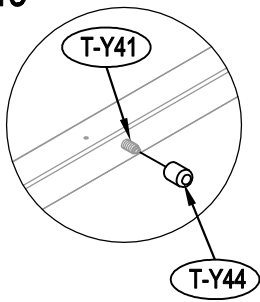


50


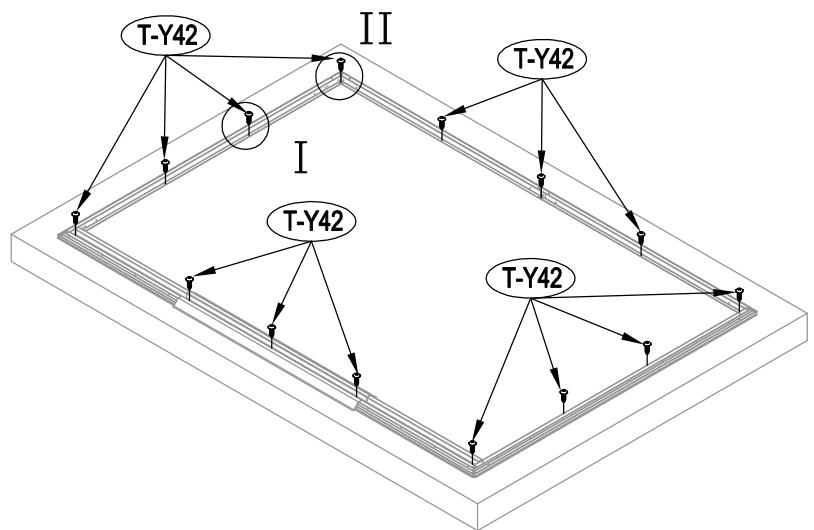
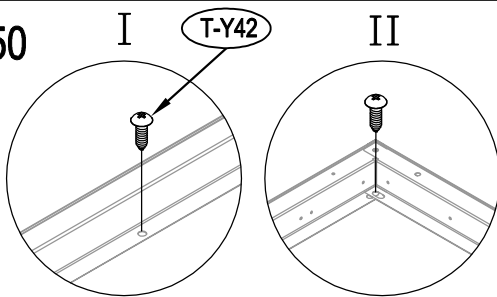


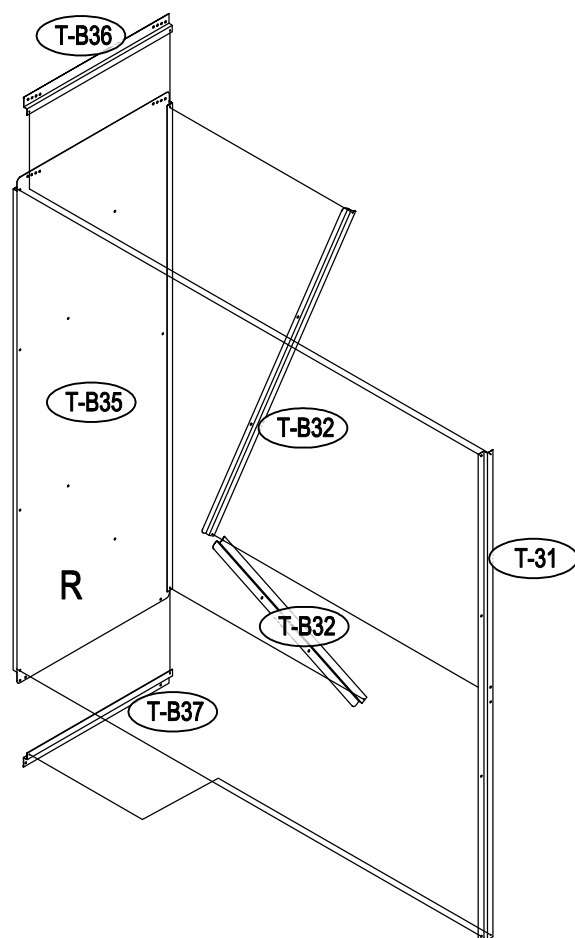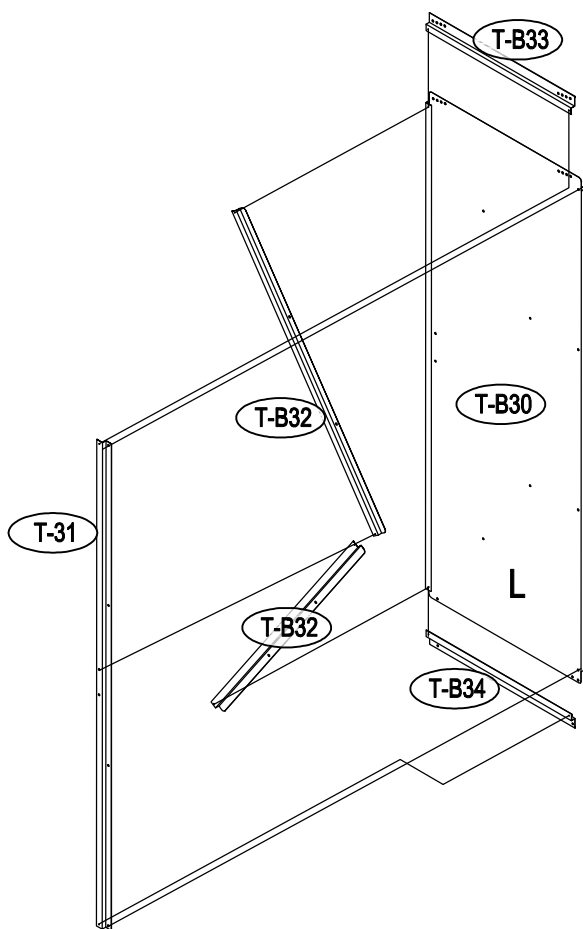

1

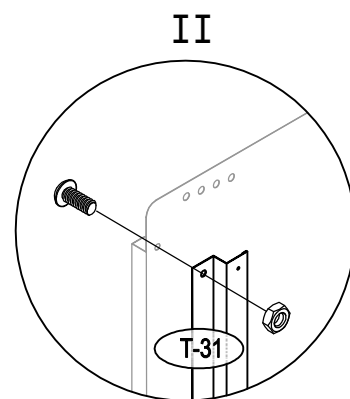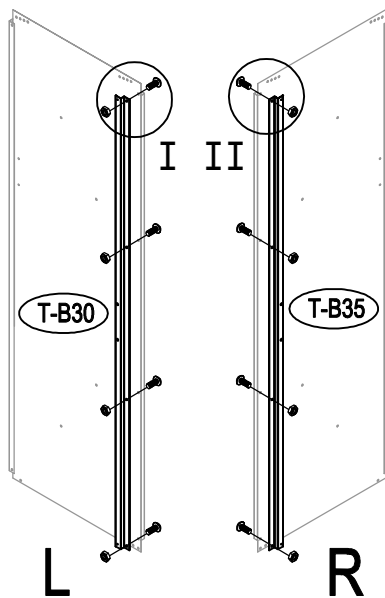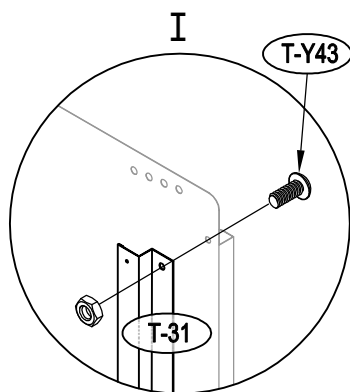

2

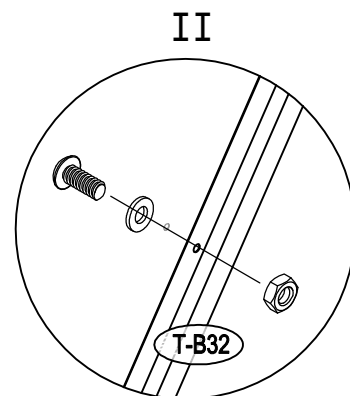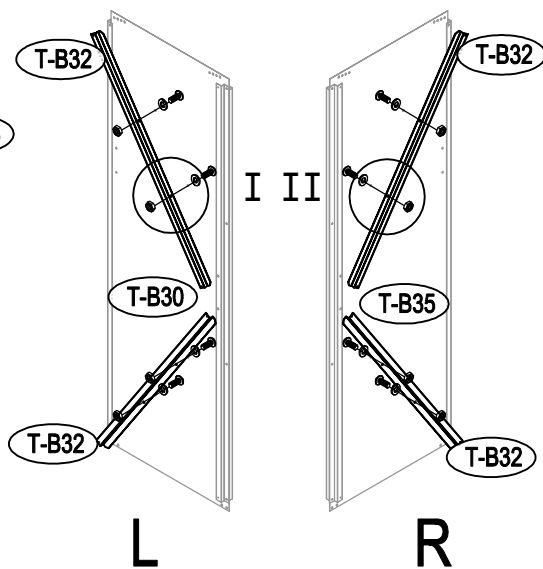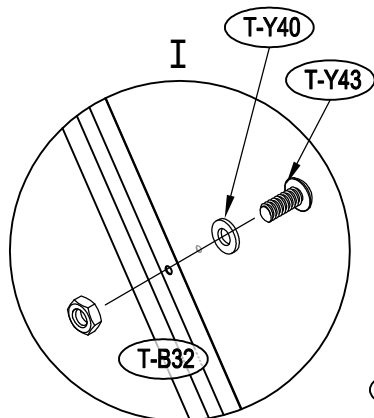

3

